

SUZUKI

SUZUKI

PARTS CATALOGUE

SUZUKI ASSEMBLERS MALAYSIA SDN. BHD. (10789-W)

1412, Plot No. 281, Prai Industrial Complex
13600 Prai, P.W., Malaysia
Tel: 04-397 7453, 04-399 0457
Fax: 04-397 7635

Spare Parts Department
Tel: 04-397 7091 Fax: 04-397 7831

Service Department
Tel: 04-397 7314 Fax: 04-397 7441

FV115 SHOOTER 115 FI



FV115

9900B-22J00-000

9900B-22J00-000



2014 - 05

1ST. EDITING

INFORMATION
ILLUSTRATION INDEX

1

ENGINE
TRANSMISSION

2

ELECTRICAL

3

BODY

4

PREFACE

When it becomes necessary to replace parts on SUZUKI MOTORCYCLES, always use SUZUKI GENUINE PARTS which have passed a strict inspection which guarantees quality and performance.

This parts catalogue covers the list of all service parts for SUZUKI FV115JBL4, FV115LBL4, FV115LEL4.

INSTRUCTIONS FOR QUOTING THE CATALOGUE

1. DIMENSIONS

Dimensions of the parts in this catalogue are indicated in unit millimeters.

2. ABBREVIATIONS

Abbreviations used in this catalogue are as follows:

AR	: As required	NT	: Number of teeth
ASSY	: Assembly	OPT	: Optional
E.NO.	: Engine number	OS	: Over size
F.NO.	: Frame number	STD	: Standard
D	: Diameter of material	T	: Thickness
ID	: Inside diameter	US	: Under size
OD	: Outside diameter	W	: Width
L	: Length		
LH	: Left hand side		
RH	: Right hand side		
~ 100045	: Up to F.NO.100045		
100046 ~	: From F.NO.100046		
12 x 34 x 5.6.....	Figures in the description column		
	show the dimensions of parts.		
ID OD T(or W,L)			

→ 12345-56781 (Parts No.) : indicates that the parts number was changed to 12345-56781 and the new parts are interchangeable with the former ones but the former ones are not interchangeable with new ones.

← 12345-56781 (Parts No.) : indicates that the former and new parts are interchangeable with each other and both are usable.

3. INNER PARTS OF ASSEMBLY

Part name with a dot (.) in front as shown in the description column indicates the component of the assembly also available individually.

4. MODIFICATION NOTICE

A parts bulletin will be sent to you on all occasions when changes in parts occur, including interchangeable modifications between new parts and old ones.

5. NOTE

- 5-1. There are some different parts from those of production models among spare parts for the administrative reasons and common use of them with other models.
- 5-2. In respect of rubber hoses and vinyl tubes, please be sure to use them by cutting off according to the length mentioned on parts catalogue or what is actually required on the vehicle.
- 5-3. Note that the drawings on the illustration page are for ready reference of spare parts number, not to be used as an assembly manual.
When assembling, use "SUZUKI SERVICE MANUAL".

6. SPECIFICATION CODE

This catalogue contains the parts for the model designed for the following spec.;
spec. code : P08.

7. SERIAL FRAME NUMBER

FV115JBL4 : PMSBF46N0EY A00001~
FV115LBL4 : PMSBF46P0EY A00001~
FV115LEL4 : PMSBF46V0EY A00001~

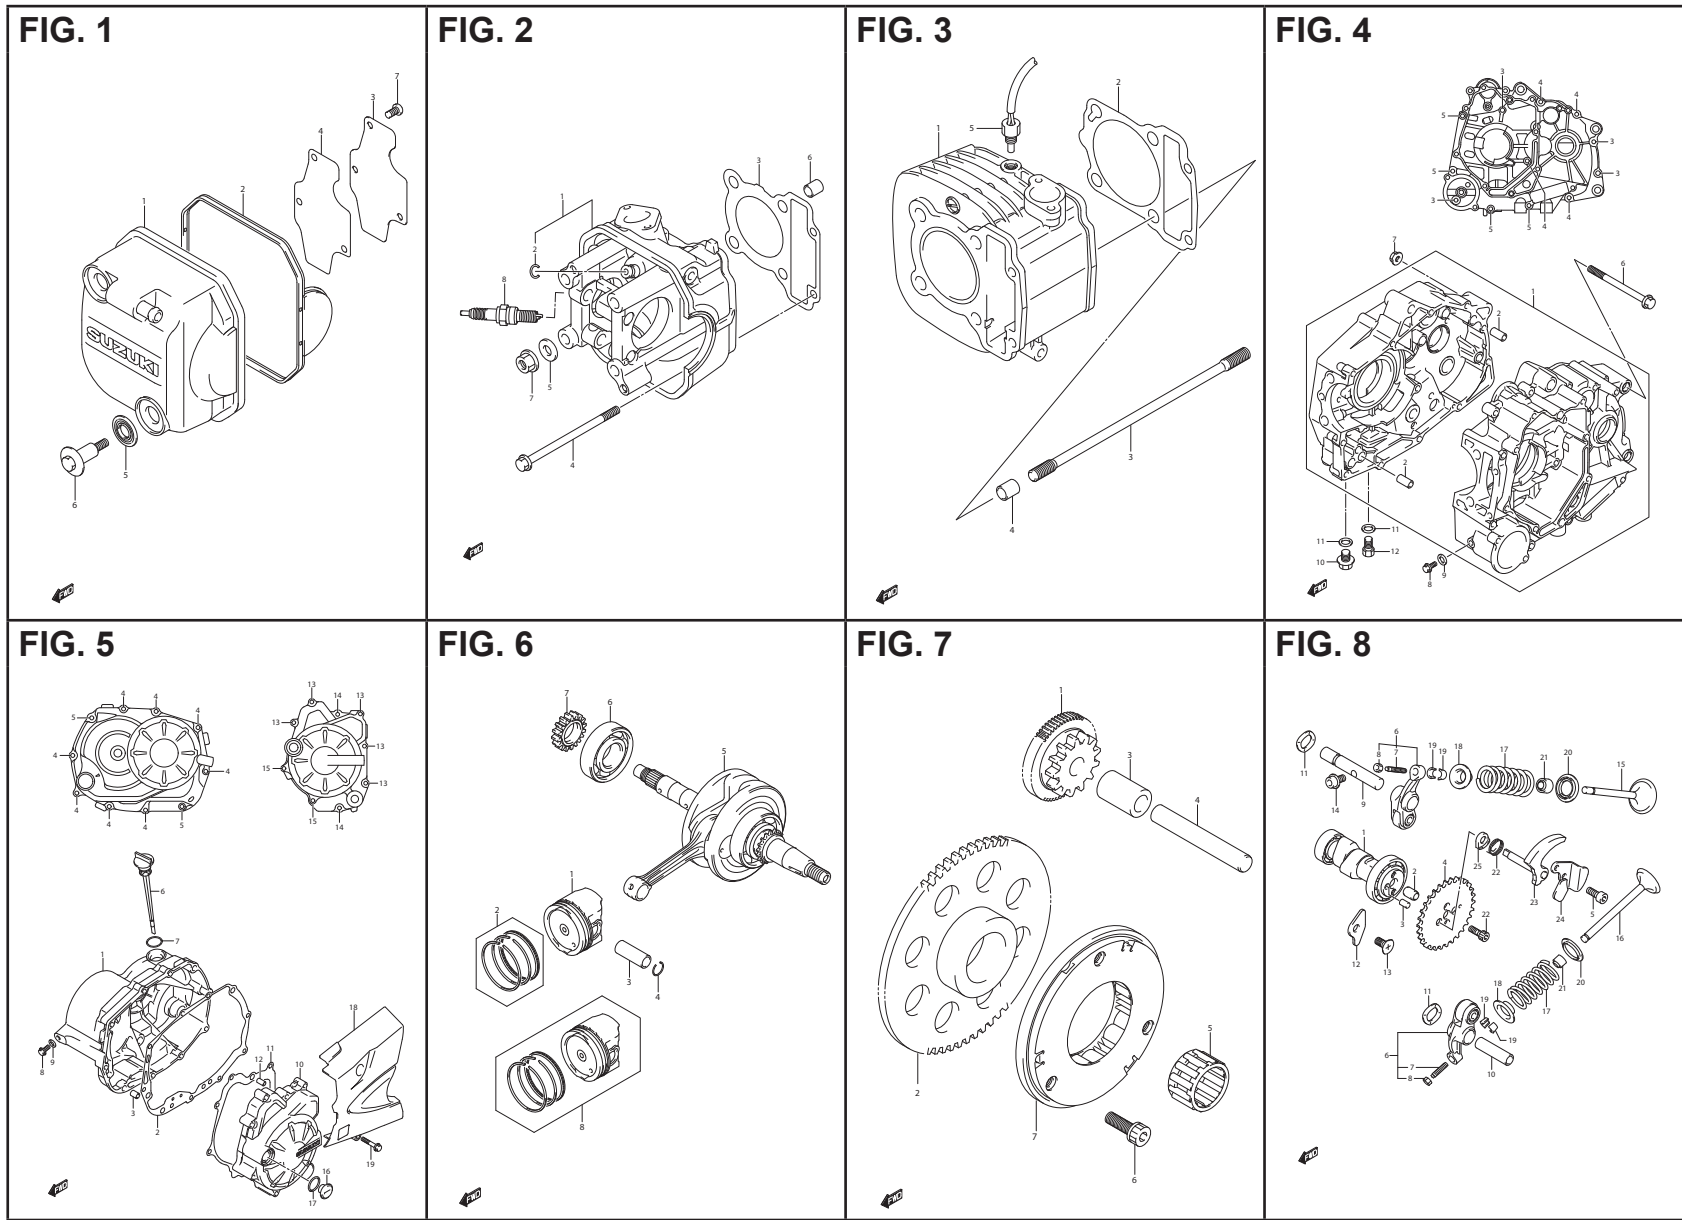


FIG. 9

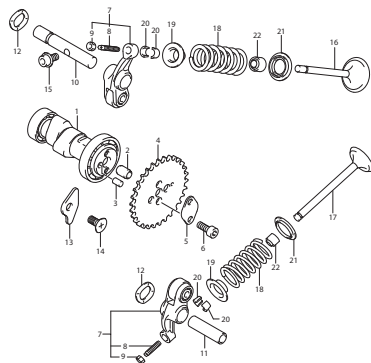


FIG. 10

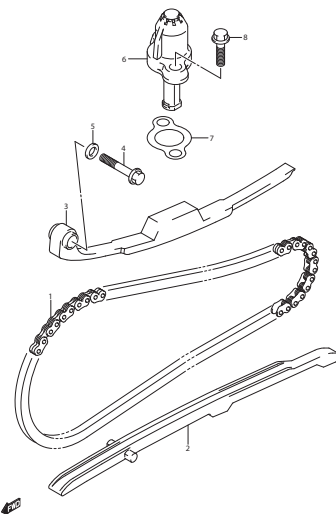


FIG. 11

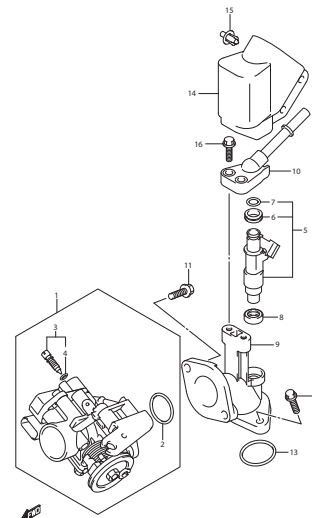


FIG. 12

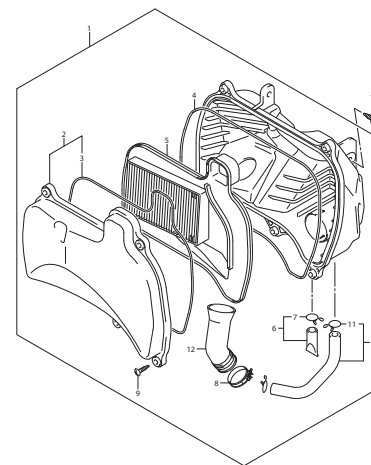


FIG. 13

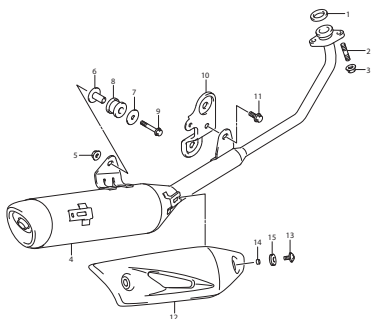


FIG. 14

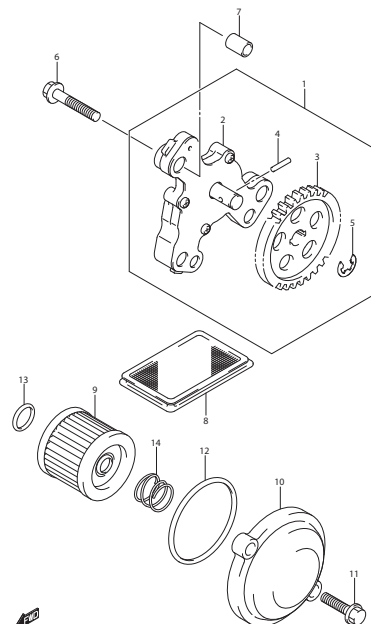


FIG. 15

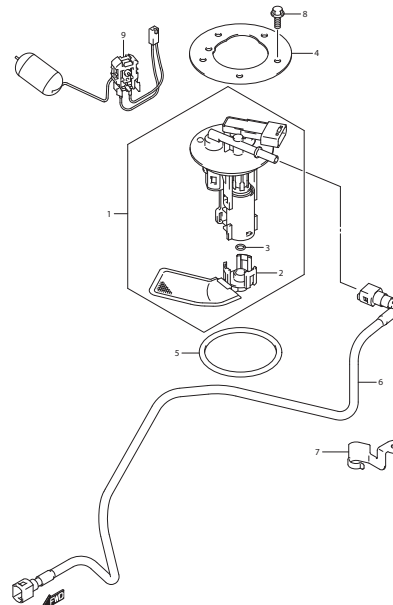
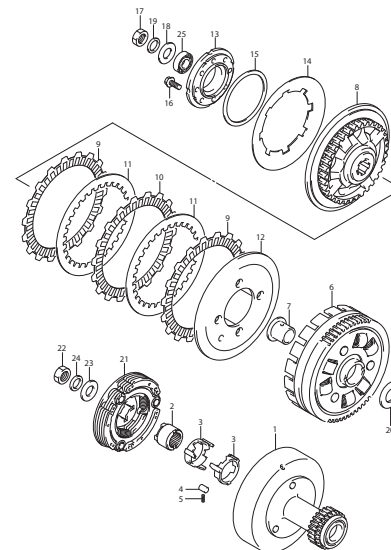


FIG. 16



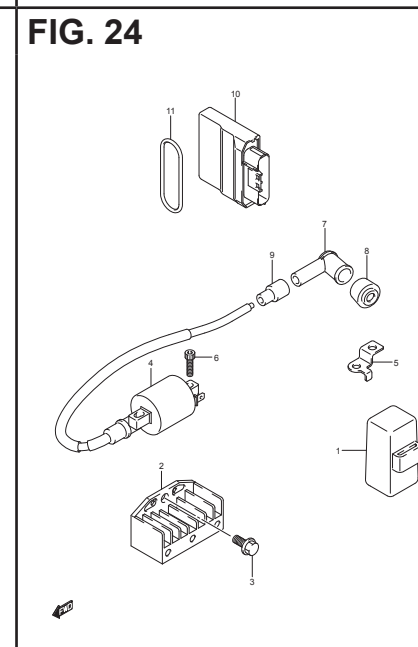
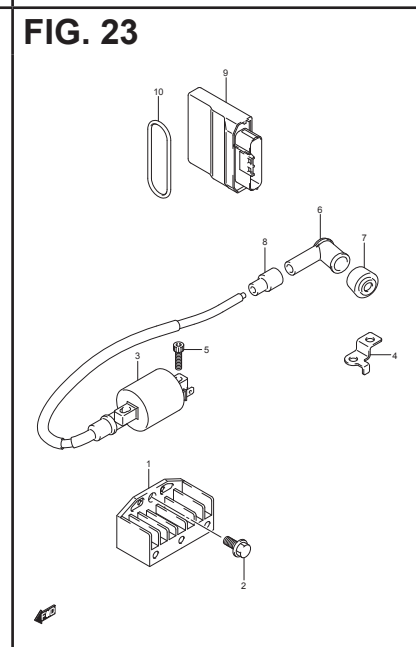
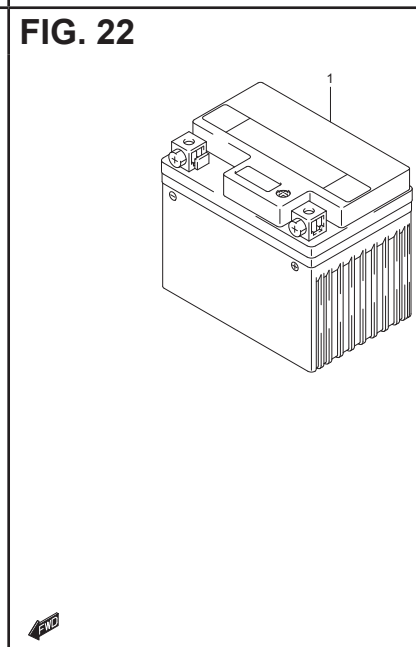
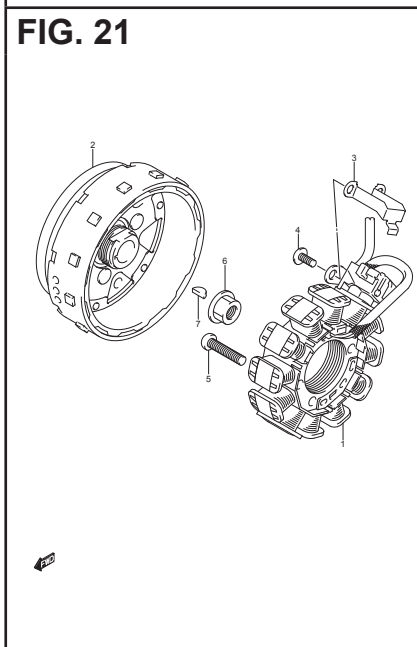
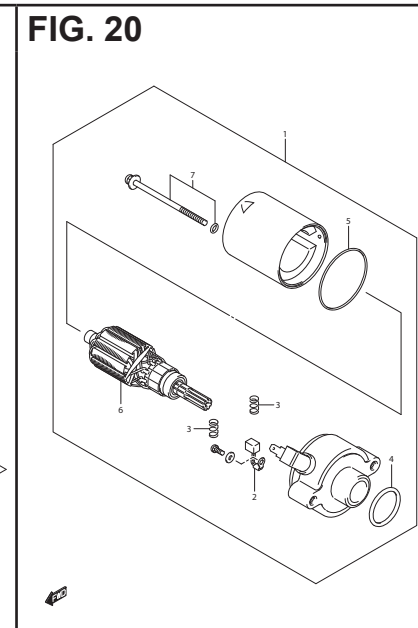
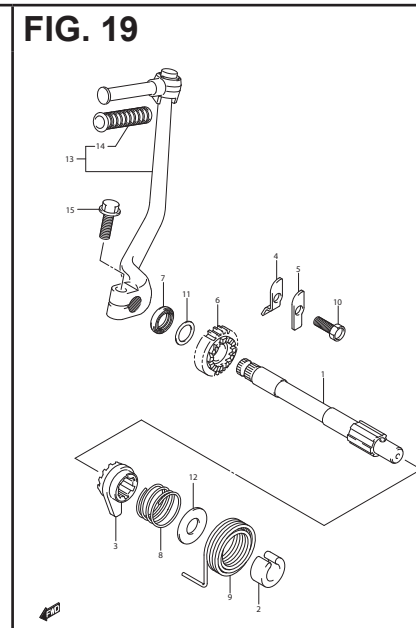
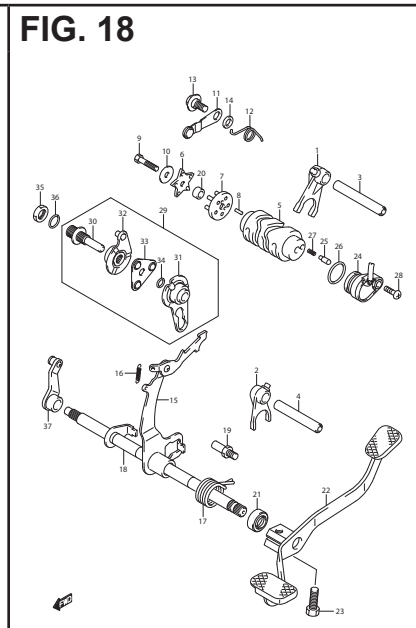
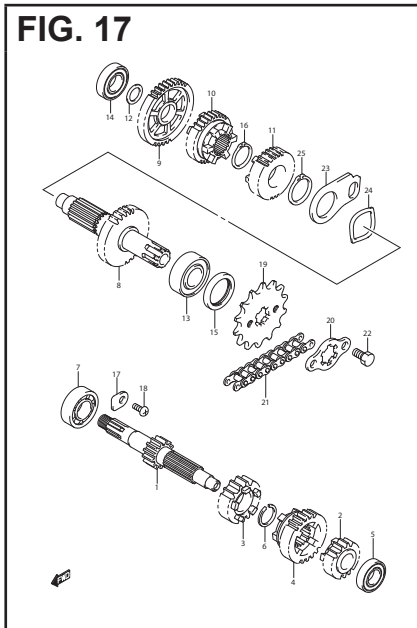


FIG. 25

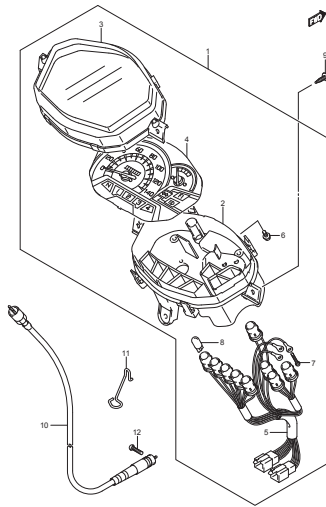


FIG. 26

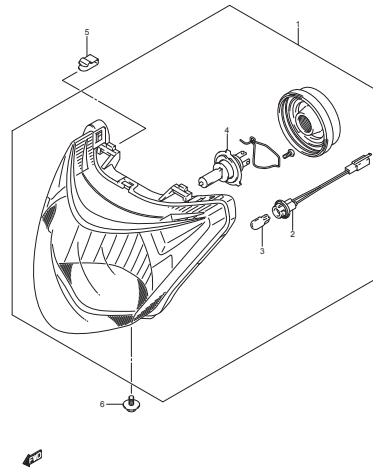


FIG. 27

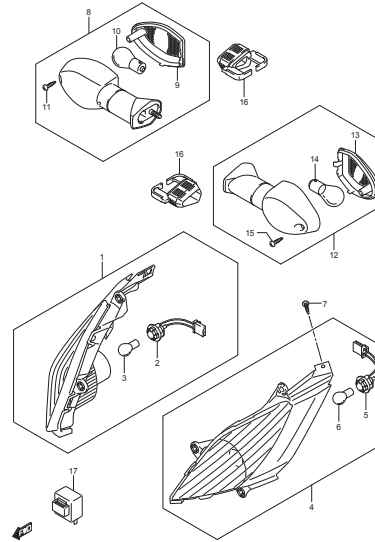


FIG. 28

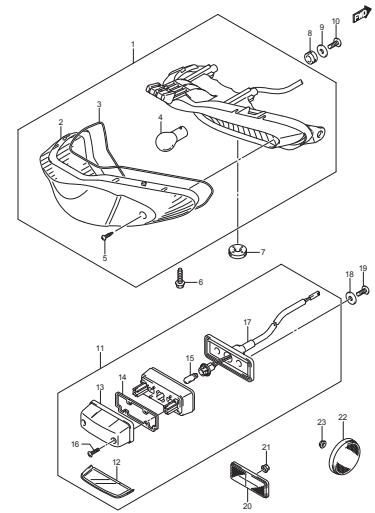


FIG. 29

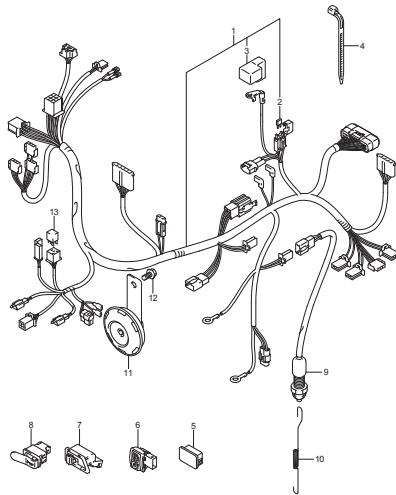


FIG. 30

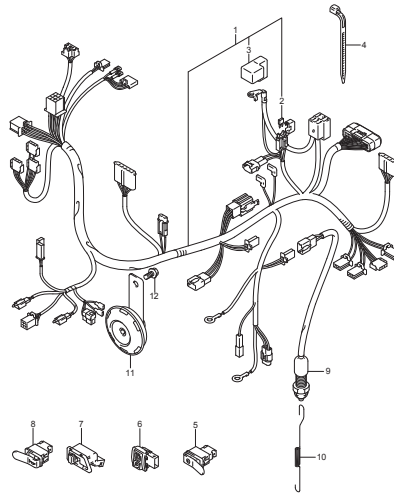


FIG. 31

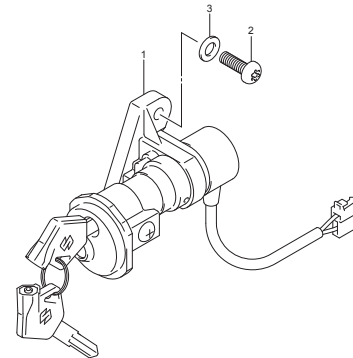


FIG. 32

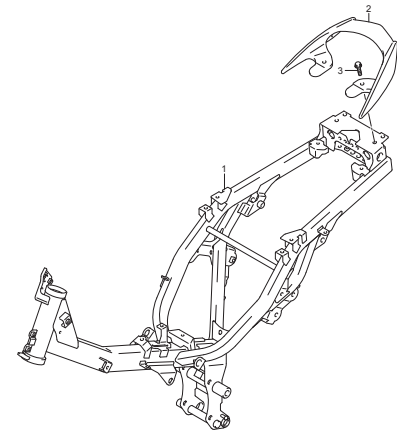


FIG. 33

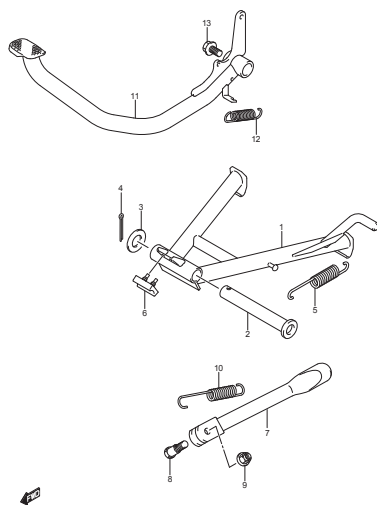


FIG. 34

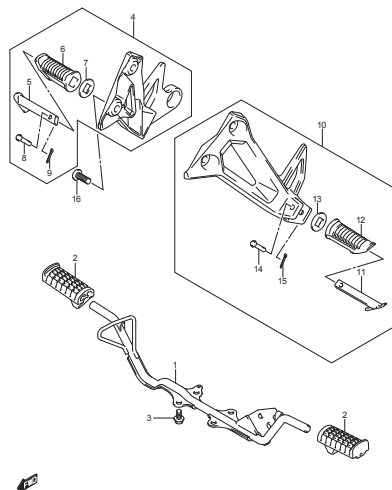


FIG. 35

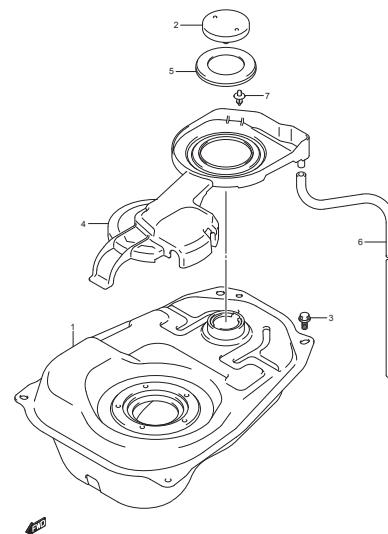


FIG. 36

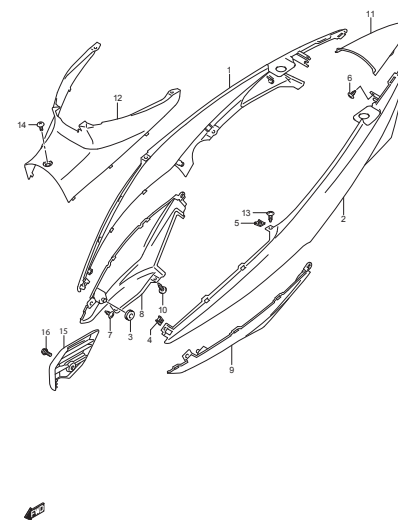


FIG. 37

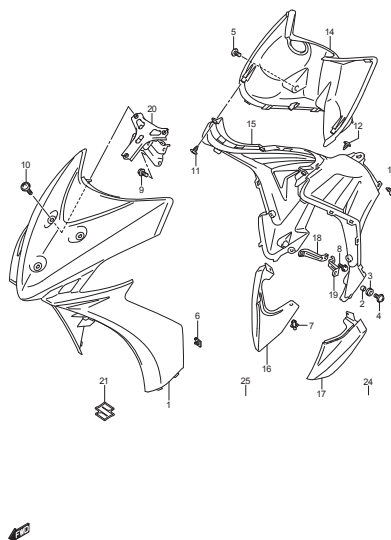


FIG. 38

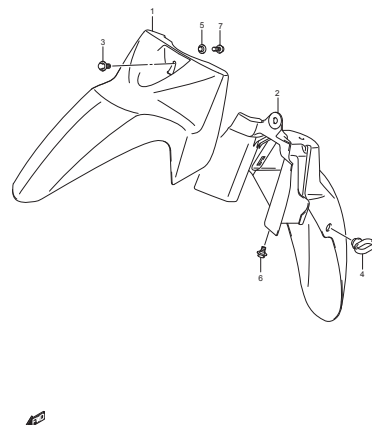


FIG. 39

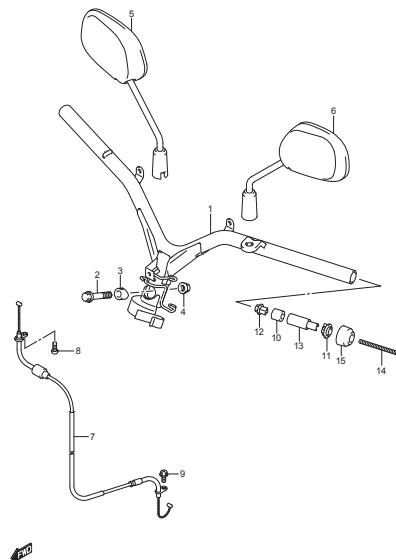


FIG. 40

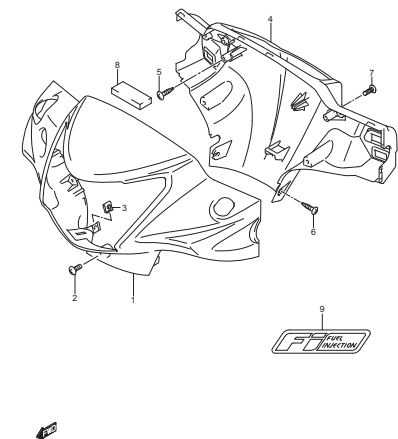


FIG. 41

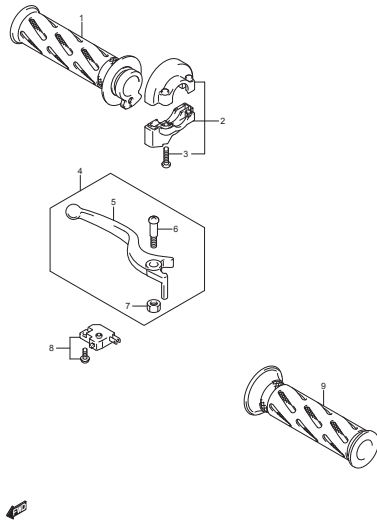


FIG. 42

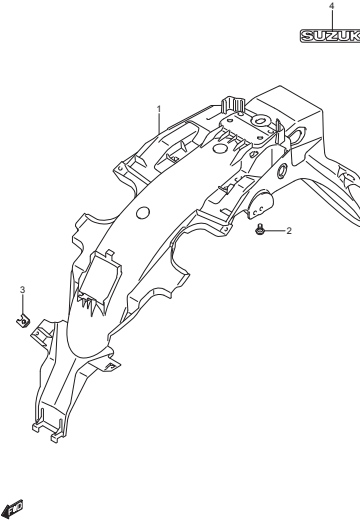


FIG. 43

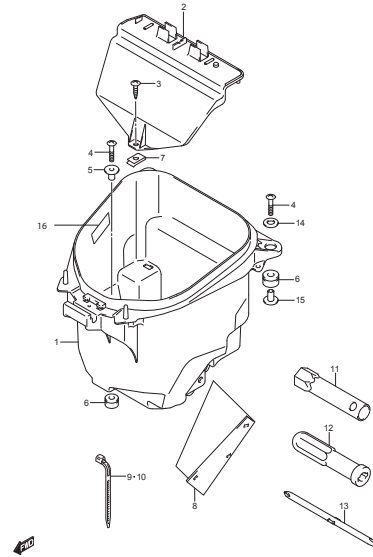


FIG. 44

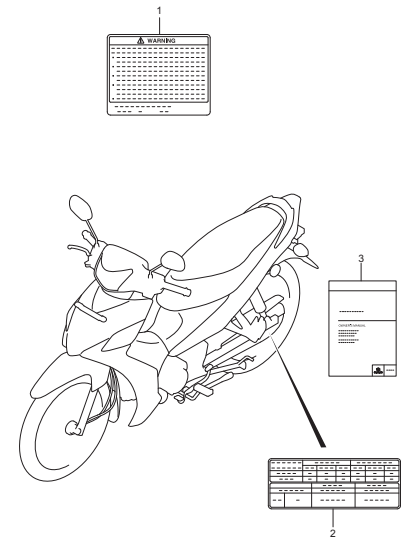


FIG. 45

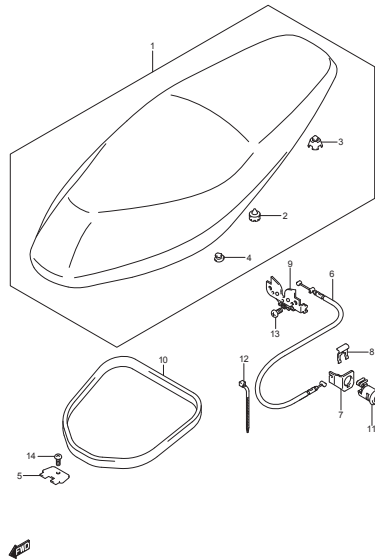


FIG. 46

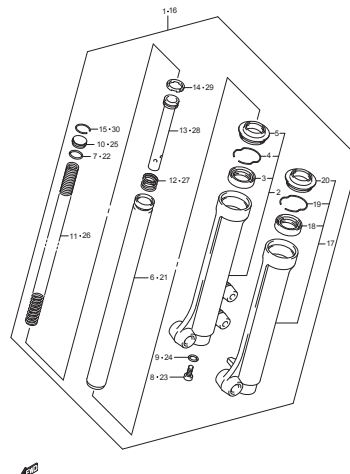


FIG. 47

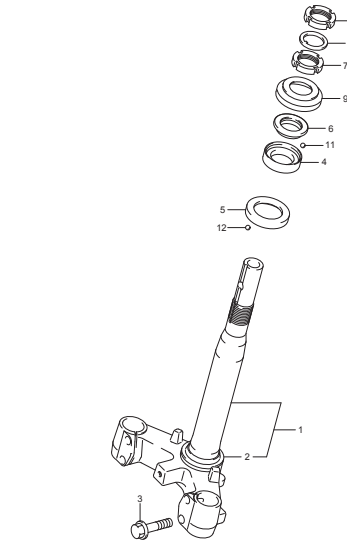


FIG. 48

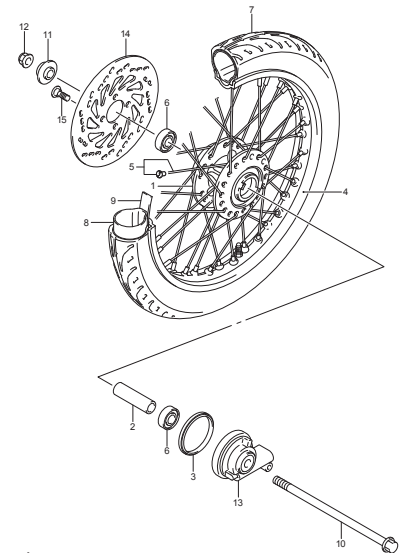


FIG. 49

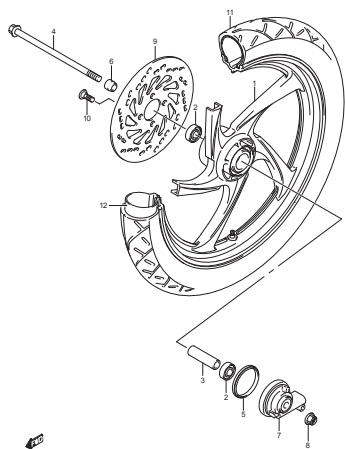


FIG. 50

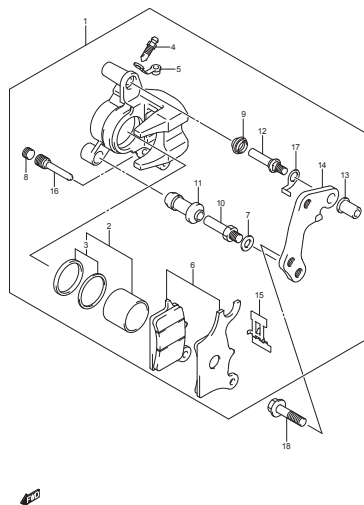


FIG. 51

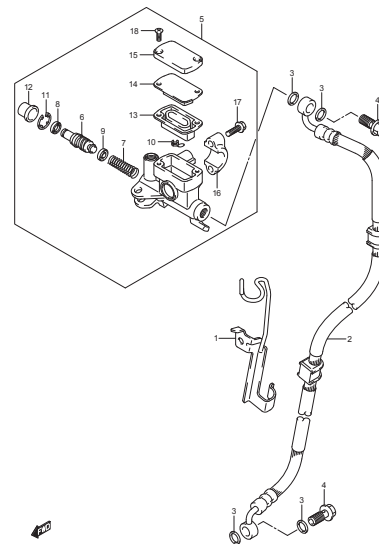


FIG. 52

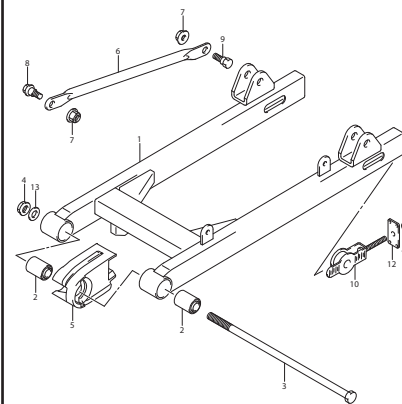


FIG. 53

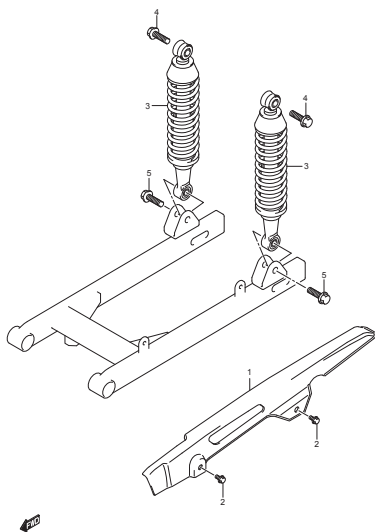


FIG. 54


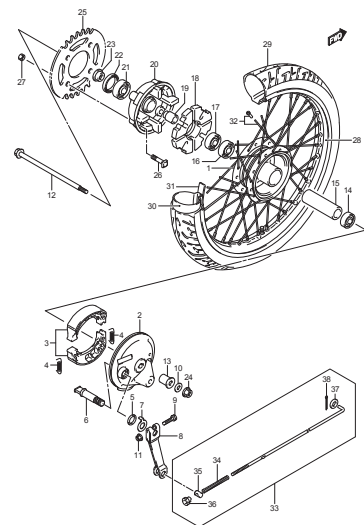


FIG. 55

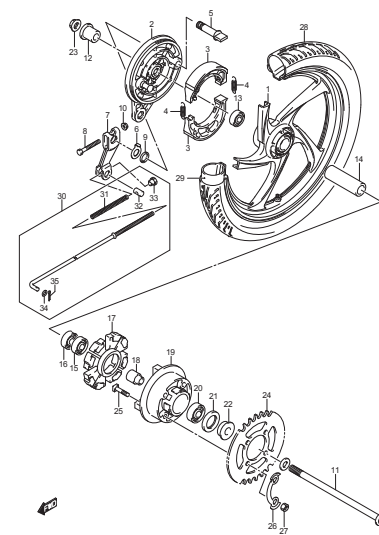

1

FIG. 1

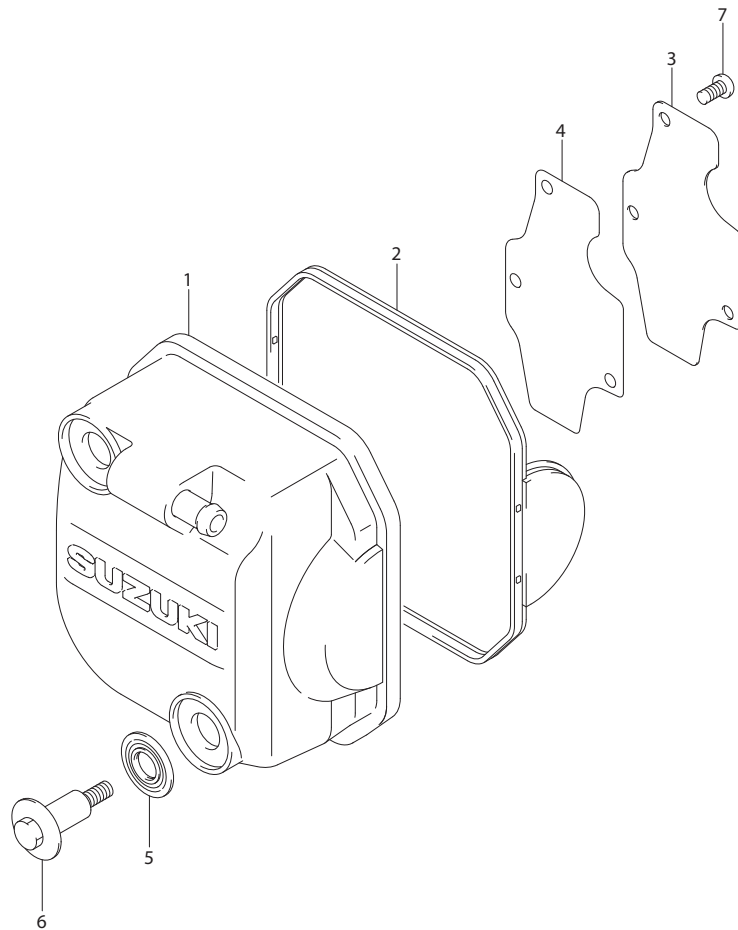


FIG. 1 CYLINDER HEAD COVER

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	11170B22J00N000	COVER, CYLINDER HEAD	1	
2	11173B22J00N000	GASKET, CYLINDER HEAD COVER	1	
3	11176B22J00N000	PLATE, BREATHER	1	
4	11177B22J00N000	GASKET, BREATHER PLATE	1	
5	11191B27E70N000	WASHER, HEAD COVER BOLT	2	
6	09119B06120N000	BOLT (L:21.7)	2	
7	02112B0510AN000	SCREW THROTTLE CABLE	3	

FIG. 2

2

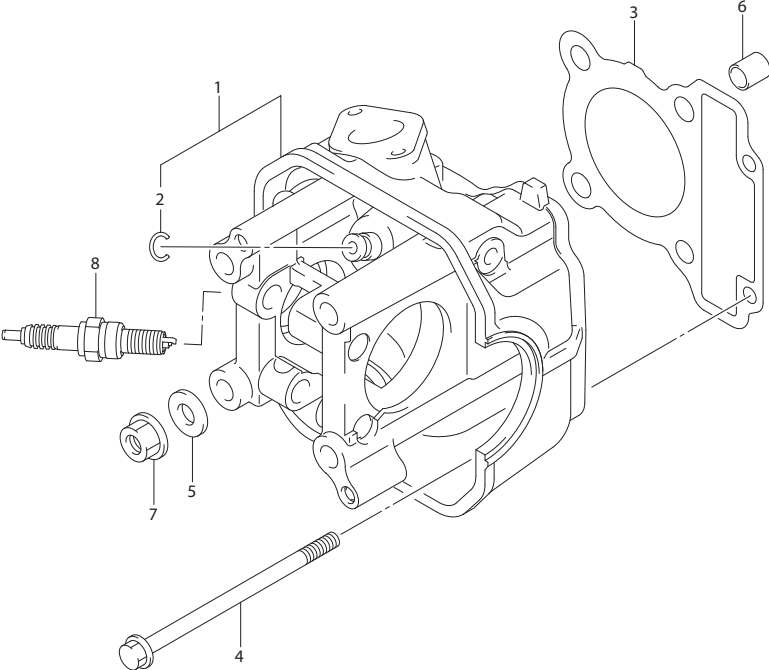


FIG. 2 CYLINDER HEAD

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	11110B22J00N000	HEAD, CYLINDER	1	
2	09381B10004N000	RING,VALVE GUIDE SNAP	2	
3	11141B22J00N000	GASKET, CYLINDER HEAD	1	
4	09103-06501-000	BOLT (6X100)	2	
5	09160B08164N000	WASHER,CYLINDER HEAD	4	
6	09206B10016N000	PIN (8.2X10X13)	2	
7	08316B1008AN000	NUT	4	
8	09482B00627N000	SPARK PLUG (U22EPR9)	1	

FIG. 3

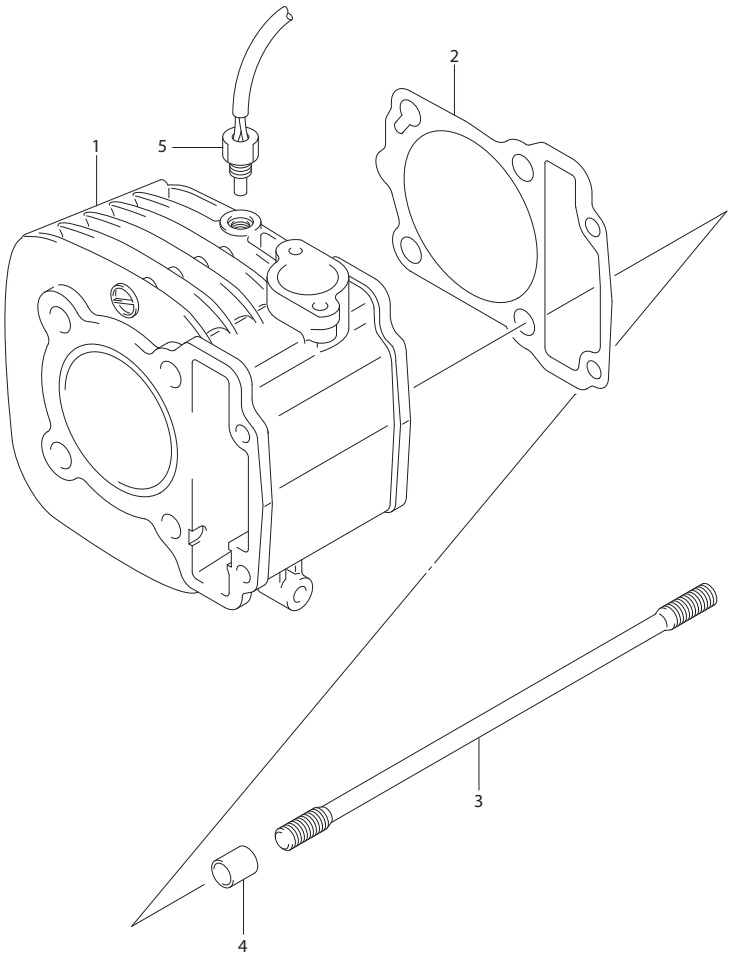


FIG. 3 CYLINDER

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	11210B22J00N0F0	CYLINDER	1	
2	11241B22J00N000	GASKET, CYLINDER	1	
3	09108-08272-000	STUD BOLT	4	
4	09206B10016N000	PIN (8.2X10X13)	2	
5	13640B32G20N000	SENSOR, ENGINE TEMP	1	

2

FIG. 4

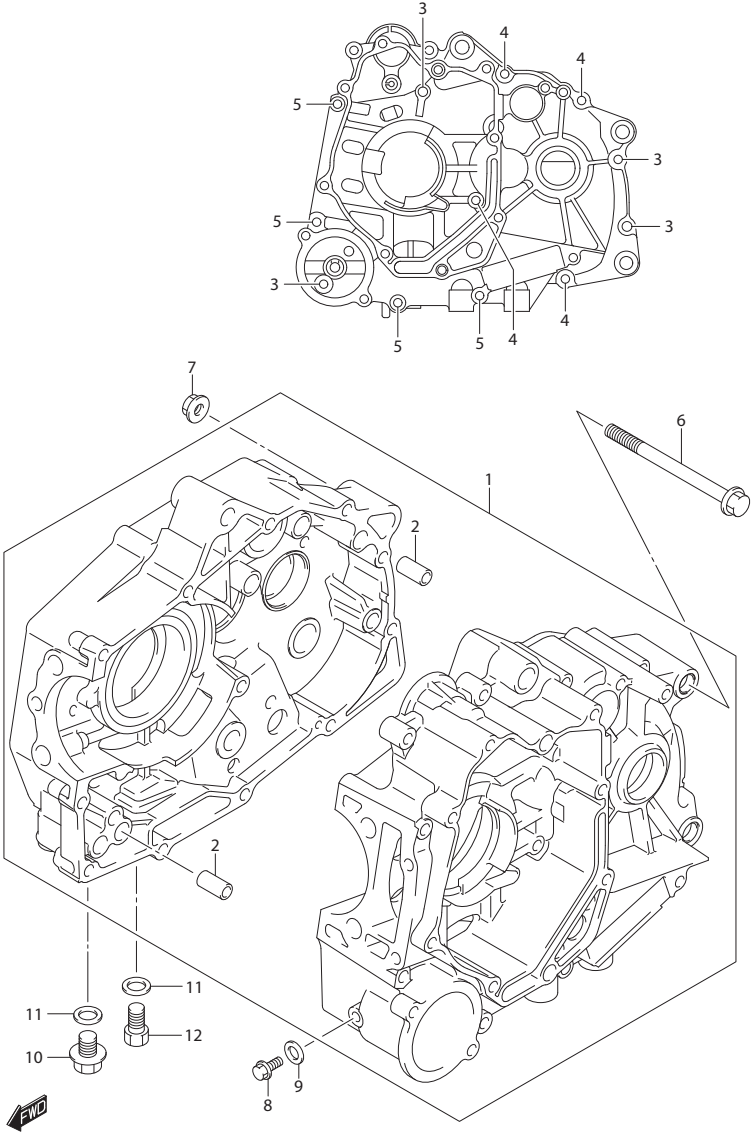


FIG. 4 CRANKCASE

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1.1	11300B22J00N000	CRANKCASE ASSY	1	FV115LB/LE
1.2	11300B22J10N000	CRANKCASE ASSY	1	FV115JB
2	09206B10014N000	.PIN (6.4X10X20)	2	
3	01547B0645AN000	.PIN (6.4X10X20)	2	
4	01547-0655A-000	.BOLT	4	
5	01547-0675A-000	.BOLT	4	
6	09103-10110-000	BOLT (10X100)	3	
7	08319-3110A-000	NUT	3	
8	01547-0612A-000	BOLT	1	
9	09168B06018N000	GASKET (6.2X13X1.2)	1	
10	09247-10015-000	PLUG (10X12)	1	
11	09168B10L02N000	GASKET	2	
12	01500-1020A-000	PLUG, OIL DRAIN	2	

FIG. 5

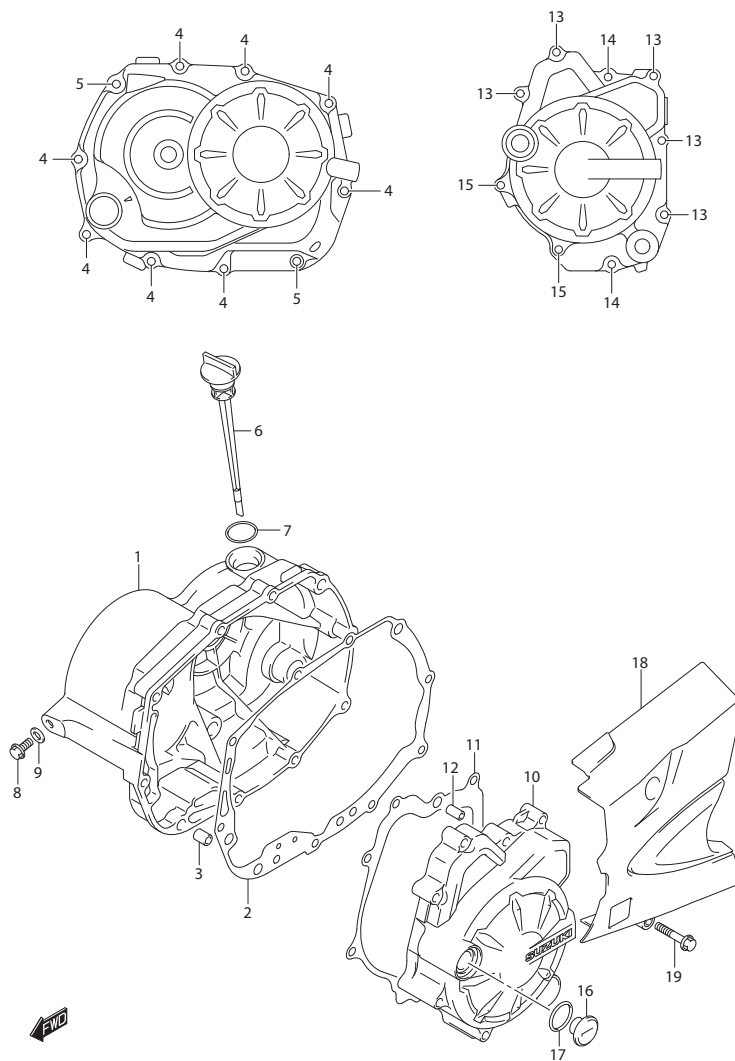


FIG. 5 CRANKCASE

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	11341B22J00N000	COVER, CLUTCH	1	
2	11482B22J00N000	GASKET, CLUTCH COVER (NA)	1	
3	09206-08008-000	PIN (6.3X8X12)	2	
4	01547-0630A-000	BOLT	8	
5	01547-0640A-000	BOLT	2	
6	11971B22J00N000	GAUGE, OIL LEVEL	1	
7	09280-17003-000	O RING (D:3.1,ID:16.8)	1	
8	01547-0612A-000	BOLT	1	
9	09168B06018N000	GASKET (6.2X13X1.2)	1	
10	11351B22J00N000	COVER, MAGNETO	1	
11	11483B22J00N000	GASKET, MAGNETO COVER (NA)	1	
12	04211-09129-000	PIN	2	
13	01547-0630A-000	BOLT	5	
14	01547-0640A-000	BOLT	2	
15	01547-0650A-000	BOLT	2	
16	11352B22J00N000	PLUG, TOP	1	
17	09280B14011N000	O RING (D:2.5,ID:13.8)	1	
18	11360B22J00N000	COVER, ENGINE SPROCKET	1	
19	01547-0630A-000	BOLT	2	

FIG. 6

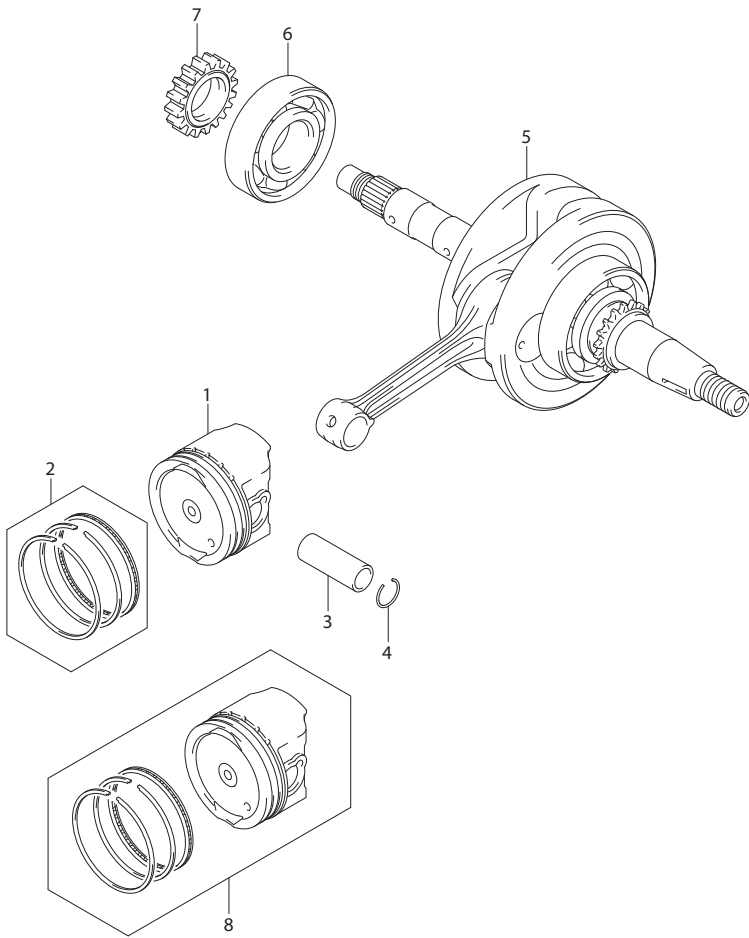


FIG. 6 CRANKSHAFT

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1.1	12111B22J00N050	PISTON	1	OPT
1.2	12111B22J00N0F0	PISTON	1	OPT
2-1	12140B22J00N050	RING SET, PISTON 0.5	1	
2-2	12140B22J00N000	RING SET, PISTON STD	1	
3	12151B09J00N000	PIN, PISTON	1	
4	09381B13001N000	SNAP RING	2	
5.1	12200B22J00N000	CRANKSHAFT ASSY	1	FV115JB
5.2	12200B22J10N000	CRANKSHAFT ASSY	1	FV115LB / LE
6	09262B22L01N000	BEARING	1	
7	16321-22J00-000	GEAR, OIL PUMP DRIVE (NT:18)	1	
8.1	12100B22J00N050	PISTON SET (OS:0.5)	1	OPT
8.2	12100B22J00N0F0	PISTON SET	1	

FIG. 7

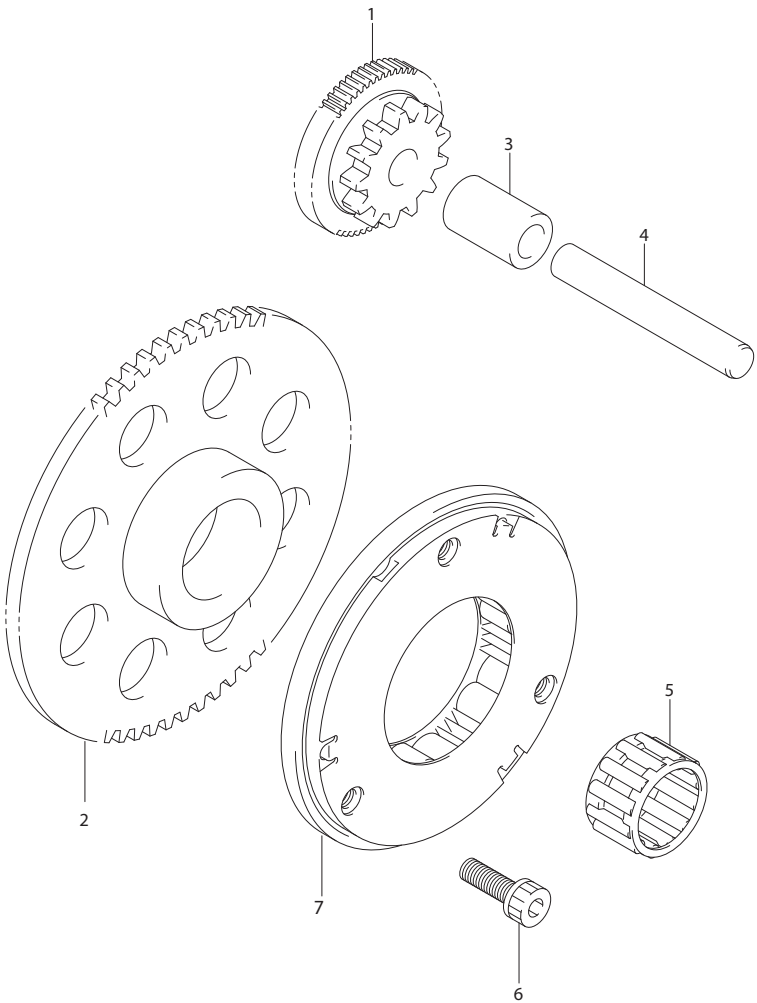


FIG. 7 STARTER CLUTCH (FV115LB / LE)

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	12611B22J00N000	GEAR, STARTER IDLE (NT:13/57)	1	
2	12620B22J10N000	GEAR, STARTER CLUTCH (NT:55)	1	
3	09180B09025N000	SPACER	1	
4	09202B09007N000	PIN	1	
5	09263B20108N000	BEARING	1	
6	07130B0616AN000	BOLT	3	
7	12614B22J00N000	CLUTCH STARTER ONEWAY	1	

FIG. 8

2

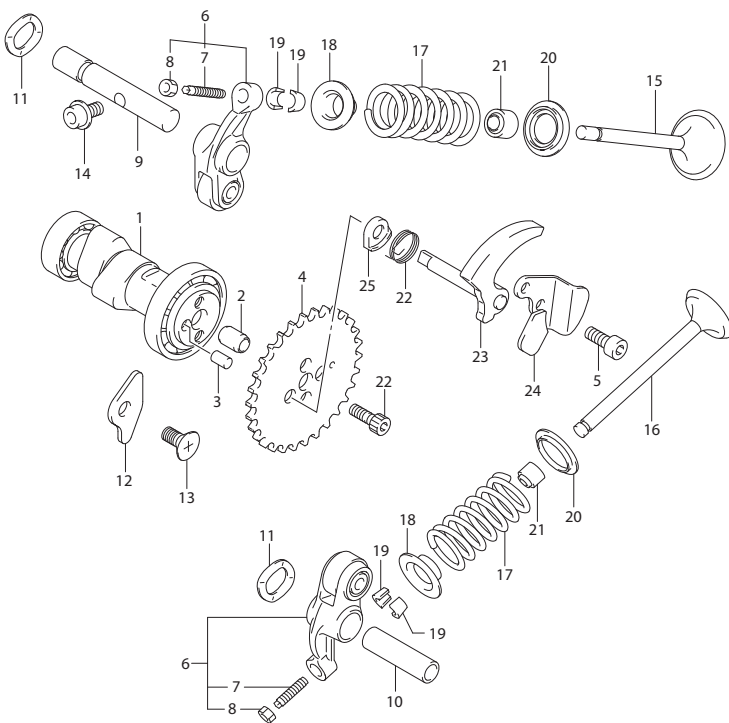


FIG. 8 CAMSHAFT / VALVE (FV115JB)

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	12710B22J10N000	CAM SHAFT	1	FV115JB
2	09206-08008-000	PIN (6.3X8X12)	1	
3	09261-05005-000	PIN (5X8)	1	
4	12741B22J00N000	SPROCKET, CAM SHAFT (NT:34)	1	
5	09106-05028-000	BOLT (5X15)	2	
6	12840B09J00N000	ARM ASSY, VALVE ROCKER	2	
7	12842B09J00N000	.SCREW, TAPPET ADJUSTING	2	
8	12843-27A00-000	.NUT, TAPPET ADJUSTING	2	
9	12861B22J00N000	SHAFT, ROCKER ARM INTAKE	1	
10	12871B22J00N000	SHAFT, ROCKER ARM EXHAUST	1	
11	09164-10012-000	WASHER	2	
12	12862B22J00N000	RETAINER, CAMSHAFT	1	
13	02112-0612A-000	SCREW	1	
14	07120B0510AN000	BOLT	1	
15	12911B22J00N000	VALVE, INTAKE	1	
16	12912B22J00N000	VALVE, EXHAUST	1	
17	12921B09J00N000	SPRING, VALVE	2	
18	12931-09G00-000	RETAINER, VALVE SPRING	2	
19	12932-09G00-000	COTTER, VALVE	4	
20	12933-09G00-000	SEAT, VALVE SPRING	2	
21	09289-05L01-000	SEAL (4.4X10.5X8.4)	2	
22	12725-20G00-000	SPRING, DECOMP CAM	1	
23	12950B09J00N000	CAM COMP, DECOMPRESSION	1	
24	12954-09G10-000	STOPPER, DECOMP CAM	1	
25	12955-33G00-000	WASHER, DECOMP SHAFT	1	

FIG. 9

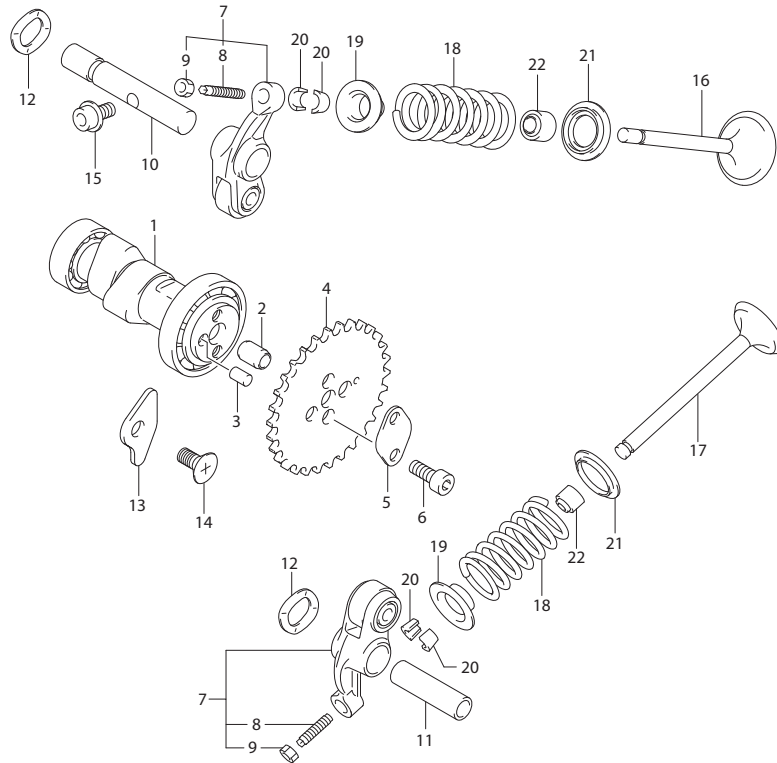


FIG. 9 CAMSHAFT / VALVE (FV115LB/LE)

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	12710B22J00N000	CAM SHAFT	1	FV115LB /LE
2	09206-08008-000	PIN (6.3X8X12)	1	
3	09261-05005-000	PIN (5X8)	1	
4	12741B22J00N000	SPROCKET, CAM SHAFT (NT:34)	1	
5	12714B08H00N000	WASHER, SPROCKET	1	FV115LB /LE
6	09106-05028-000	BOLT (5X15)	2	
7	12840B09J00N000	ARM ASSY, VALVE ROCKER	2	
8	12842B09J00N000	.SCREW, TAPPET ADJUSTING	2	
9	12843-27A00-000	.NUT, TAPPET ADJUSTING	2	
10	12861B22J00N000	SHAFT, ROCKER ARM INTAKE	1	
11	12871B22J00N000	SHAFT, ROCKER ARM EXHAUST	1	
12	09164-10012-000	WASHER	2	
13	12862B22J00N000	RETAINER, CAMSHAFT	1	
14	02112-0612A-000	SCREW	1	
15	07120B0510AN000	BOLT	1	
16	12911B22J00N000	VALVE, INTAKE	1	
17	12912B22J00N000	VALVE, EXHAUST	1	
18	12921B09J00N000	SPRING, VALVE	2	
19	12931-09G00-000	RETAINER, VALVE SPRING	2	
20	12932-09G00-000	COTTER, VALVE	4	
21	12933-09G00-000	SEAT, VALVE SPRING	2	
22	09289-05L01-000	SEAL (4.4X10.5X8.4)	2	

2

FIG. 10

2

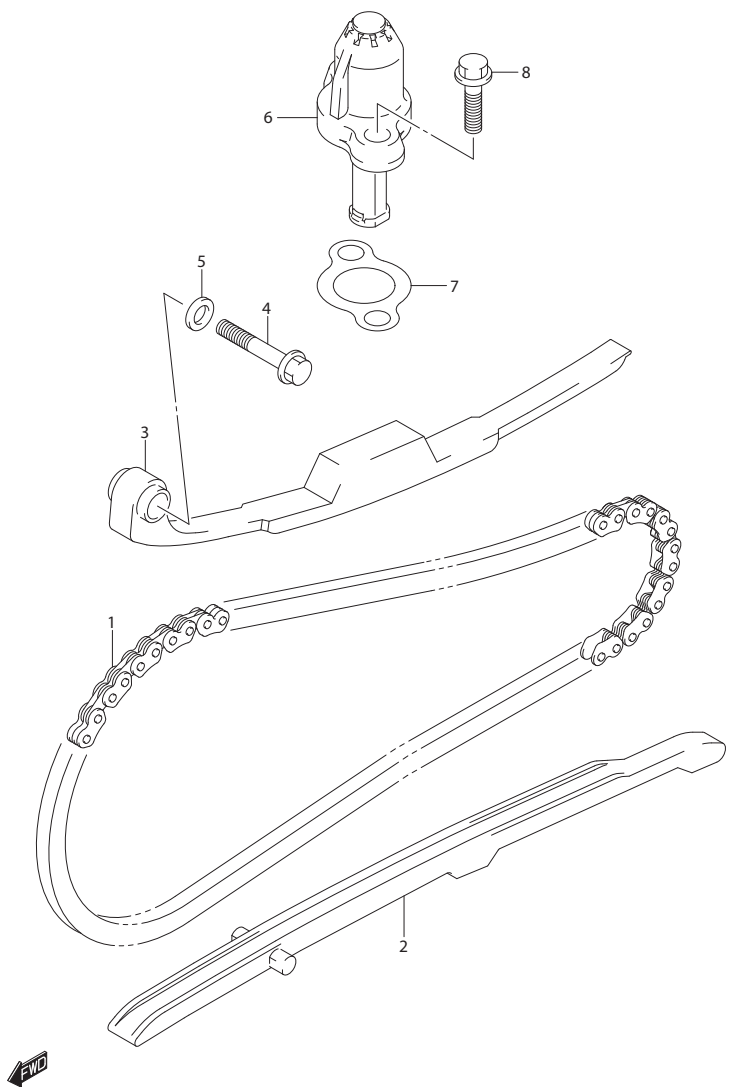


FIG. 10 CAM CHAIN

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	12760B22J00N000	CHAIN, CAM SHAFT DRIVE	1	
2	12771B22J00N000	GUIDE, CAM CHAIN	1	
3	12811B22J00N000	TENSIONER, CAM CHAIN	1	
4	09103-06247-000	BOLT (6X32)	1	
5	09168-06004-000	GASKET (6.2X11X1.2)	1	
6	12830B32G02N000	ADJUSTER ASSY, TENSIONER	1	
7	12837B22J00N000	GASKET, TENSIONER	1	
8	01547-0620A-000	BOLT	2	

FIG. 11

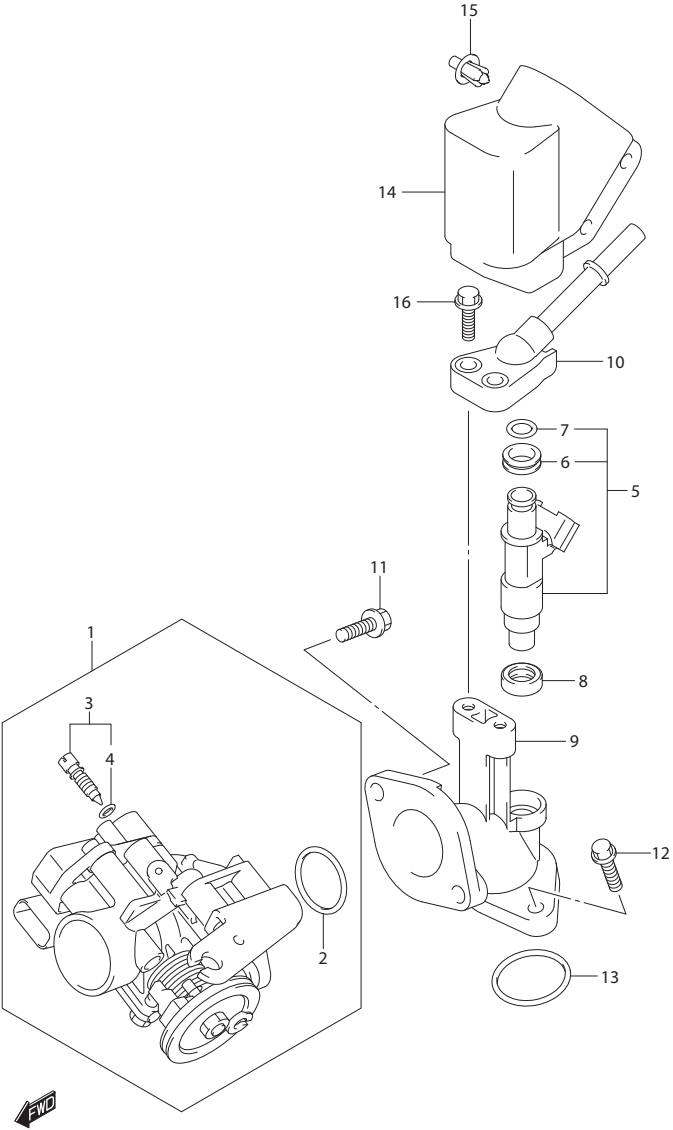


FIG. 11 THROTTLE BODY

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	13400B22J00N000	BODY ASSY, THROTTLE	1	
2	13295-16HA0-000	.O RING	1	
3	13662B22J00N000	.ADJSUTER, BAS	1	
4	13453-36F00-000	.O RING	1	
5	15710B22J00N000	INJECTOR ASSY, FUEL	1	
6	15720B09300N000	.GROMMET	1	
7	15710B09300N000	.O RING	1	
8	15715B16HC0N000	INSULATOR, FUEL INJECTOR	1	
9	13111B22J00N000	PIPE, INTAKE	1	
10	15830-22J00-000	JOINT, FUEL HOSE	1	
11	01547-0620A-000	BOLT	2	
12	01547-0620A-000	BOLT	2	
13	09280B26011N000	O RING (D:2.4,ID:25.7)	1	
14	15719B22J00N000	COVER, FUEL INJECTOR	1	
15	09409-06329-000	CLIP	2	
16	01547-0625A-000	BOLT	2	

FIG. 12

2

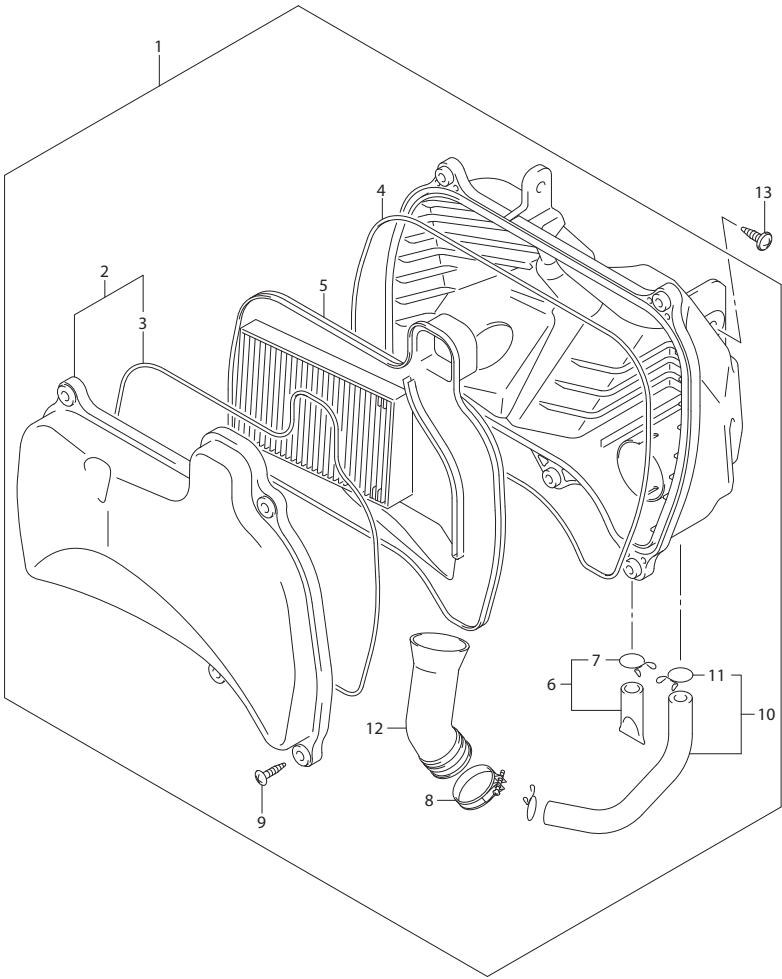


FIG. 12 AIR CLEANER

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	13700-22J00-000	CLEANER ASSY, AIR	1	
2	13740-22J00-000	.CAP	1	
3	13746-22J00-000	..GASKET, AIR CLEANER CAP	1	
4	13756-22J00-000	.GASKET	1	
5	13780-22J00-000	.FILTER, AIR CLEANER	1	
6	13870B10J00N000	.PLUG, DRAIN	1	
7	09401-11101-000	..CLIP	1	
8	13826-22J00-000	.CLAMP	1	
9	03541-0520A-000	.SCREW	5	
10	13850-22J00-000	.TUBE, BREATHER	1	
11	09401-14101-000	..CLIP	2	
12	13881-22J00-000	.TUBE, OUTLET	1	
13	02142-06167-000	SCREW (6X16)	2	

FIG. 13

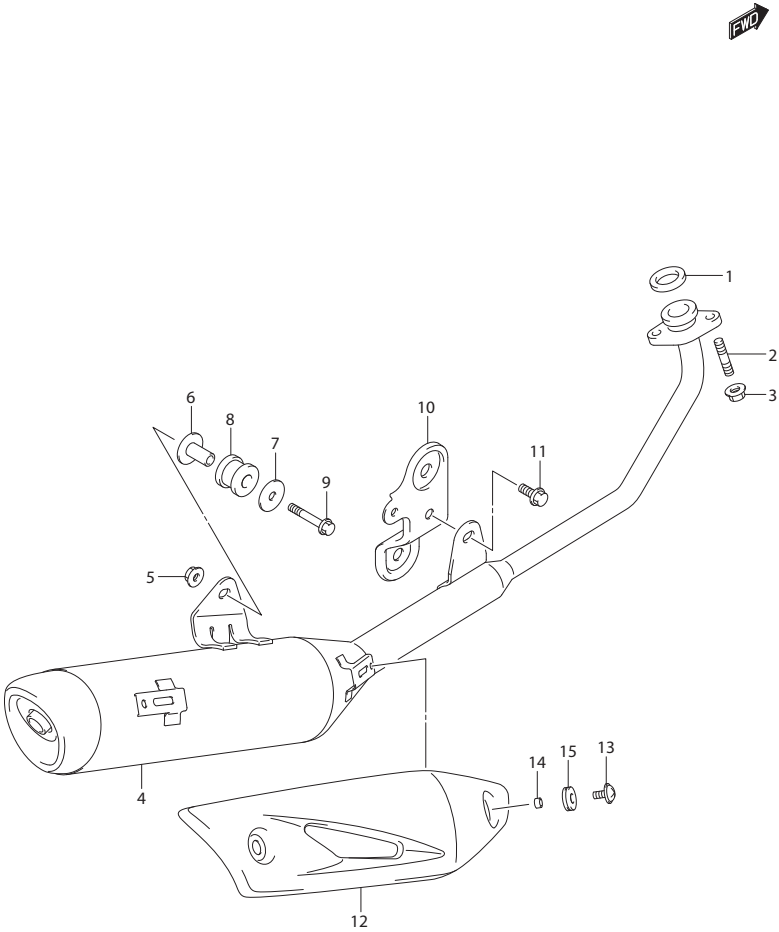


FIG. 13 MUFFLER

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	14181-30A20-000	GASKET, EXHAUST PIPE	1	
2	09108-08280-000	STUD BOLT	2	
3	08316B1008AN000	NUT	2	
4	14310B22J00N000	MUFFLER ASSY	1	
5	08316B1008AN000	NUT	1	
6	09180-08221-000	SPACER (8.6X12X25.3)	1	
7	09160-08149-000	WASHER (8.5X30X1.6)	1	
8	09320B12L06N000	CUSHION	1	
9	01550-0840A-000	BOLT	1	
10	14410-22J20-000	BRACKET, MUF SPRT	1	
11	01550-0816B-000	BOLT	1	
12	14781-22J10-000	COVER, MUFFLER	1	
13	51875-07H00-000	SCREW, MUFFLER COVER	2	
14	09180-06343-000	SPACER	2	
15	09320B08082N000	CUSHION	2	

FIG. 14

2

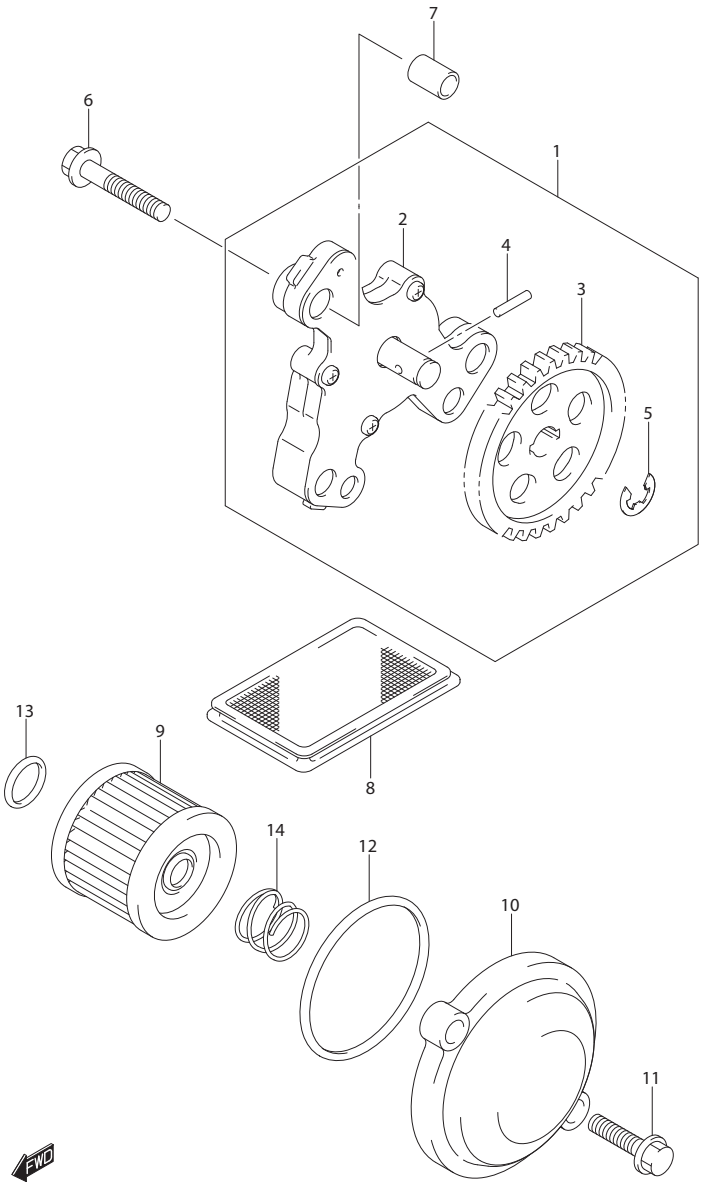


FIG. 14 OIL PUMP

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	16000B22J00N000	PUMP SET, ENGINE OIL	1	
2	16400B22J00N000	.PUMP ASSY, ENGINE OIL	1	
3	16331-22J00-000	.GEAR, OIL PUMP DRIVEN (NT:29)	1	
4	09261B02008N000	.PIN (2.5X11.8)	1	
5	08332B1106AN000	.E RING	1	
6	01547-0630A-000	BOLT	3	
7	09206-08008-000	PIN (6.3X8X12)	2	
8	16520C09402W000	STRAINER, ENGINE OIL	1	
9	16510B45H10N000	FILTER, ENGINE OIL	1	
10	16512B22J00N000	CAP, OIL FILTER	1	
11	01547-0620A-000	BOLT	2	
12	09280-54001-000	O RING (D:2.4,ID:52.6)	1	
13	09280B13010N000	O RING (D:1.9,ID:12.5)	1	
14	16519B09J00N000	SPRING	1	

FIG. 15

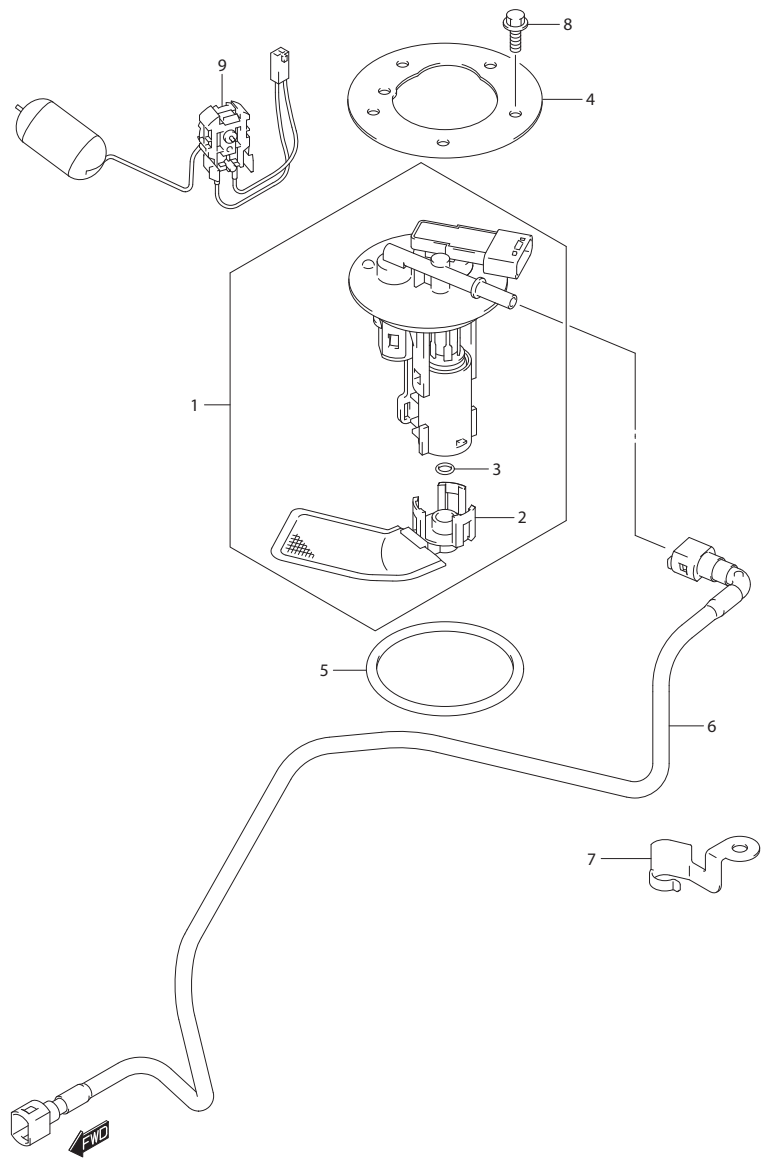


FIG. 15 FUEL PUMP

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	15100-22J00-000	PUMP ASSY, FUEL	1	
2	15420-22J00-000	.FILTER, SUCTION	1	
3	15424-09JA0-000	.O RING	1	
4	15121-09JB0-000	PLATE, FUEL PUMP	1	
5	15201-09JA0-000	O RING, FUEL PUMP	1	
6	15810-22J00-000	HOSE, FUEL	1	
7	15891B22J00N000	CLAMP, FUEL HOSE FRONT	1	
8	01547-0610A-000	BOLT	5	
9	34810-22J10-000	GAUGE ASSY, FUEL LEVEL SENDER	1	

2

FIG. 16

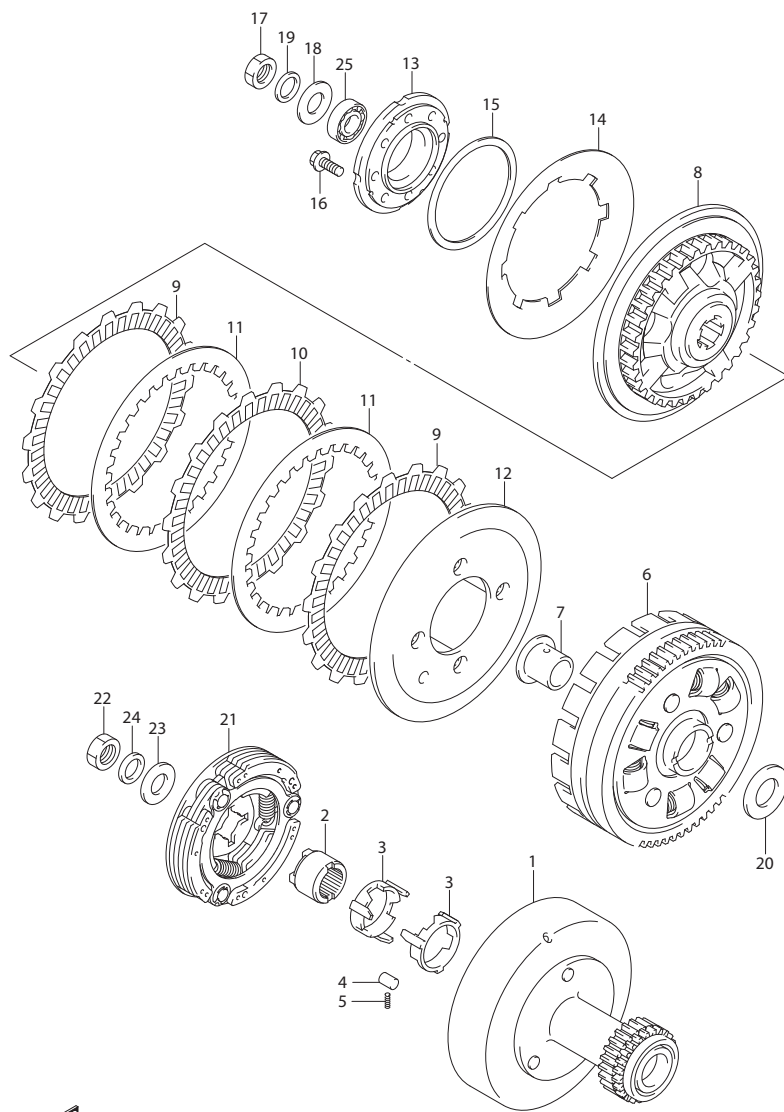


FIG. 16 CLUTCH

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	21110B22J00N000	GEAR, PRIMARY DRIVE (NT:21)	1	
2	21631B22J00N000	RACE, ONE WAY CLUTCH INNER	1	
3	21652-23F00-000	RETAINER, ONE WAY CLUTCH	2	
4	09261-07006-000	ROLLER (7X10)	3	
5	21653B22J00N000	SPRING	3	
6	21200B22J00N000	GEAR ASSY, PRIMARY DRIVEN(NT:69)	1	
7	21251B22J00N000	SPACER, PRIMARY DRIVEN GEAR	1	
8	21411B22J00N000	HUB, CLUTCH SLEEVE	1	
9	21441B22J00N000	PLATE, CLUTCH DRIVE NO.1	2	
10	21442B22J00N000	PLATE, CLUTCH DRIVE NO.2	1	
11	21451B22J00N000	PLATE, CLUTCH DRIVEN	2	
12	21461B22J00N000	DISC, CLUTCH PRESSURE	1	
13	21465B22J00N000	PLATE, RELEASE	1	
14	21472B22J00N000	SPRING, CLUTCH	1	
15	21471B22J00N000	SEAT, CLUTCH SPRING	1	
16	21412B22J00N000	BOLT, CLUTCH SPRING	4	
17	09140B14022N000	NUT	1	
18	09160B14005N000	WASHER (14X29X0.8)	1	
19	09164-14011-000	WASHER (14X21X1.4)	1	
20	21212B22J00N000	SPACER, PRIMARY DRIVE GEAR	1	
21	21501B22J00N000	CLUTCH ASSY, SHOE	1	
22	09140B14022N000	NUT	1	
23	09160B14005N000	WASHER (14X29X0.8)	1	
24	09164-14011-000	WASHER (14X21X1.4)	1	
25	08110-60020-000	BEARING	1	

FIG. 17

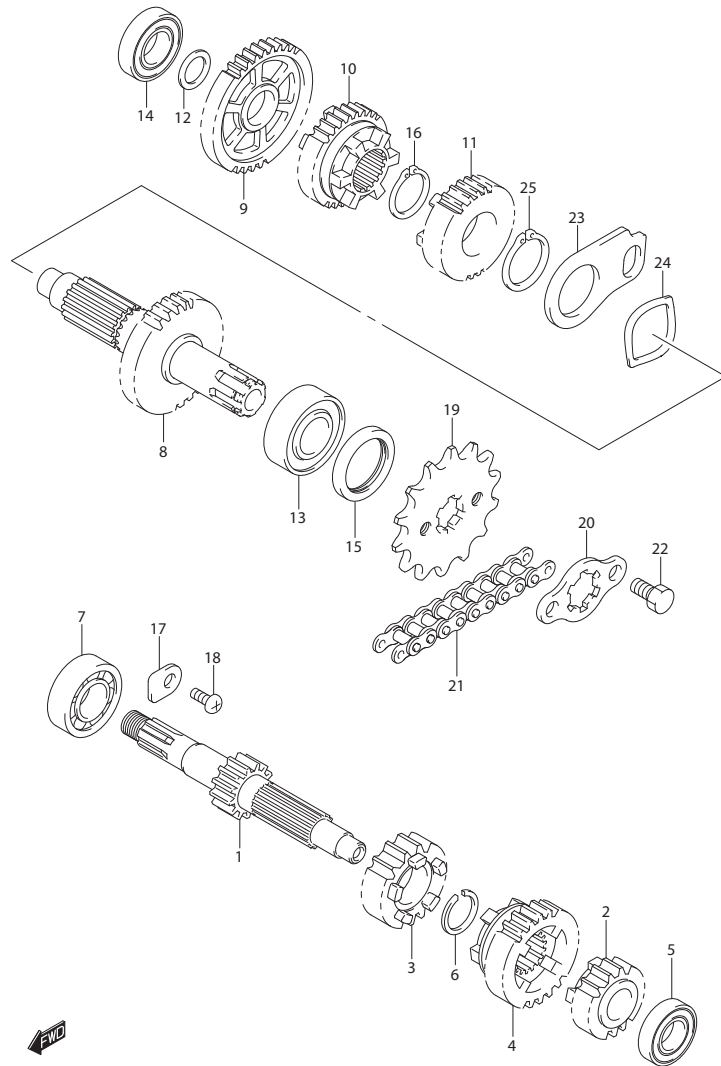


FIG. 17 TRANSMISSION

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	24120B22J00N000	SHAFT, COUNTER (NT:11)	1	
2	24221B22J00N000	GEAR, 2ND DRIVE (NT:16)	1	
3	24231B22J00N000	GEAR, 3RD DRIVE (NT:19)	1	
4	24241B22J00N000	GEAR, 4TH DRIVE (NT:21)	1	
5	08123B60010N000	BEARING LH	1	
6	09380-17007-000	CIRCLIP	1	
7	08110D62030H000	BEARING RH	1	
8	24130B22J00N000	SHAFT, DRIVE	1	
9	24311B22J00N000	GEAR, 1ST DRIVEN (NT:33)	1	
10	24331B22J00N000	GEAR, 3RD DRIVEN (NT:26)	1	
11	24341B22J00N000	GEAR, 4TH DRIVEN (NT:23)	1	
12	24313B22J00N000	WASHER, 1ST DRIVEN GEAR	1	
13	08110D62030H000	BEARING LH	1	
14	08133-62037-000	BEARING RH	1	
15	09283B17L04N000	OIL SEAL	1	
16	09350B20009N000	CIRCLIP	1	
17	24741-20A10-000	RETAINER, CENTER SHAFT BEARING	1	
18	02142-0612A-000	SCREW	1	
19	27511B22J00N000	SPROCKET, ENGINE (NT:14)	1	
20	27512-09G00-000	PLATE, ENGINE SPROCKET	1	
21	27600M23J10-102	CHAIN ASSY, DRIVE (RK420SL)	1	
22	01500-0610A-000	BOLT	2	
23	25361-23F10-000	PLATE, ROTARY STOP	1	
24	09164-25003-000	WASHER	1	
25	08331-31259-000	CIRCLIP	1	

FIG. 18

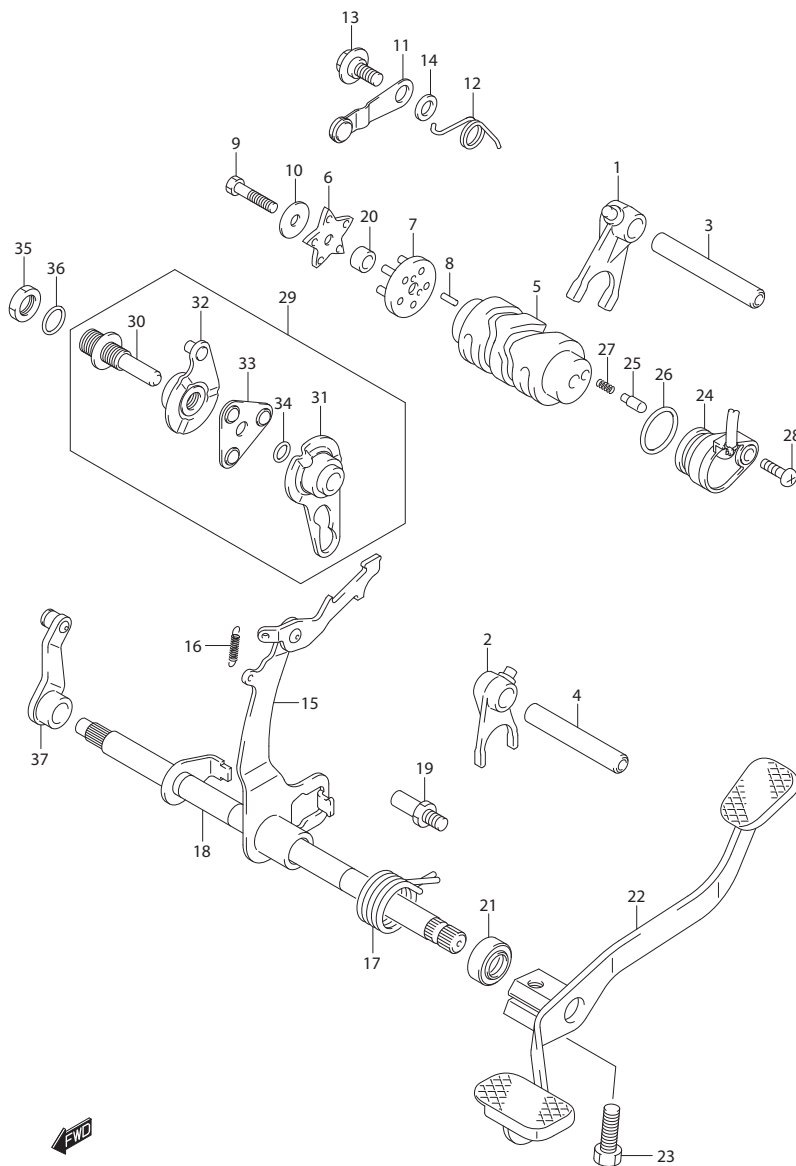


FIG. 18 GEAR SHIFTING

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	25211B22J00N000	FORK, GEAR SHIFT NO.1	1	
2	25221B22J00N000	FORK, GEAR SHIFT NO.2	1	
3	25411B22J00N000	SHAFT, GEAR SHIFT FORK NO.1	1	
4	25421B22J00N000	SHAFT, GEAR SHIFT FORK NO.2	1	
5	25311B23F80N000	CAM, GEAR SHIFT	1	
6	25381B22J00N000	PLATE, SHIFT CAM STOPPER	1	
7	25390B22J00N000	PLATE, GEAR SHIFT CAM	1	
8	09261-03002-000	PIN (3X9.8)	2	
9	01500B0630AN000	BOLT	1	
10	09160-06012-000	WASHER (6.5X22X1.6)	1	
11	25350B22J00N000	STOPPER, GEAR SHIFT CAM	1	
12	25355B22J00N000	SPRING, SHIFT CAM STOPPER	1	
13	25357B22J00N000	BOLT, SHIFT CAM STOPPER	1	
14	08211B06121N000	WASHER	1	
15	25520B22J00N000	ARM, GEAR SHIFT	1	
16	25527B22J00N000	SPRING GEAR SHIFT PAWL	1	
17	25518B22J00N000	SPRING GEAR SHIFT ARM RETURN	1	
18	25510B22J00N000	SHAFT, GEAR SHIFT	1	
19	25671B22J00N000	STOPPER, GEAR SHIFT ARM	1	
20	09180B06367N000	SPACER	1	
21	09285B12006N000	OIL SEAL (12X22X9)	1	
22	25610B22J00N000	LEVER, GEAR SHIFT	1	
23	01500B0820AN000	BOLT	1	
24	37720B22J00N000	BASE ASSY, GEAR SHIFT TERM	1	
25	09209B05011N000	PIN (5X15.5)	1	
26	09280-21008L000	O - RING GEAR SHIFT TERM	1	
27	09440-04010-000	SPRING	1	
28	02142B0620AN000	SCREW	1	
29	23200B22J00N000	GUIDE ASSY, CLUTCH RELEASE	1	
30	23223B22J00N000	.BOLT, CLUTCH RELEASE ADJUST	1	
31	23230B22J00N000	.GUIDE,CL RLSE BALL INNER	1	
32	23240B22J00N000	.GUIDE, CL RLSE BALL OUTER	1	
33	23250B22J00N000	.BALL, CLUTCH RELEASE	1	
34	09280B08005N000	.O RING (D:1.7,ID:7.7)	1	
35	09140B12051N000	NUT	1	
36	09280-12004-000	O RING (D:1.9,ID:11.8)	1	
37	23220B22J00N000	ARM, CLUTCH RELEASE	1	

FIG. 19

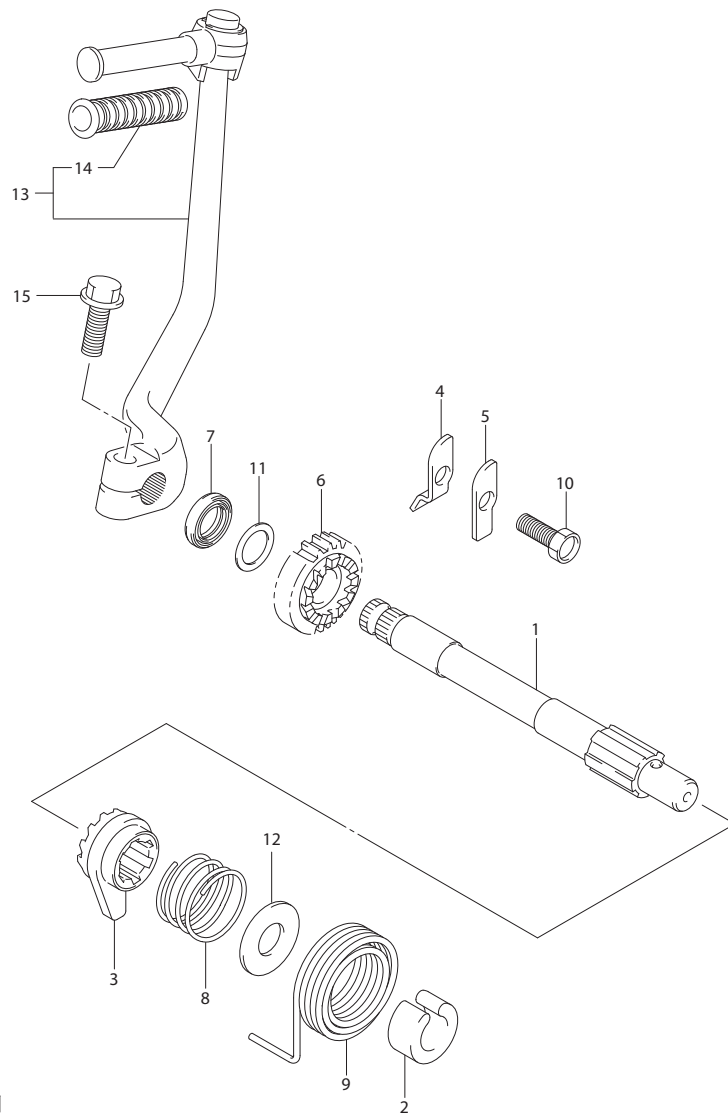


FIG. 19 KICK STARTER

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	26211B22J00N000	SHAFT, KICK STARTER	1	
2	26221B22J00N000	GUIDE, KICK SHAFT SPRING	1	
3	26231B22J00N000	STARTER, KICK	1	
4	26232B22J00N000	GUIDE, KICK STARTER	1	
5	26233B22J00N000	STOPPER, KICK STARTER	1	
6	26241B22J00N000	GEAR, KICK STARTER DRIVE(NT:21)	1	
7	09283B16008N000	OIL SEAL (16X24X5)	1	
8	09440B30007N000	SPRING	1	
9	26212B22J00N000	SPRING, KICK SHAFT RETURN	1	
10	01500B0820AN000	BOLT	1	
11	08211B16241N000	WASHER	1	
12	08211-15321-000	WASHER	1	
13	26300-22J10-000	LEVER ASSY, KICK STARTER	1	
14	26352-16H00-000	.RUBBER, KICK STARTER PEDAL	1	
15	26314-22J00-000	BOLT	1	

3

FIG. 20

3

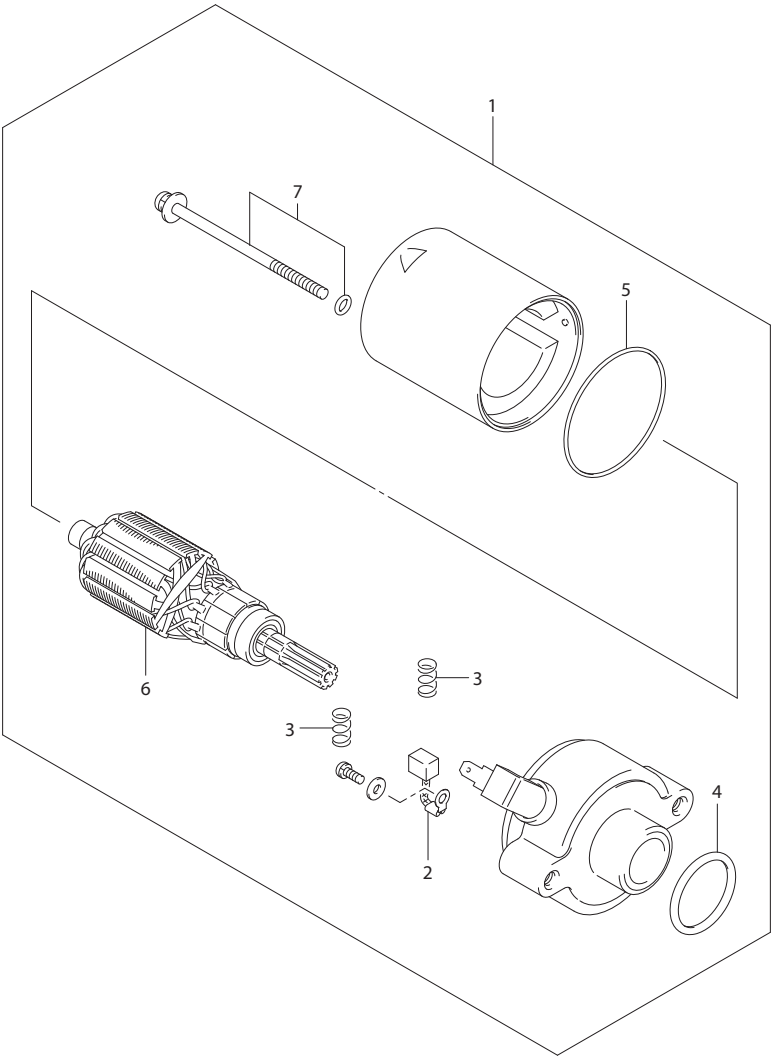


FIG. 20 STARTING MOTOR (FV115LB/LE)

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	31100B22J10N000	MOTOR ASSY,STARTING	1	
2	31132B22J10N000	.BRUSHU	1	
3	31135B22J10N000	.SPRING	2	
4	31156B22J10N000	.O RING	1	
5	31157B22J10N000	.PACKING	1	
6	31311B22J10N000	.ARMATURE ASSY	1	
7	31280B22J10N000	.BOLT	2	

FIG. 21

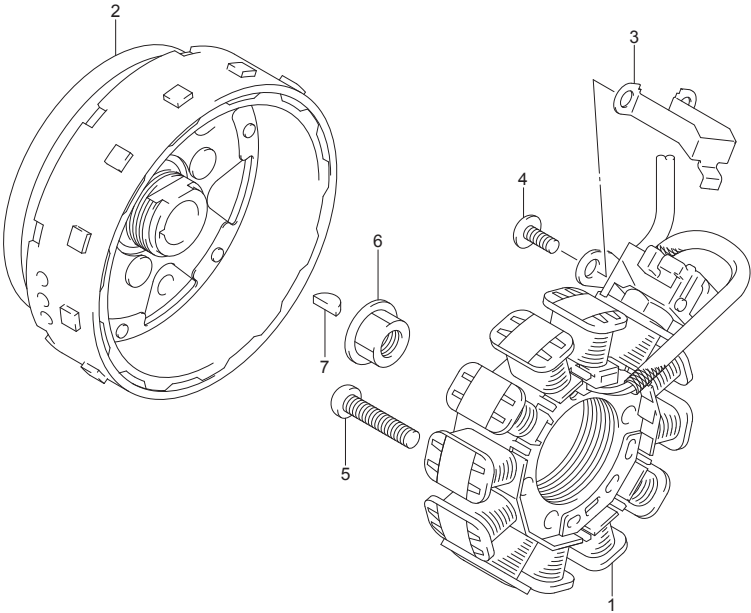


FIG. 21 MAGNETO

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	32101B22J00N000	STATOR ASSY, MAGNETO	1	
2.1	32102B22J00N000	ROTOR ASSY, MAGNETO(ELECTRIC START)	1	FV115 LB/LE
2.2	32102B22J10N000	ROTOR ASSY, MAGNETO(KICK START)	1	FV115 JB
3	32371B22J00N000	CLAMP, MAGNETO LEAD	1	
4	02142B0510AN000	SCREW	2	
5	02112B0625AN000	SCREW	2	
6	08316-1012A-000	NUT	1	
7	08341-31039-000	KEY	1	

3

FIG. 22

FIG. 22 BATTERY

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1.1	33610-20G00-000	BATTERY ASSY (YTZ3V, 12V2.5AH)	1	FV115JB
1.2	33610-20GH0-000	BATTERY ASSY (FTZ4V, 12V3AH)	1	FV115LB / LE

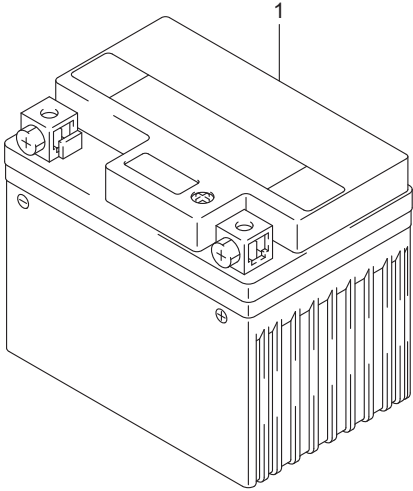


FIG. 23

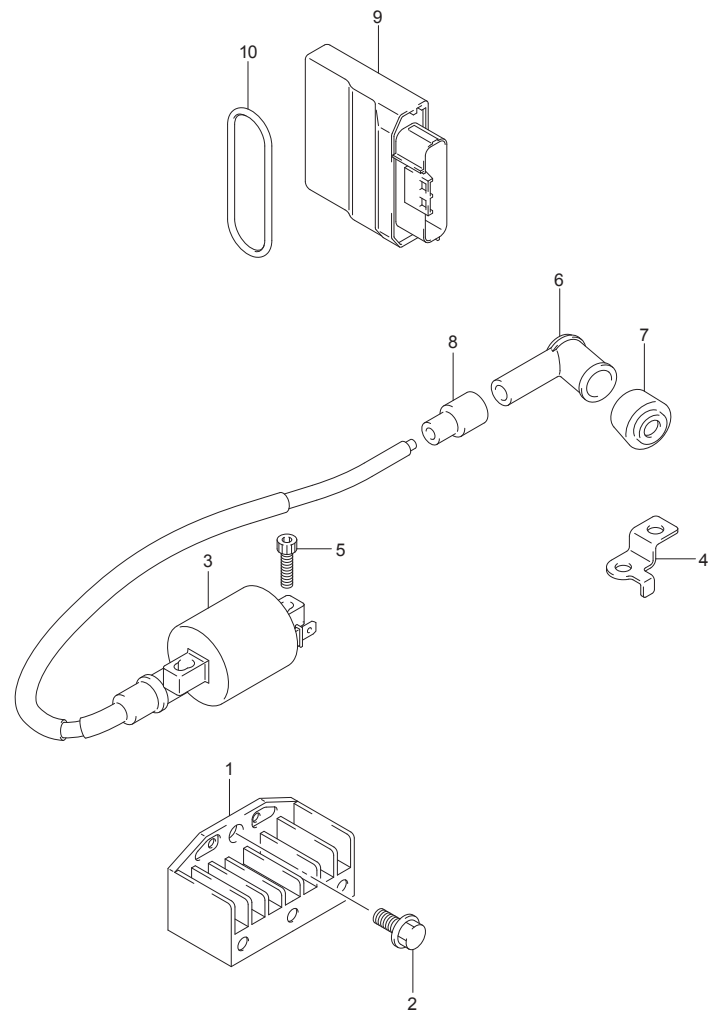


FIG. 23 ELECTRICAL (FV115JB)

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	32800-22J00-000	RECTIFIER ASSY	1	
2	01550-0612A-000	BOLT	1	
3	33410B22J00N000	COIL ASSY, IGNITION	1	
4	33446-22J00-000	BRACKET, HT CORD CLAMP	1	
5	07130-0520A-000	BOLT	2	
6	33510-22J00-000	CAP, SPARK PLUG	1	
7	33541-22J00-000	SEAL, SPARK PLUG	1	
8	33542-22J00-000	SEAL, HIGH TENSION CORD	1	
9	32920-22J40-000	CONTROL UNIT, FI	1	
10	47435-16H00-000	BAND, FI CONTROL UNIT	1	

FIG. 24

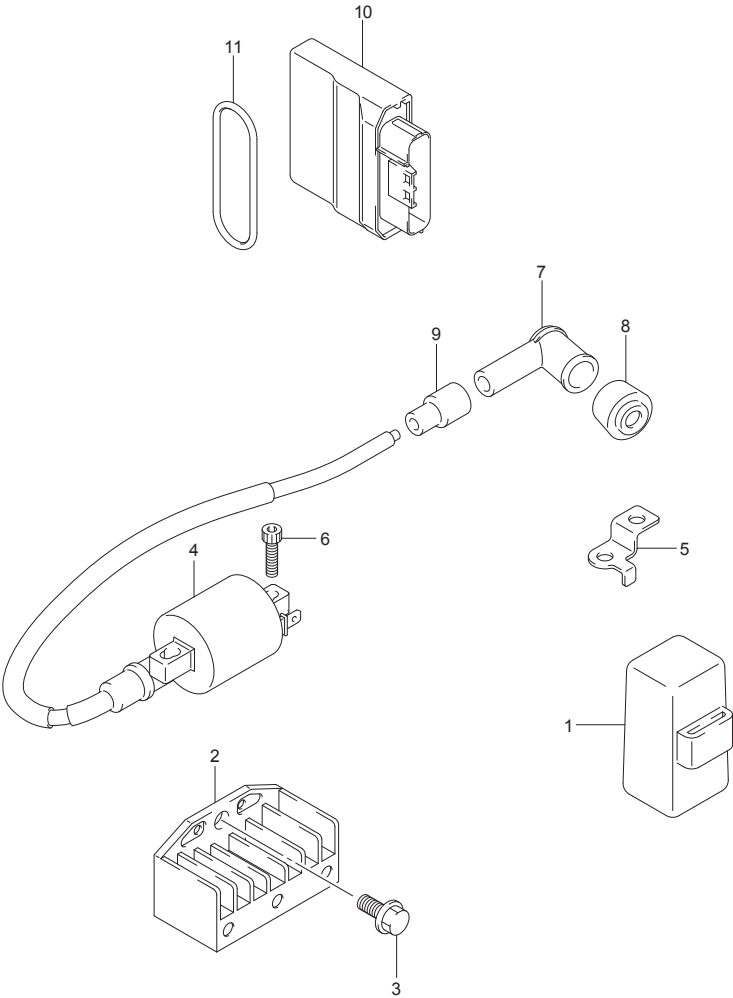


FIG. 24 ELECTRICAL (FV115LB/LE)

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	31800-16H00-000	RELAY ASSY, STARTING MOTOR	1	
2	32800-22J10-000	RECTIFIER ASSY	1	
3	01550-0612A-000	BOLT	1	
4	33410B22J00N000	COIL ASSY, IGNITION	1	
5	33446-22J00-000	BRACKET, HT CORD CLAMP	1	
6	07130-0520A-000	BOLT	2	
7	33510-22J00-000	CAP, SPARK PLUG	1	
8	33541-22J00-000	SEAL, SPARK PLUG	1	
9	33542-22J00-000	SEAL, HIGH TENSION CORD	1	
10	32920-22J00-000	CONTROL UNIT, FI	1	
11	47435-16H00-000	BAND, FI CONTROL UNIT	1	

FIG. 25

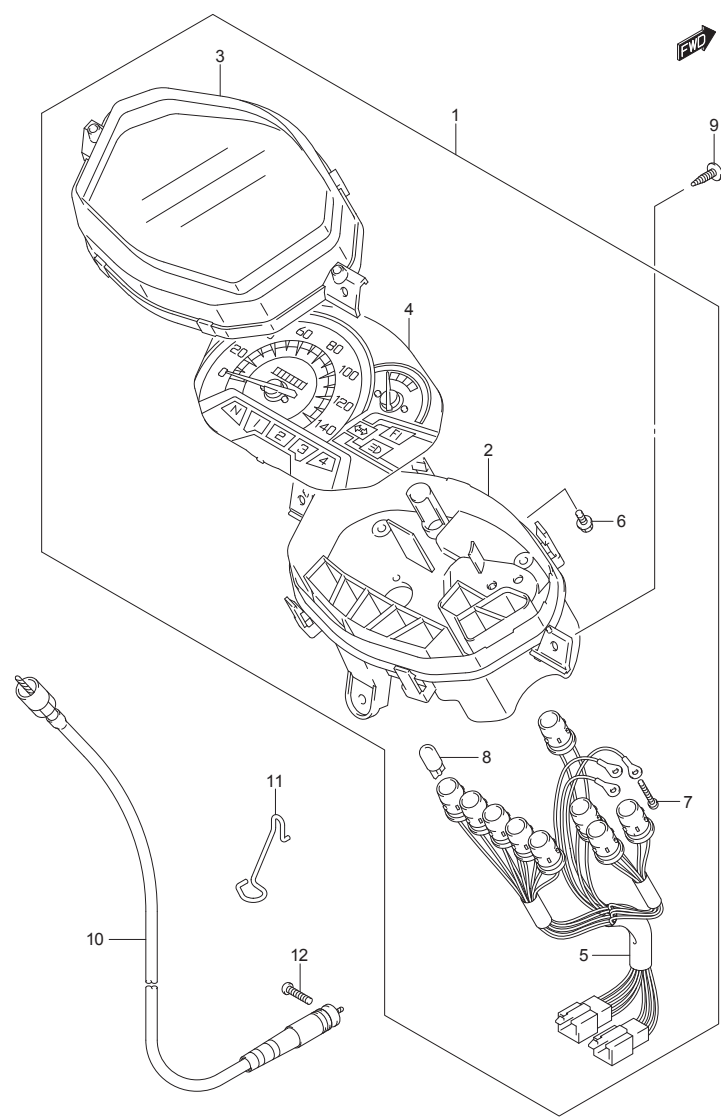


FIG. 25 SPEEDOMETER

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	34100-22J30-000	SPEEDOMETER ASSY	1	
2	34111-22J00-000	.CASE	1	
3	34150-22J00-000	.GLASS ASSY	1	
4	34120-22J10-000	.SPEEDOMETER	1	
5	34173-22J00-000	.CORD ASSY	1	
6	02112B74108N000	.SCREW	2	
7	34383-09400-000	.SCREW	3	
8	09471-12077-000	.BULB (12V,1.7W)	9	
9	03541-0516A-000	SCREW	3	
10	34910B45H00N000	CABLE ASSY, SPEEDOMETER	1	
11	34931B22J00N000	GUIDE, SPEEDOMETER CABLE	1	
12	02112-0516A-000	SCREW	1	

FIG. 26

4

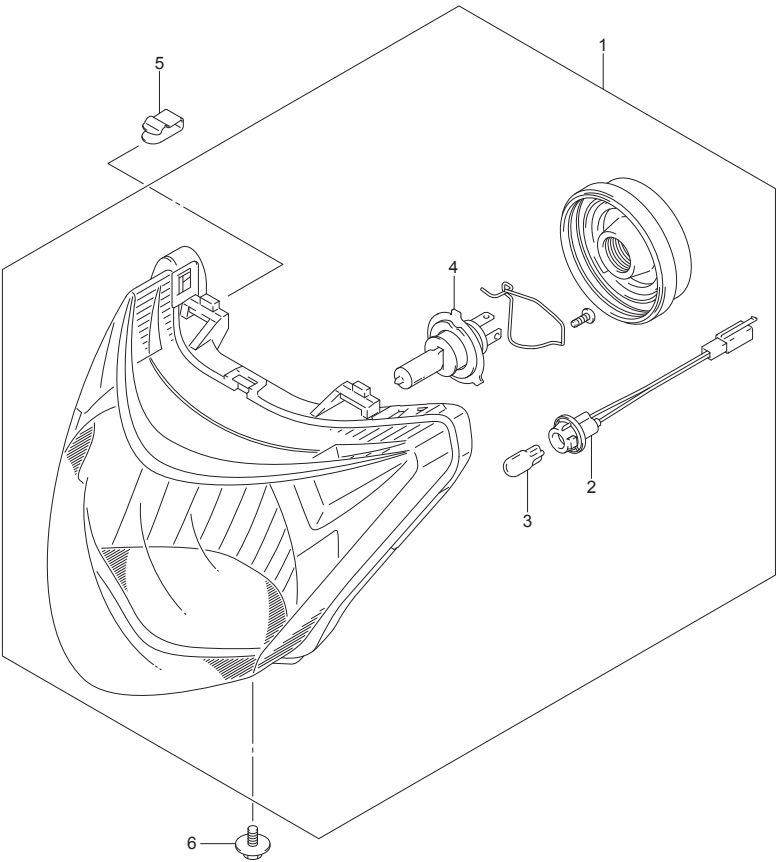


FIG. 26 HEADLAMP

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	35100-22J30-000	HEADLAMP ASSY	1	
2	35171-22J30-000	.CORD ASSY	1	
3	09471-12216-000	.BULB (12V5W)	1	
4	09471-12101-000	.BULB (12V,35/35W)	1	
5	35194-23F00-000	CLIP, HEADLAMP	2	
6	09136-05065-000	SCREW (5X10)	1	

FIG. 27

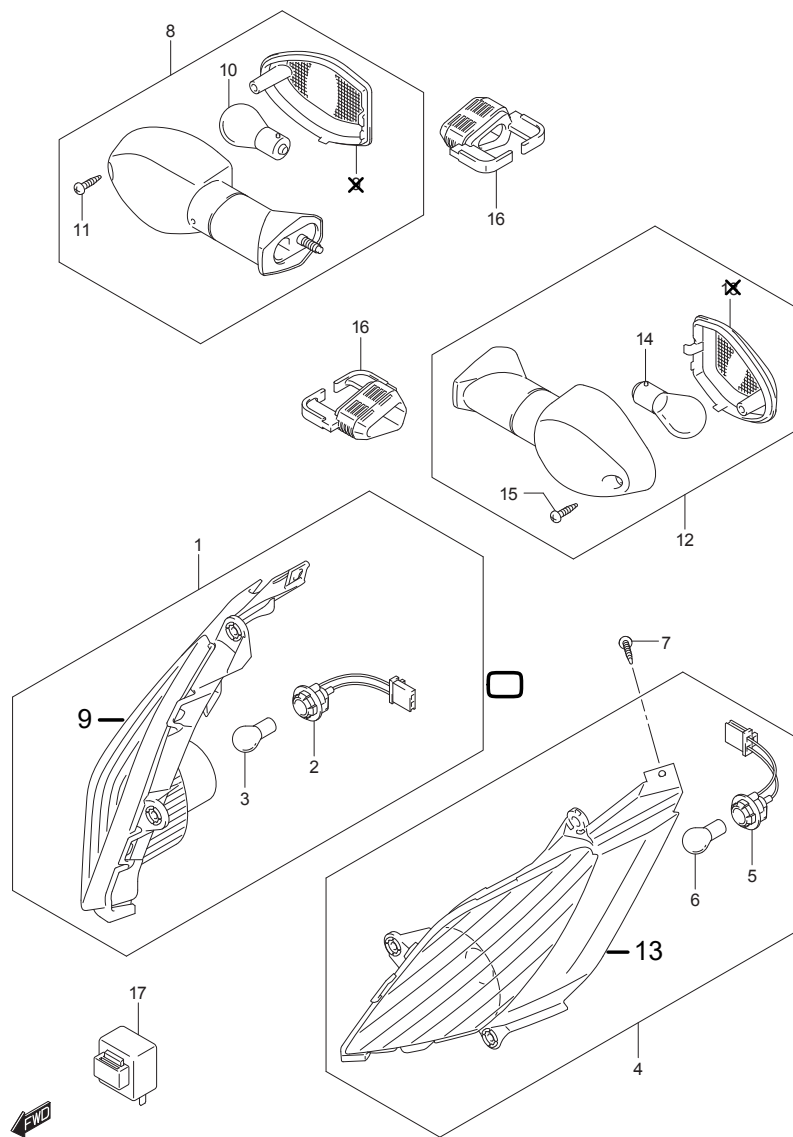


FIG. 27 TURNSIGNAL LAMP

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	35601-22J10-000	LAMP ASSY, FRONT TURNSIGNAL RH	1	
2	35618-22J10-000	.CORD ASSY	1	
3	09471-12186-000	.BULB (12V,21W)	1	
4	35602-22J10-000	LAMP ASSY, FRONT TURNSIGNAL LH	1	
5	35638-22J10-000	.CORD ASSY	1	
6	09471-12186-000	.BULB (12V,21W)	1	
7	03211-0416A-000	SCREW	4	
8	35603-22J00-000	LAMP ASSY, REAR TURNSIGNAL RH	1	
9	35612B22J00N000	.LENS	1	
10	09471-12045-000	.BULB (12V,21W)	1	
11	03211-0420A-000	.SCREW	1	
12	35604-22J00-000	LAMP ASSY, REAR TURNSIGNAL LH	1	
13	35632B22J00N000	.LENS	1	
14	09471-12045-000	.BULB (12V,21W)	1	
15	03211-0420A-000	.SCREW	1	
16	35629-22J00-000	PLATE, REAR TURNSIGNAL	2	
17	38610-22J00-000	RELAY ASSY, TURNSIGNAL LAMP	1	

FIG. 28

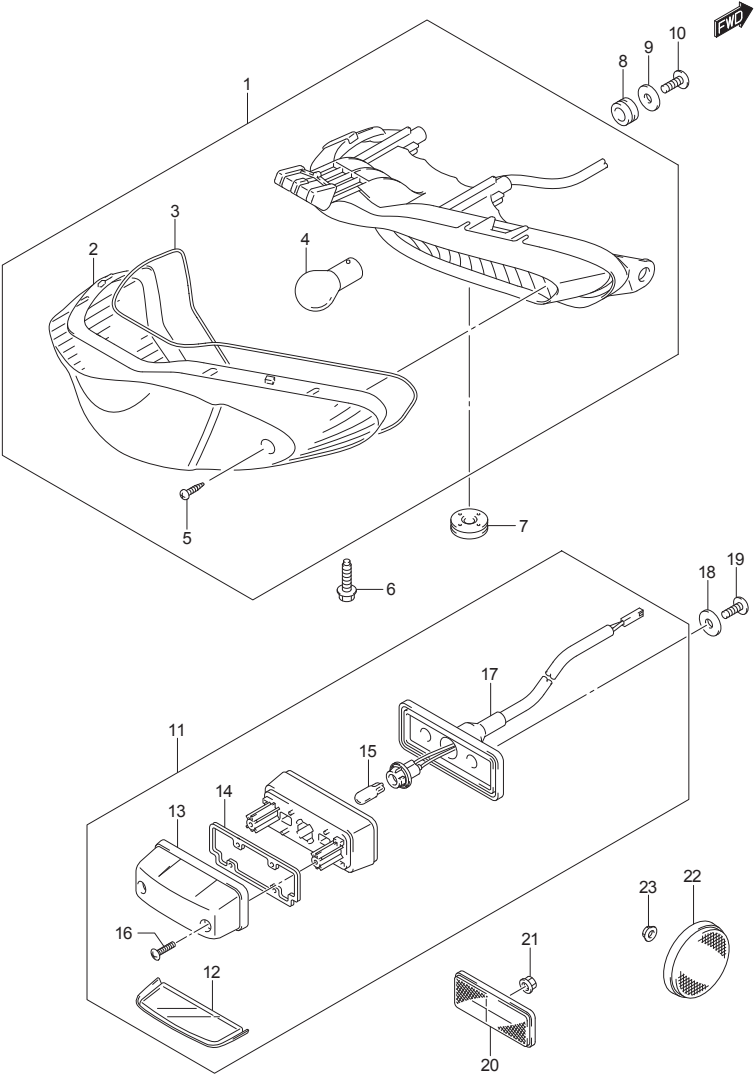


FIG. 28 REAR COMBINATION LAMP

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	35710-22J10-000	LAMP ASSY, REAR COMB	1	
2	35712-22J10-000	.LENS REAR TAIL	1	
3	35713-22J10-000	.GASKET	1	
4	09471-12083-000	.BULB (12V,21/5W)	1	
5	03211-0416A-000	.SCREW	2	
6	35781-22J10-000	.PROTECTOR	1	
7	09320-08028-000	CUSHION	2	
8	09320-09016-000	CUSHION	2	
9	09160-05045-000	WASHER (5.5X18X1)	2	
10	03541-0516A-000	SCREW	2	
11	35910-16H20-000	LAMP ASSY, LICENSE	1	
12	35912-16H20-000	.LENS	1	
13	35917-16H00-000	.COVER	1	
14	35913-16H00-000	.GASKET	1	
15	09471-12216-000	.BULB (12V5W)	1	
16	03211-0416B-000	.SCREW	2	
17	35918-16H20-000	.CORD ASSY	1	
18	09160-05501-000	WASHER (5.5X20X1.2)	2	
19	03541-0416B-000	SCREW	2	
20	35970-22J00-000	REFLECTOR ASSY, REAR	1	
21	08316-1005A-000	NUT	1	
22	35950-22J00-000	REFLECTOR ASSY, REAR SIDE	2	
23	08316-1005A-000	NUT	2	

FIG. 29

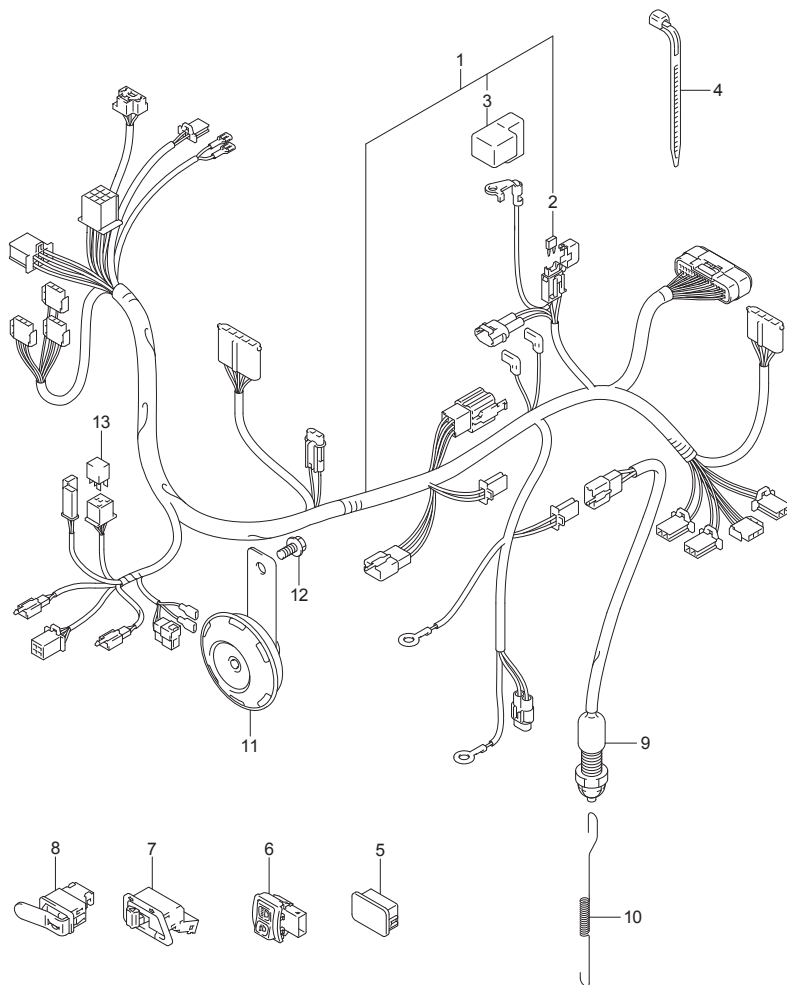


FIG. 29 WIRING HARNESS (FV115JB)

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	36610-22J60-000	HARNESS, WIRING	1	
2	09481-15501-000	.FUSE (15A)	2	
3	33624-22J00-000	.CAP	1	
4	09407-14403-000	CLAMP (L:125)	1	
5	56322-09G00-000	CAP, HANDLE REAR COVER	1	
6	37420-09G21-000	SWITCH ASSY, DIMMER	1	
7	37510-10E30-000	SWITCH ASSY, TURN SIGNAL	1	
8	37520-09G50-000	SWITCH ASSY, HORN	1	
9	37740-09G10-000	SWITCH ASSY, STOP LAMP	1	
10	43139B22J00N000	SPRING, STOP LAMP SWITCH	1	
11	38500-45H02-000	HORN ASSY	1	
12	01550-0612A-000	BOLT	1	
13	38860-33J00-000	RELAY ASSY, MAIN	1	

4

FIG. 30

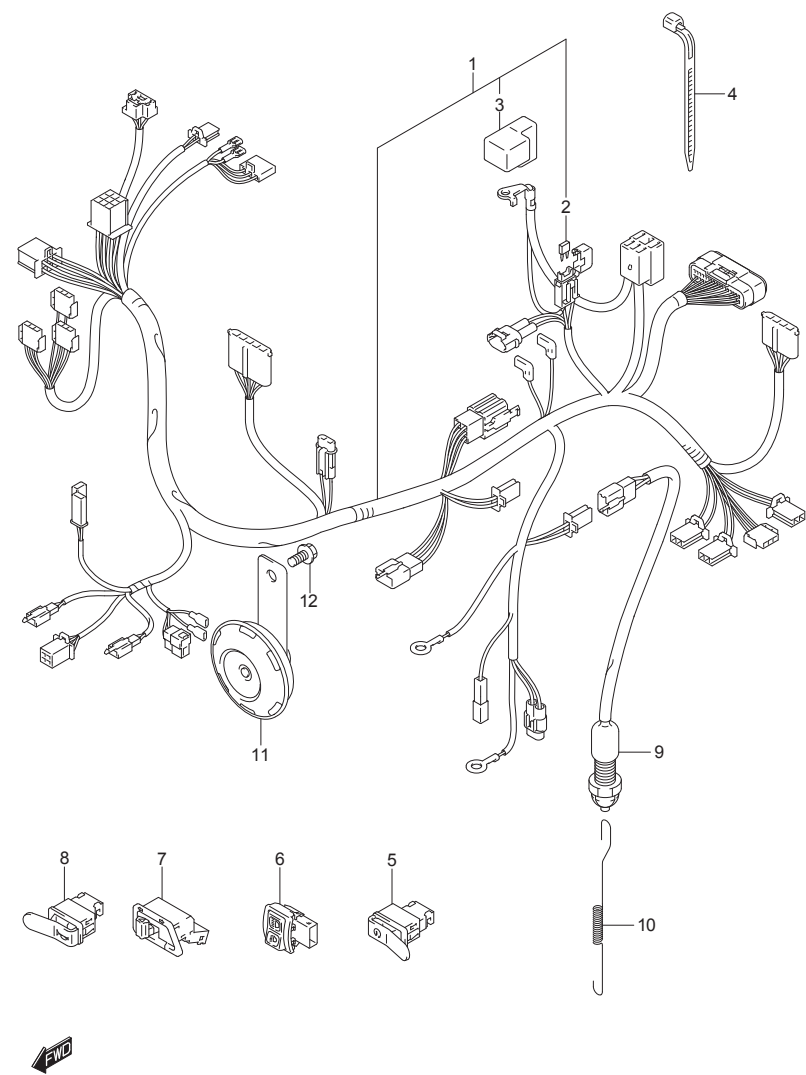


FIG. 30 WIRING HARNESS (FV115LB /LE)

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	36610-22J70-000	HARNESS, WIRING	1	
2	09481-15501-000	.FUSE (15A)	2	
3	33624-22J00-000	.CAP	1	
4	09407-14403-000	CLAMP (L:125)	1	
5	37310-09G50-000	SWITCH ASSY, STARTER	1	
6	37420-09G21-000	SWITCH ASSY, DIMMER	1	
7	37510-10E30-000	SWITCH ASSY, TURN SIGNAL	1	
8	37520-09G50-000	SWITCH ASSY, HORN	1	
9	37740-09G10-000	SWITCH ASSY, STOP LAMP	1	
10	43139B22J00N000	SPRING, STOP LAMP SWITCH	1	
11	38500-45H02-000	HORN ASSY	1	
12	01550-0612A-000	BOLT	1	

FIG. 31

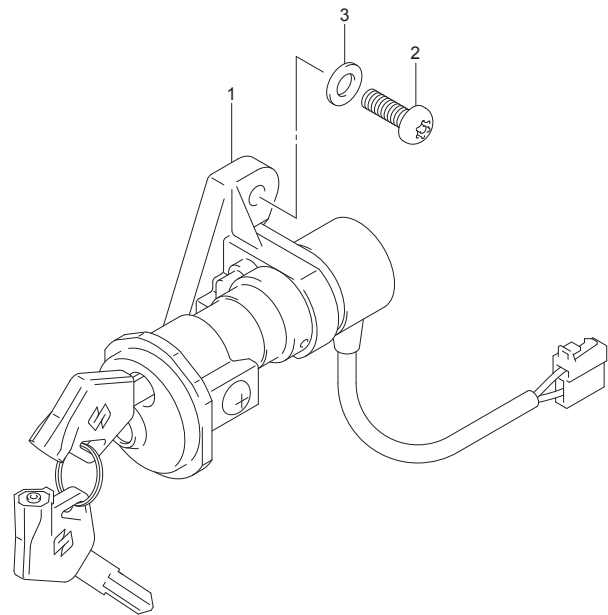


FIG. 31 LOCK SET

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	37100-22J20-000	LOCK ASSY, STEERING	1	
2	09139-06048-000	SCREW (6X20)	2	
3	08322-0106A-000	WASHER	2	

FIG. 32

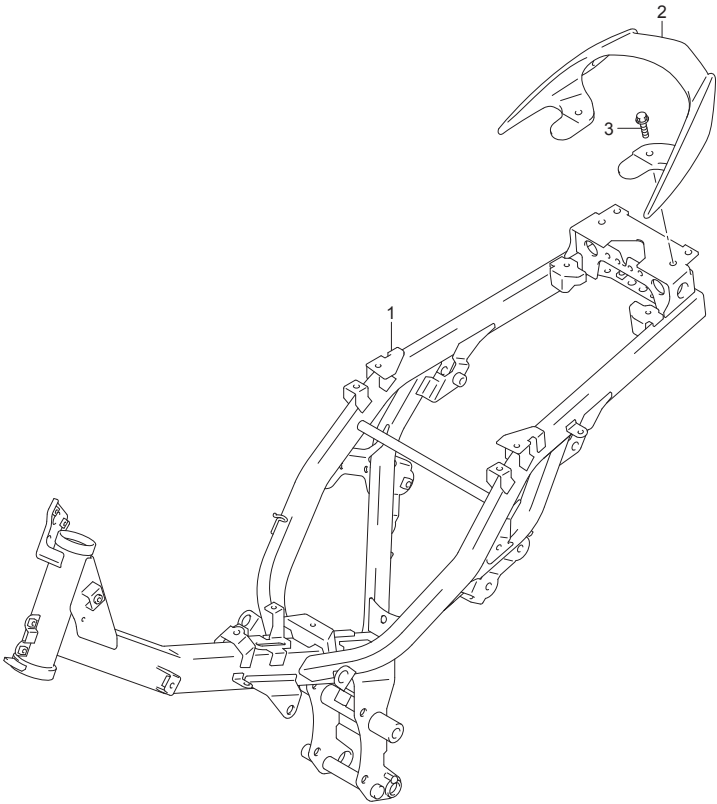


FIG. 32 FRAME

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	41100-22J10-000	FRAME	1	
2	46211-22J00-13L	HANDLE, PILLION RIDER (SILVER)	1	
3	01550-0830A-000	BOLT	2	

FIG. 33

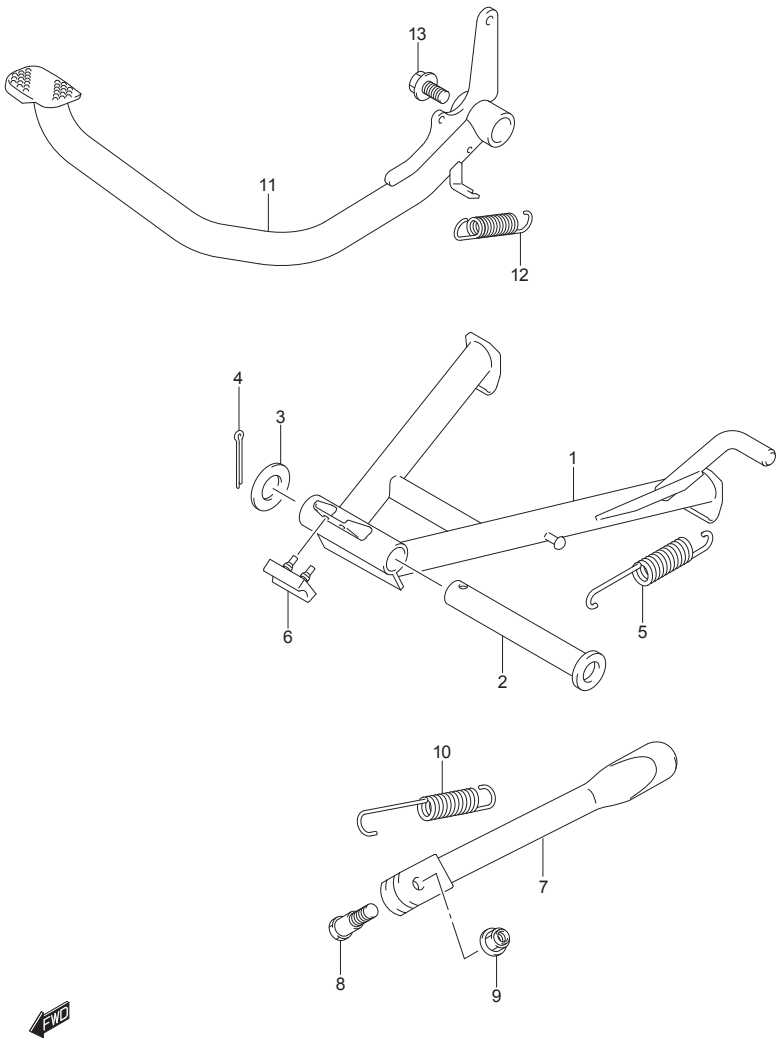


FIG. 33 STAND

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	42100-22J00-000	STAND, CENTER	1	
2	42211-20G00-000	SHAFT, CENTER STAND	1	
3	08322-0116A-000	WASHER	1	
4	04111-3025A-000	COTTER PIN	1	
5	42241-45H00-000	SPRING, CENTER STAND	1	
6	42272-09G00-000	CUSHION, CENTER STAND	1	
7	42310-09G60-000	STAND, PROP	1	
8	42341-09G01-000	BOLT	1	
9	08319-3110A-000	NUT	1	
10	09443-14077-000	SPRING	1	
11	43110B22J00N000	PEDAL, BRAKE	1	
12	09443-12033-000	SPRING	1	
13	01550-1016A-000	BOLT	1	

4

FIG. 34

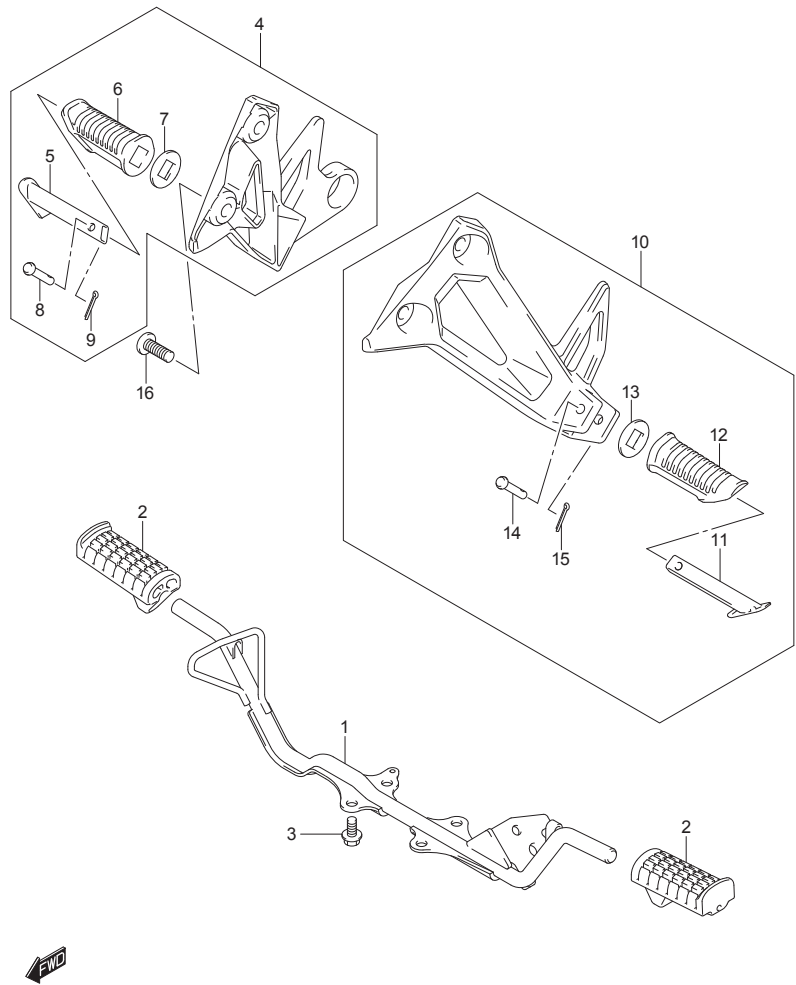


FIG. 34 FOOTREST

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	43510-22J00-000	BAR, FRONT FOOTREST	1	
2	43551-22J10-000	RUBBER, FRONT FOOTREST	2	
3	01550-0616A-000	BOLT	4	
4	43600-22J20-13L	FOOTREST ASSY, PILLION RH(SILVER)	1	
5	43610-34A00-000	.BAR, PILLION FOOTREST RH	1	
6	43612-22J10-000	.RUBBER, PILLION FOOTREST	1	
7	43631-09G00-000	.WASHER, PILLION FOOTREST RUBBER	1	
8	09200-06041-000	.PIN	1	
9	04111-2515A-000	.COTTER PIN	1	
10	43700-22J20-13L	FOOTREST ASSY, PILLION LH(SILVER)	1	
11	43710-34A00-000	.BAR, PILLION FOOTREST LH	1	
12	43612-22J10-000	.RUBBER, PILLION FOOTREST	1	
13	43631-09G00-000	.WASHER, PILLION FOOTREST RUBBER	1	
14	09200-06041-000	.PIN	1	
15	04111-2515A-000	.COTTER PIN	1	
16	09106-08196-000	BOLT	4	

FIG. 35

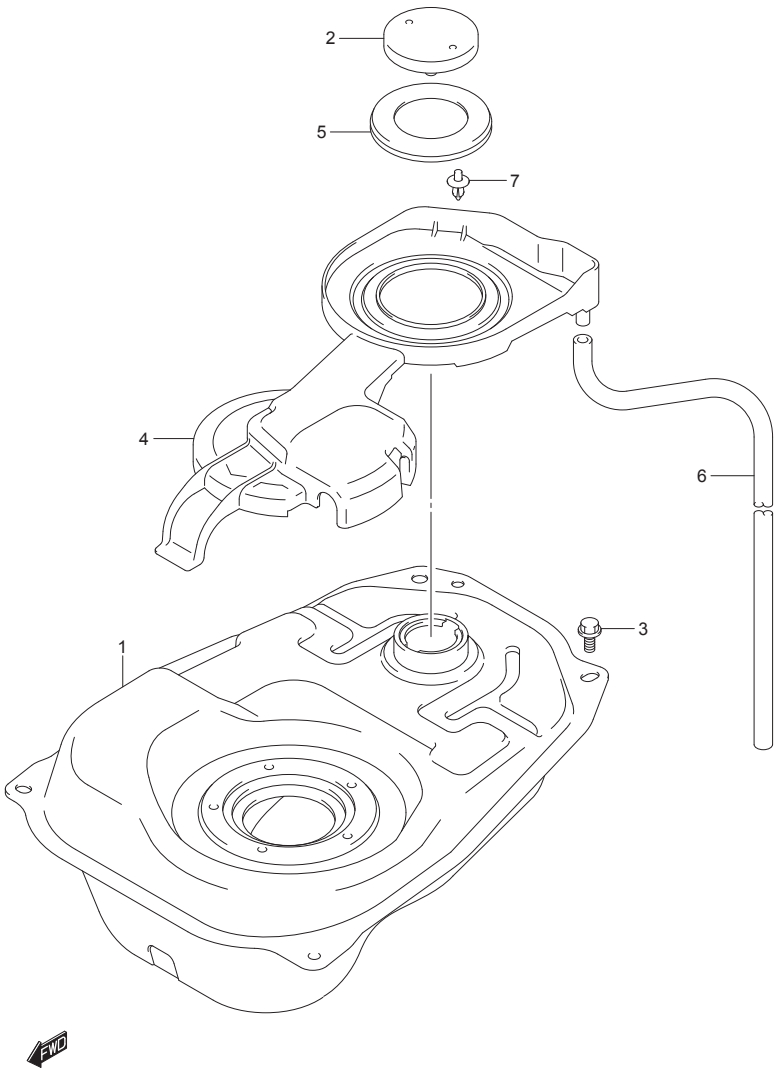


FIG. 35 FUEL TANK

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	44110-22J00-000	TANK, FUEL	1	
2	44210B09J00N000	CAP, FUEL TANK FILLER	1	
3	01550-0612A-000	BOLT	4	
4	44271-22J00-000	COVER, FUEL TANK	1	
5	44261-41H10-000	RUBBER, FUEL TANK INLET	1	
6	09352-70113-600	HOSE (7X11X600)	1	
7	09409-06314-5PK	CLIP (BLACK)	1	

4

FIG. 36

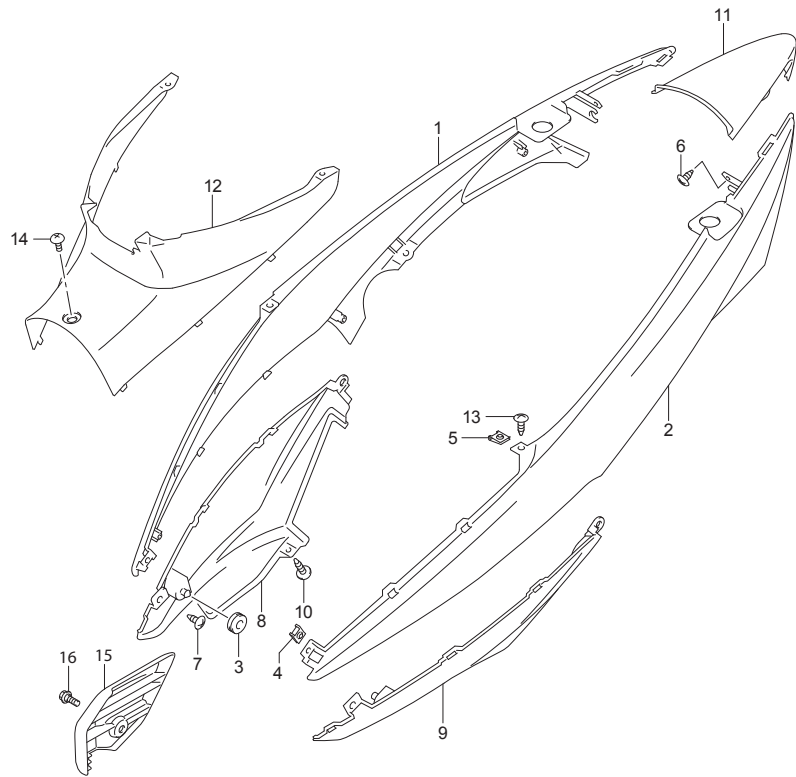


FIG. 36 FRAME COVER

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	47111-22J00-	COVER, FRAME RH (GREEN)	1	COLOUR PART
2	47211-22J00-	COVER, FRAME LH (BLUE)	1	COLOUR PART
3	09320-08018-000	CUSHION	2	
4	09148-05045-000	NUT	2	
5	09148-05045-000	NUT	2	
6	03541-0412B-000	SCREW	2	
7	03541-0512B-000	SCREW	4	
8	47511-22J00-291	COVER, FRAME UNDER RH (BLACK)	1	
9	47611-22J00-291	COVER, FRAME UNDER LH (BLACK)	1	
10	03541-0516A-000	SCREW	4	
11	47711-22J00-291	COVER, FRAME REAR (BLACK)	1	
12	47411-22J00-291	COVER, FRAME FRONT (BLACK)	1	
13	03541-0516A-000	SCREW	2	
14	48218B10J00N000	SCREW, LEG CENTER	1	
15	47811-22J00-000	COVER, PIVOT	1	
16	63161-43E10-000	BOLT, PIVOT COVER	1	

FIG. 37

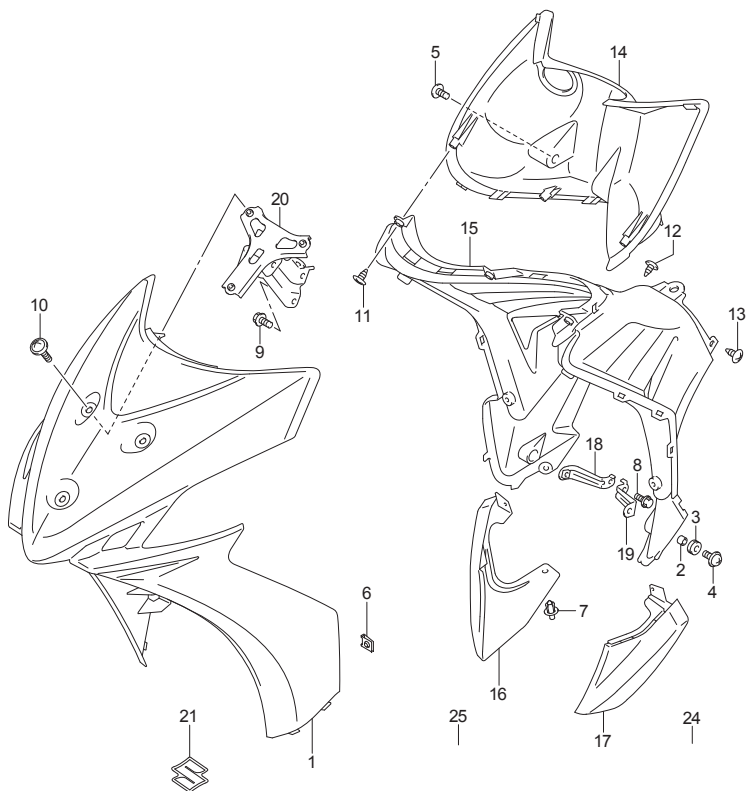


FIG. 37 FRONT LEG SHIELD

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	48111-22J00-	SHIELD, LEG FRONT	1	COLOUR PART
2	48212-16H00-000	SPACER, LEG SHIELD BRACE	2	
3	48278-16H00-000	CUSHION, LEG BRACE	2	
4	09136-06158-000	SCREW (6X16)	2	
5	09136-06158-000	SCREW (6X16)	2	
6	09148B04034N000	NUT	4	
7	09409-06314-5PK	CLIP (BLACK)	2	
8	01547-0612A-000	BOLT	2	
9	01550-0616A-000	BOLT	2	
10	51875-45H00-000	SCREW, LEG FRONT	3	
11	03541-0416A-000	SCREW	4	
12	03541-0416B-000	SCREW	4	
13	03541-0512A-000	SCREW	2	
14	48131-22J10-	SHIELD, LEG CENTER	1	COLOUR PART
15	48132-22J10-291	SHIELD, LEG CENTER LOWER (BLACK)	1	
16	48137-22J00-291	SHIELD, LEG LOWER RH (BLACK)	1	
17	48138-22J00-291	SHIELD, LEG LOWER LH (BLACK)	1	
18	48140B22J00N000	BRACKET, LEG SHIELD RH	1	
19	48150B22J00N000	BRACKET, LEG SHIELD LH	1	
20.1	51860B22J10N000	BRACE, LEG SHIELD	1	FV115JB
20.2	51860B22J00N000	BRACE, LEG SHIELD	1	FV115LB/LE
21	68211B25GA0N000	EMBLEM, "S"	1	

4

4

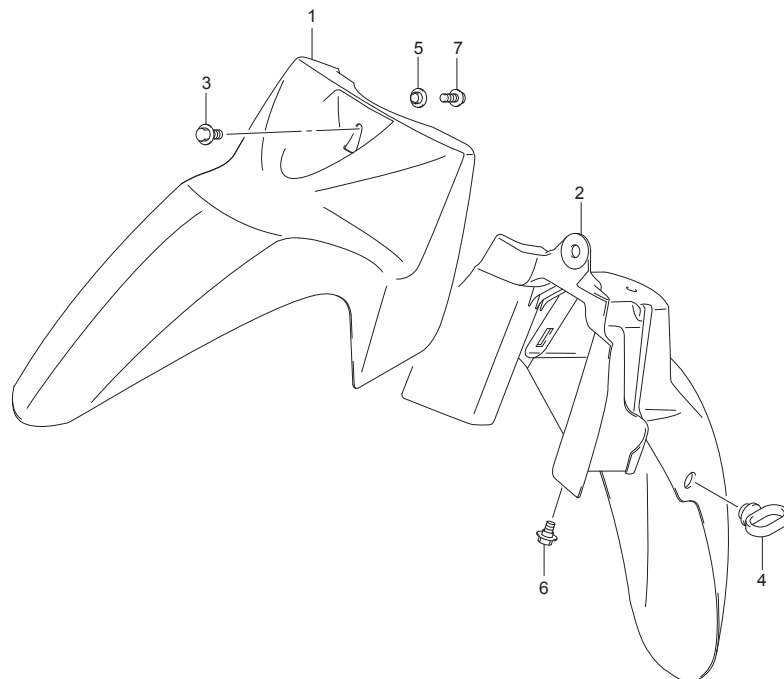
FV115_PartList.indb 48

FIG. 39

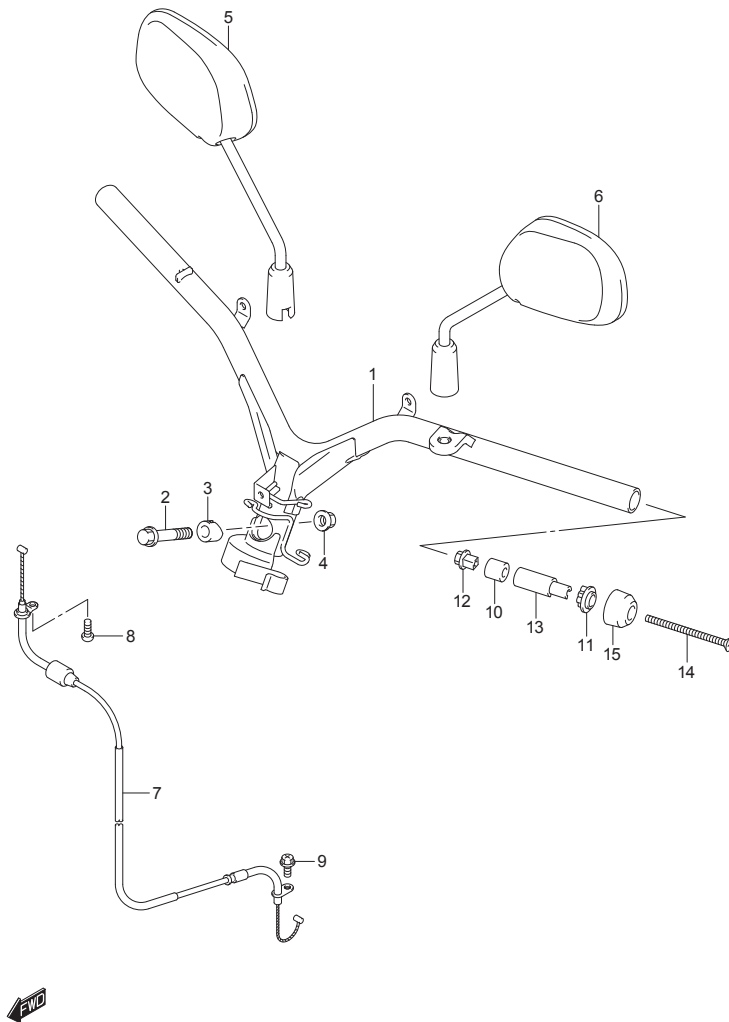


FIG. 39 HANDLEBAR

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	56110-22J10-000	HANDLEBAR	1	
2	09103-10126-000	BOLT (10X48)	1	
3	51358-09G10-000	STOPPER, HANDLEBAR	1	
4	08319-3110A-000	NUT	1	
5	56500-10JB0-000	MIRROR ASSY, REAR VIEW RH	1	
6	56600-10JC0-000	MIRROR ASSY, REAR VIEW LH	1	
7	58300B22J00N000	CABLE ASSY, THROTTLE	1	
8	02112-0512A-000	SCREW	1	
9	02162B0510AN000	SCREW	1	
10	56272-10G00-000	EXPANDER, HANDLE BALANCER	2	
11	56272B22J00N000	EXPANDER, HANDLE BALANCER	2	
12	56273-10G10-000	NUT, ANDLE BALANCER	2	
13	56276-22J00-000	BALANCER, HANDLEBAR INNER	2	
14	56277-22J00-000	SCREW, HANDLE BALANCER	2	
15	56278-22J00-000	BALANCER, HANDLEBAR	2	

FIG. 40

4

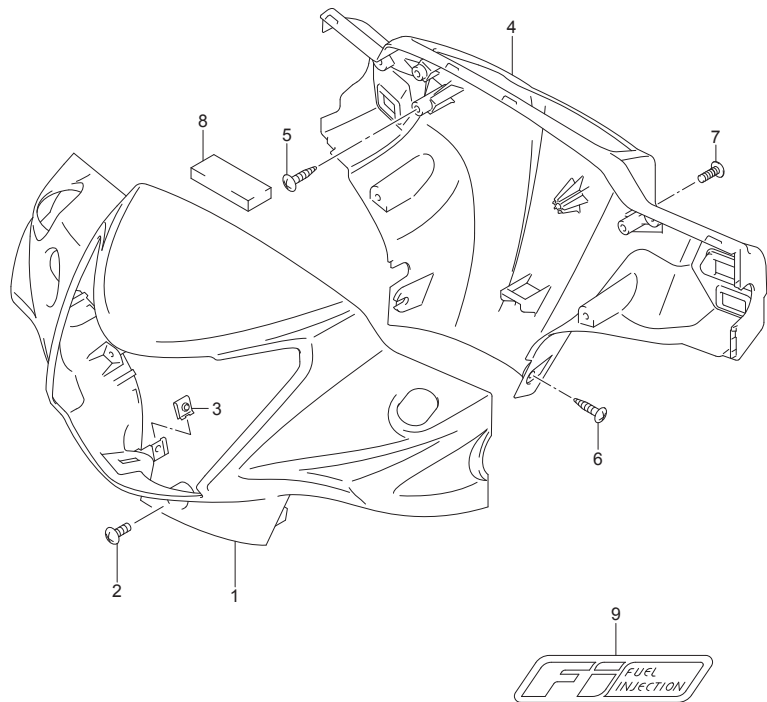


FIG. 40 HANDLE COVER

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	56311-22J10-	COVER, HANDLE FRONT (WHITE)	1	COLOUR PART
2	02142-0512B-000	SCREW	1	
3	09148B04034N000	NUT	2	
4	56321-22J00-000	COVER, HANDLE REAR	1	
5	03541-0516A-000	SCREW	2	
6	03541-0416B-000	SCREW	4	
7	56316-45H00-000	SCREW, HANDLE COVER FR & RR	2	
8	33652-35400-000	CUSHION, HANDLE COVER FRONT	1	
9	68281M22J40-ANN	EMBLEM, FI (SILVER/GRAY)	1	

FIG. 41

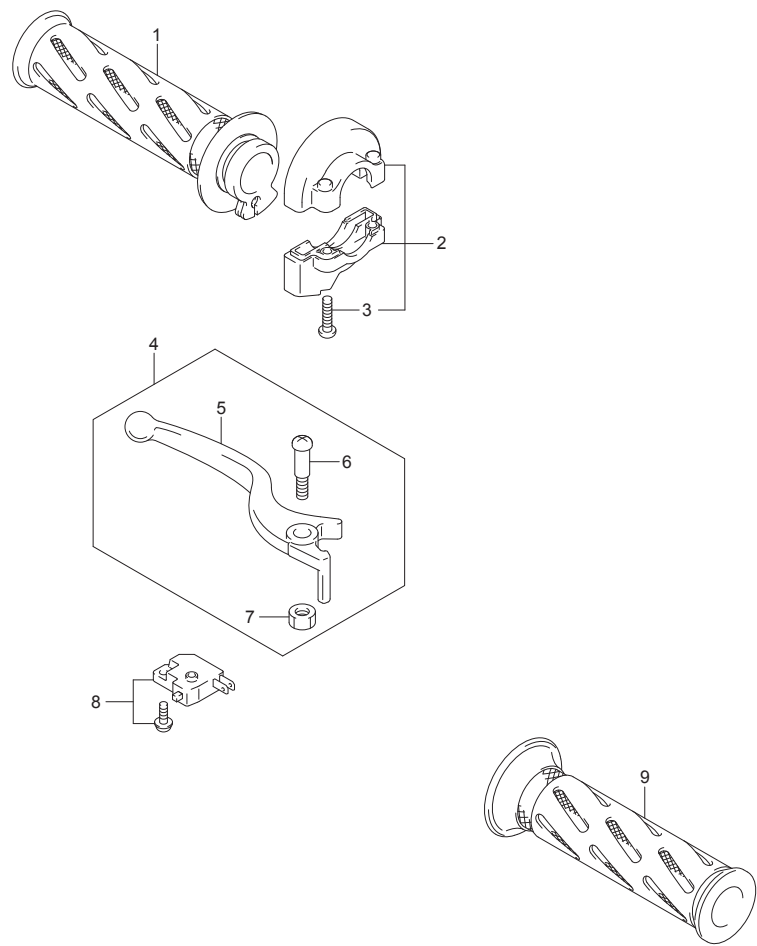


FIG. 41 HANDLE LEVER

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	57110-09GD0-000	GRIP, THROTTLE	1	
2	57100-09G11-000	CASE ASSY, THROTTLE	1	
3	02112-0520A-000	.SCREW	2	
4	57300-41HA0-000	LEVER ASSY, BRAKE	1	
5	57421-41HA0-000	.LEVER, BRAKE	1	
6	57431-29C20-000	.SCREW, BRAKE LEVER PIVOT	1	
7	08319-2106A-000	.NUT	1	
8	57460-41H00-000	SWITCH ASSY, STOP	1	
9	57211-22D30-291	GRIP, LH (BLACK)	1	

FIG. 42

FIG. 42 REAR FENDER

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	63111-22J10-000	FENDER, REAR	1	
2	61361-09G20-000	BOLT, REAR FENDER	2	
3	09148-05045-000	NUT	4	
4	68171M22J00-000	EMBLEM,"SUZUKI"	1	

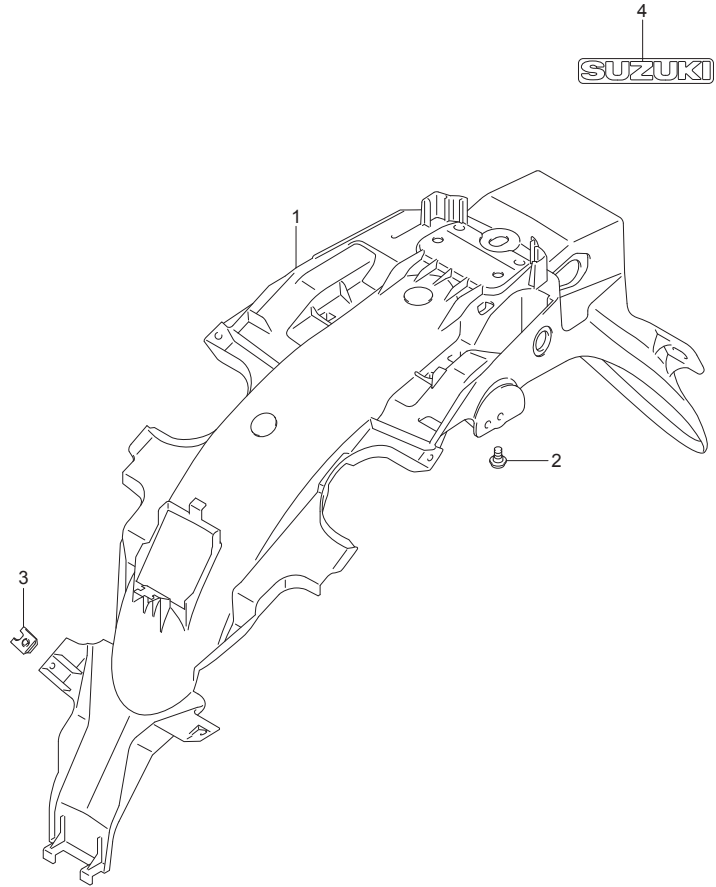


FIG. 43

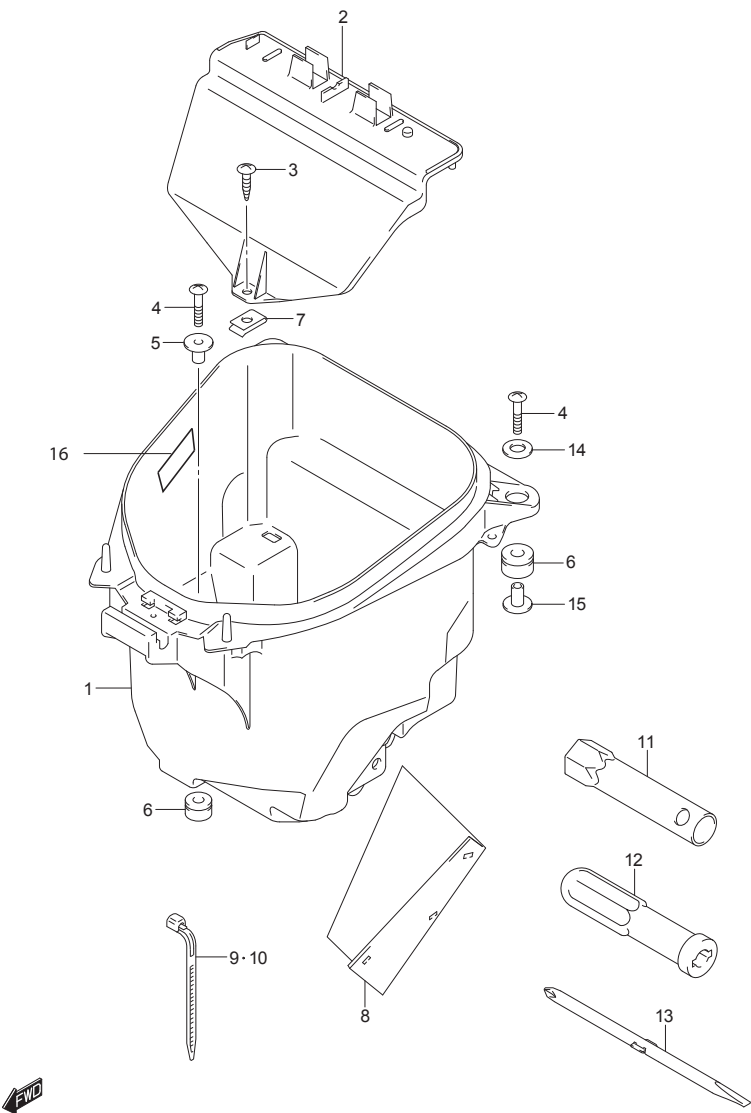


FIG. 43 LUGGAGE BOX

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	92211-22J00-000	BOX, LUGGAGE	1	
2	92212B22J00N000	LID, BATTERY BOX	1	
3	03541-0512B-000	SCREW	1	
4	02142-0630A-000	SCREW	3	
5	92215-20G00-000	SPACER, LUGGAGE BOX	1	
6	92216-45H00-000	CUSHION, LUGGAGE BOX	3	
7	09148-05045-000	NUT	1	
8	92113-22J00-000	MUDGUARD, LUGGAGE BOX	1	
9	09407-14403-000	CLAMP (L:125)	2	
10	09407-18402-000	CLAMP (L:165)	1	
11	96512-10J00-000	SPANNER, BOX (16)	1	
12	09814-00016-000	DRIVER GRIP	1	
13	09814-00030-000	DRIVER	1	
14	09160-06136-000	WASHER (6.5X28X1.6)	2	
15	92215-22J00-000	SPACER	2	
16.1	68311-22JB0-014	LABEL VTA	1	FV115LB
16.2	68311-22JC0-014	LABEL VTA	1	FV115LE

FIG. 44

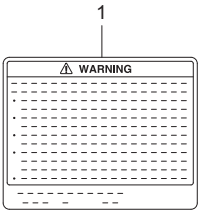


FIG. 44 LABEL

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	68319-22J00-000	LABEL, GENERAL WARNING	1	
2	68332-22J50-000	LABEL, TIRE INFORMATION	1	
3	99011-22J50-08A	MANUAL, OWNER'S	1	

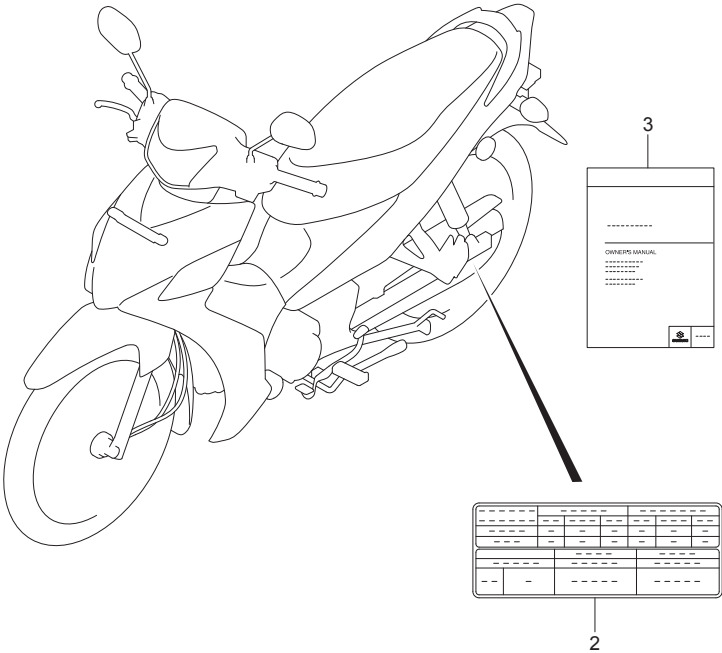


FIG. 45

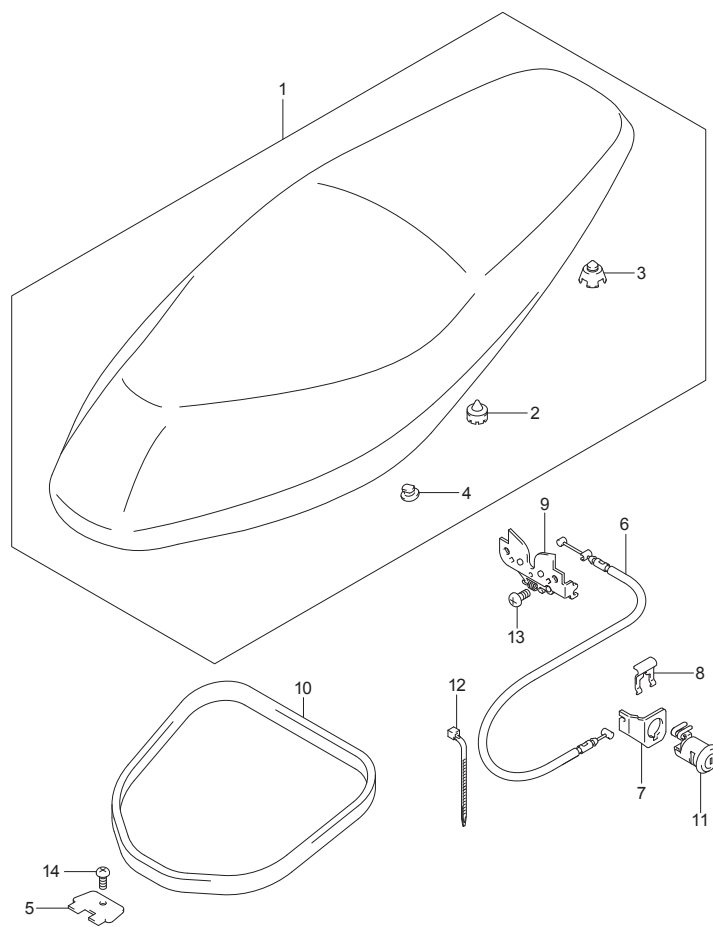


FIG. 45 SEAT

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	45100B22J00NW3A	SEAT ASSY (BLACK)	1	
2	45148B20G70N000	.CUSHION, SEAT MOUNT CENTER	2	
3	45148-13H50-000	.CUSHION, SEAT MOUNT REAR	2	
4	45148-27J00-000	.CUSHION, SEAT MOUNT	3	
5	45271-18J00-000	PLATE, SEAT HINGE	1	
6	45280-45H20-000	CABLE, SEAT LOCK	1	
7	45288-20G00-000	GUIDE, SEAT LOCK CABLE	1	
8	45289-11F00-000	PLATE, SEAT LOCK ASSY	1	
9	45700-47G00-000	BRACKET, STRIKER SUPPORT	1	
10	45211-22J00-000	MOLDING, SEAT	1	
11	95700-14F40-000	LOCK ASSY, SEAT	1	
12	09407-18402-000	CLAMP (L:165)	2	
13	02112-0610A-000	SCREW	2	
14	03541-0516A-000	SCREW	1	

FIG. 46

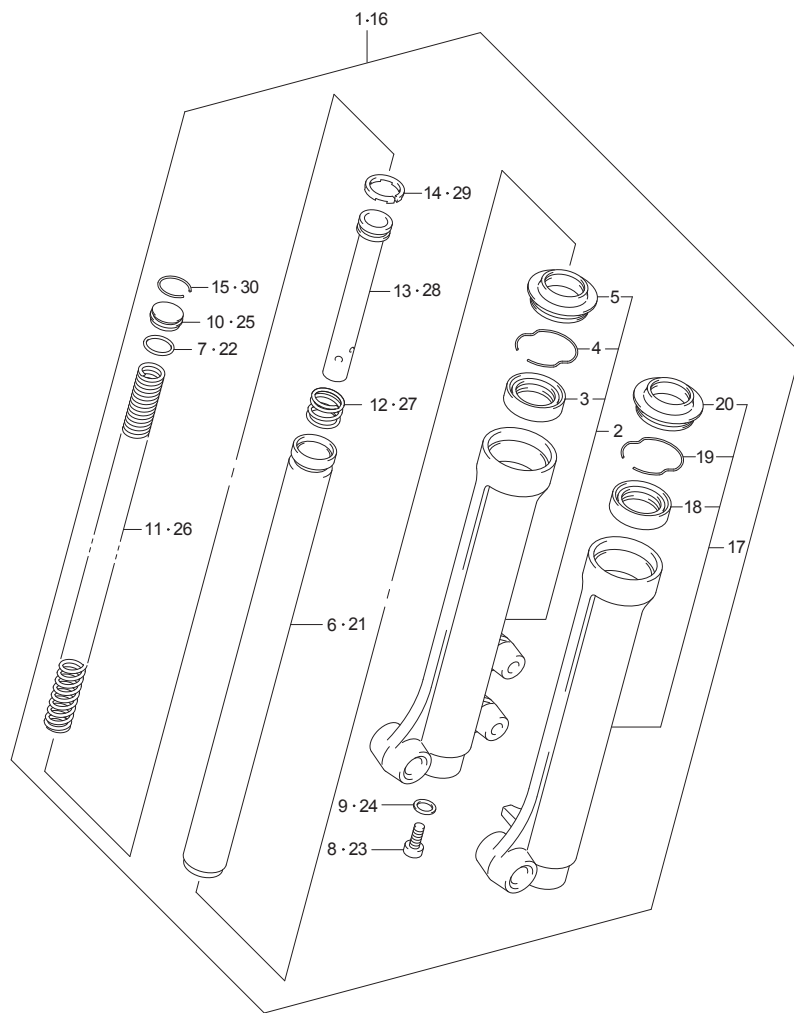


FIG. 46 FRONT FORK DAMPER

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	51103B22J00N000	DAMPER ASSY, FRONT FORK RH	1	
2	51130B22J00N000	.TUBE, OUTER RH	1	
3	51153-23F00-000	..OIL SEAL	1	
4	51156-45H00-000	..RING, SNAP	1	
5	51173-23F00-000	..SEAL, DUST	1	
6	51110B22J00N000	.TUBE, INNER	1	
7	51181-37B00-000	.O RING	1	
8	51147-45H00-000	.BOLT	1	
9	51148B22J00N000	.GASKET	1	
10	51351B22J00N000	.CAP	1	
11	51171B22J00N000	.SPRING	1	
12	51177B22J00N000	.SPRING, REBOUND	1	
13	51146B22J00N000	.CYLINDER	1	
14	51196B22J00N000	.RING	1	
15	51156B13H40N000	.SNAP RING	1	
16	51104B22J00N000	DAMPER ASSY, FRONT FORK LH	1	
17	51140B22J00N000	.TUBE, OUTER LH	1	
18	51153-23F00-000	..OIL SEAL	1	
19	51156-45H00-000	..SNAP RING	1	
20	51173-23F00-000	..SEAL, DUST	1	
21	51110B22J00N000	.TUBE, INNER	1	
22	51181-37B00-000	.O RING	1	
23	51147-45H00-000	.BOLT	1	
24	51148B22J00N000	.GASKET	1	
25	51351B22J00N000	.CAP	1	
26	51171B22J00N000	.SPRING	1	
27	51177B22J00N000	.SPRING, REBOUND	1	
28	51146B22J00N000	.CYLINDER	1	
29	51196B22J00N000	.RING	1	
30	51156B13H40N000	.SNAP RING	1	

FIG. 47

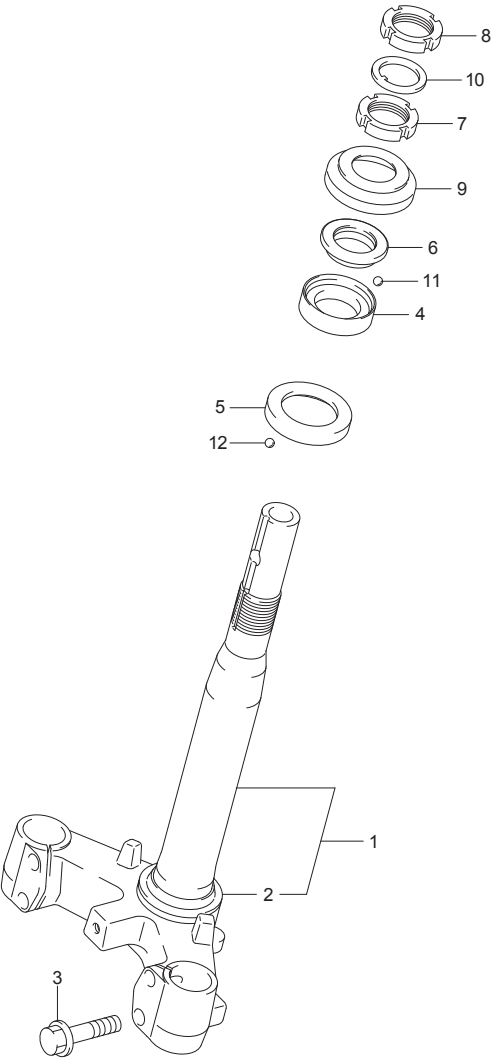


FIG. 47 STEERING STEM

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	51410B22J00N000	BRACKET, UNDER	1	
2	51622-41H00-000	.RACE	1	
3	51451B22J00N000	BOLT	4	
4	51611-41H00-000	RACE, STEERING INNER UPPER	1	
5	51612-41H00-000	RACE, STEERING INNER LOWER	1	
6	51621-41H00-000	RACE, STEERING OUTER UPPER	1	
7	51631-09G00-000	NUT, STEERING STEM	1	
8	51631-09G00-000	NUT, STEERING STEM LOCK	1	
9	51643-06010-000	SEAL, STEERING DUST UPPER	1	
10	09166-24001-000	WASHER (24.5X34X2.3)	1	
11	06111-06004-000	BALL UPPER	23	
12	06111-06004-000	BALL LOWER	28	

4



REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	54111-41H00-000	HUB, FRONT	1	
2	54731-41H00-000	SPACER, FRONT HUB BEARING	1	
3	54742-41H00-000	SEAL, FRONT HUB	1	
4	55311-16H00-000	RIM, FRONT WHEEL (17X1.40)	1	
5	55320-16HA0-000	SPOKE SET, FRONT WHEEL	1	
6	08123-63007-000	BEARING	2	
7	55110M22J00-000	TIRE, FRONT (70/90-17M/C 38P)	1	
8	55200M22J00-000	TUBE ASSY, WHEEL INNER	1	
9	55261M22J00-000	PROTECTOR, WHEEL INNER TUBE	1	
10	54711-13H00-000	AXLE, FRONT	1	
11	54750-46100-000	SPACER, FRONT AXLE RH	1	
12	08319-3110A-000	NUT	1	
13	54600-22J00-000	BOX ASSY, SPEEDOMETER GEAR	1	
14	59211-09G90-000	DISC, FRONT BRAKE	1	
15	59218-09G10-000	BOLT, FRONT BRAKE DISC	4	

FIG. 49

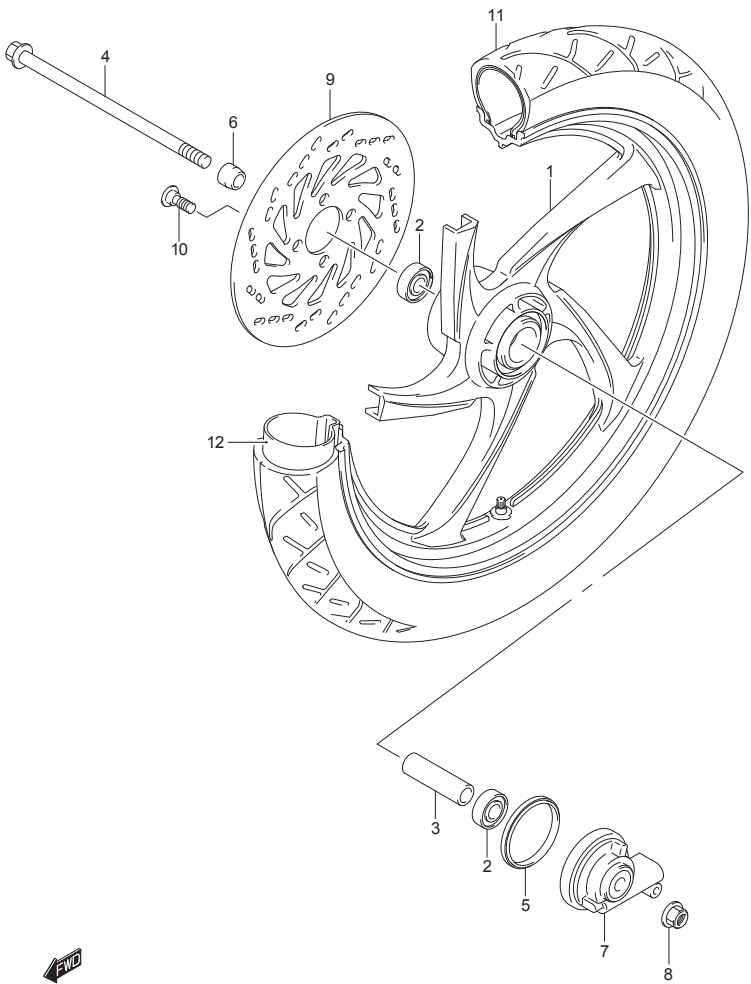


FIG. 49 FRONT WHEEL (FV115LE)

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	54111B45H00N291	WHEEL, FRONT (17X1.40) (BLACK)	1	
2	08123-63007-NTN	BEARING	2	
3	54731-41H00-000	SPACER	1	
4	54711-13H00-000	AXLE, FRONT	1	
5	54742-41H00-000	SEAL, FRONT HUB	1	
6	54750-46100-000	SPACER, FRONT AXLE RH	1	
7	54600-22J00-000	BOX ASSY, SPEEDOMETER GEAR	1	
8	08319-3110A-000	NUT	1	
9	59211-09G90-000	DISC, FRONT BRAKE	1	
10	59218-09G10-000	BOLT, FRONT BRAKE DISC	4	
11	55110M22J00-000	TIRE, FRONT (70/90-17M/C 38P)	1	
12	55200M22J00-000	TUBE ASSY, WHEEL INNER	1	

FIG. 50

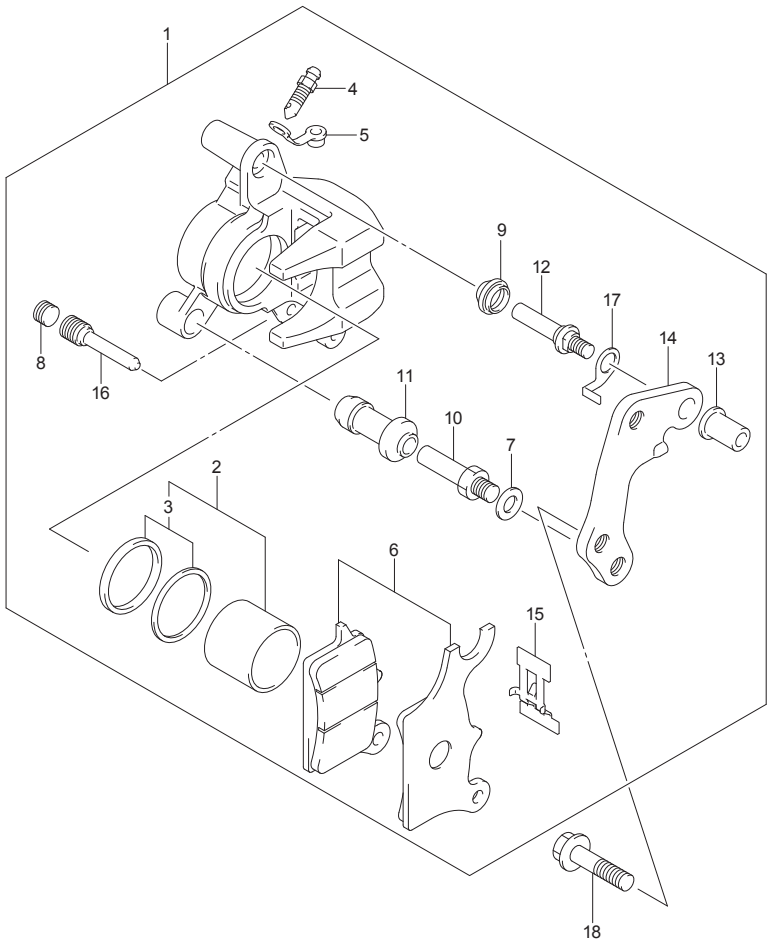


FIG. 50 FRONT CALIPER

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	59100-45H50-000	CALIPER ASSY, FRONT	1	
2	59100-41840-000	.PISTON SET	1	
3	59100-38860-000	..SEAL SET, PISTON	1	
4	59121-01A00-000	.BLEEDER	1	
5	59122-01A00-000	.CAP, BLEEDER	1	
6	59100B41830N000	.PAD SET	1	
7	59314-13A00-000	.WASHER, WAVE	1	
8	59146B21E10N000	.PLUG, PIN	1	
9	59303-14500-000	.BOOT	1	
10	59382-13A00-000	.PIN	1	
11	59386-13A00-000	.BOOT	1	
12	59387-41HA0-000	.PIN	1	
13	59388-41HA0-000	.NUT	1	
14	59351-45H10-000	.BRACKET	1	
15	59115-41HA0-000	.SPRING, PAD	1	
16	59345-41HA0-000	.PIN, HANGER	1	
17	59133-41HA0-000	.RETAINER, BRACKET	1	
18	01550-0835A-000	BOLT	2	

FIG. 51

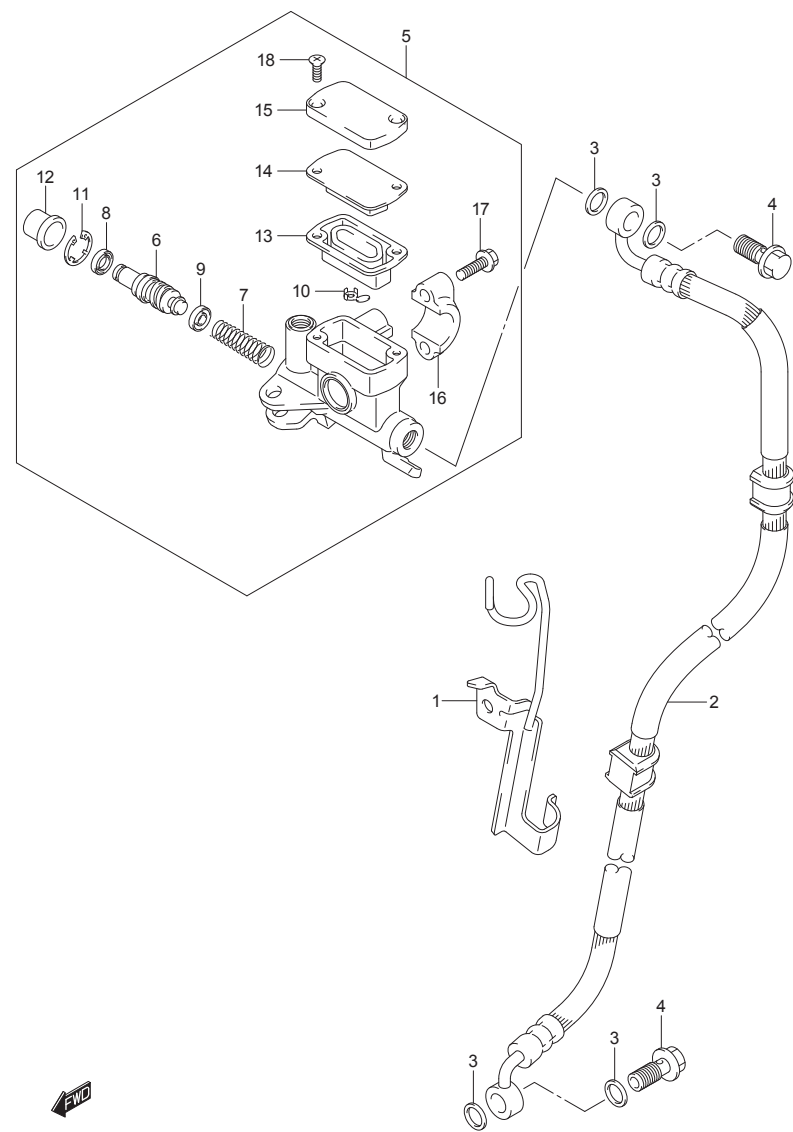


FIG. 51 FRONT MASTER CYLINDER

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	59260-22J00-000	CLAMP, FR BRAKE HOSE	1	
2	59480-22J10-000	HOSE, FRONT BRAKE	1	
3	09168-10033-000	WASHER (10.2X15X1.4)	4	
4	59492-22J10-000	BOLT, BRAKE FLUID	2	
5	59600-22J10-000	CYLINDER ASSY, FRONT MASTER	1	
6	59611-36500-000	.PISTON	1	
7	59621-36500-000	.SPRING	1	
8	59662-21D00-000	.CUP, SECONDARY	1	
9	59663-21D00-000	.CUP, PRIMARY	1	
10	59664-32F00-000	.PROTECTOR	1	
11	59665-36500-000	.CIRCLIP	1	
12	59666-44300-000	.BOOT	1	
13	69667B01H00N000	.DIAPHRAGM	1	
14	69668B01H00N000	.PLATE, DIAPHRAGM	1	
15	59669-22J00-000	.CAP	1	
16	59671-27C00-000	.HOLDER	1	
17	59675-06F10-000	.BOLT	2	
18	69689-49300-000	.SCREW	2	

FIG. 52

4

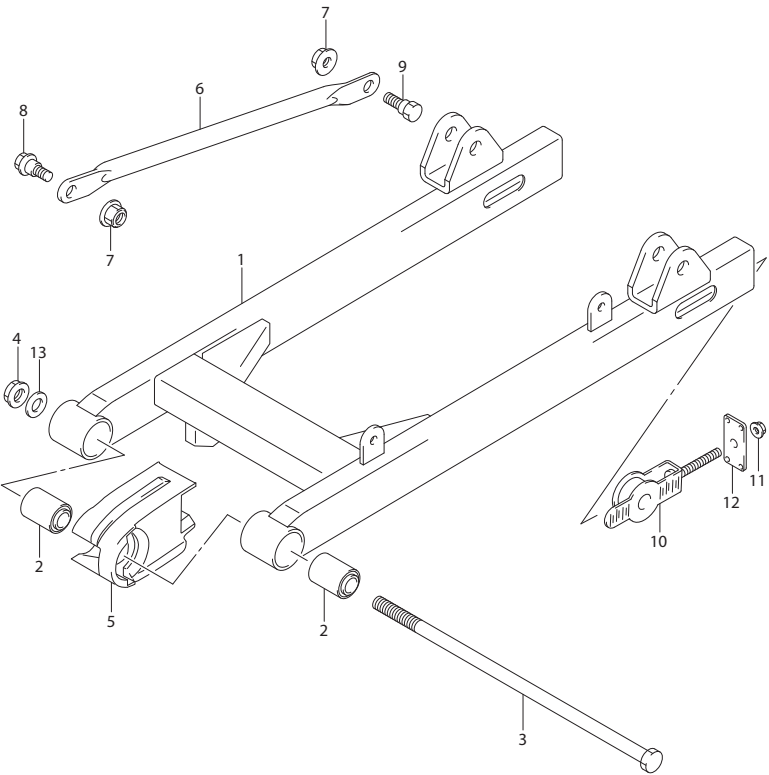


FIG. 52 REAR SWINGINGARM

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	61100B22J10N291	SWINGINGARM, REAR (BLACK)	1	
2	08319-3106A-000	BUSHING	2	
3	61230B22J00N000	SHAFT, REAR SWINGINGARM	1	
4	61211B22J00N000	NUT	1	
5	08319-3112B-000	BUFFER, CHAIN TOUCH DEFENSE	1	
6	61273-22J00-000	TORQUELINK, REAR	1	
7	64310-45H00-000	NUT	2	
8	08319-3108A-000	BOLT, FRONT	1	
9	64321-45H00-000	BOLT, REAR	1	
10	64331-45H00-000	ADJUSTER, CHAIN	2	
11	61410-20G30-000	NUT	2	
12	61421-20G00-000	GUIDE, CHAIN ADJUSTER	2	
13	09160-12118-000	WASHER (12X27X2)	1	

FIG. 53

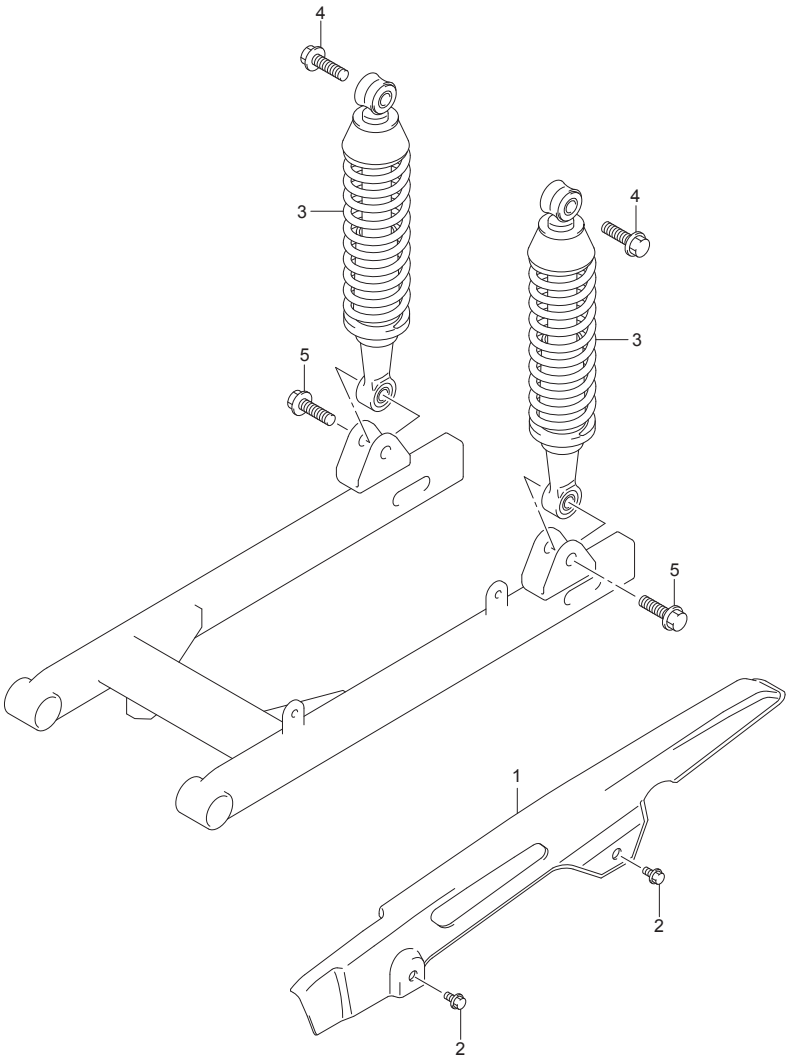


FIG. 53 CHAIN CASE

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	61311B22J00N000	CASE, CHAIN	1	
2	09111-06107-000	BOLT (6X12)	2	
3	62100B22J00N019	ABSORBER ASSY, REAR SHOCK(BLACK)	2	
4	01550-1035A-000	BOLT	2	
5	09103-10229-000	BOLT (10X32)	2	

4

FIG. 54

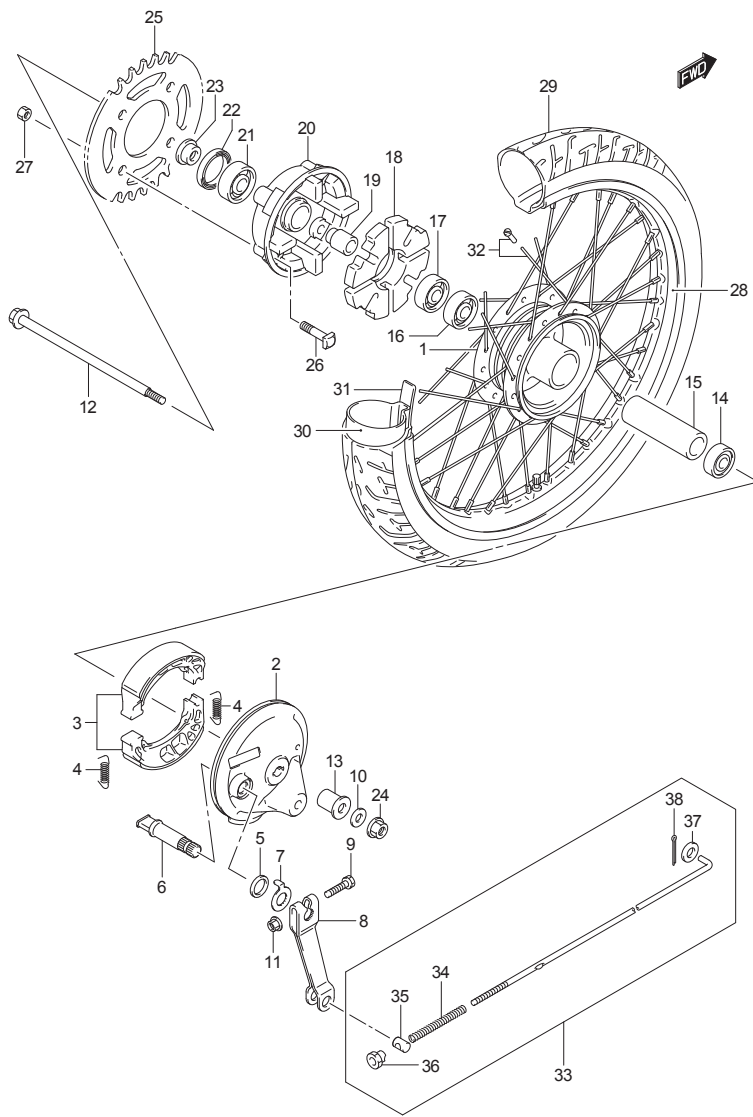


FIG. 54 REAR WHEEL (FV115LE)

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	64110-07H00-000	HUB, REAR WHEEL	1	
2	64210-45H10-13L	PANEL, REAR BRAKE ANCHOR(SILVER)	1	
3	54400-09830-000	SHOE, REAR BRAKE	2	
4	54424-09G00-000	SPRING	2	
5	54443-09G00-000	SEAL, DUST	1	
6	64441-09G00-000	SHAFT, BRAKE CAM	1	
7	54492-09G00-000	PLATE, BRAKE LINING	1	
8	64451-09G00-000	LEVER, BRAKE CAM	1	
9	09100-06078-000	BOLT (6X33)	1	
10	09160-12085-000	WASHER (12.5X26X2.3)	2	
11	54494-09G00-000	NUT	1	
12	64711-31C20-000	AXLE, REAR	1	
13	64741-07H00-000	SPACER, REAR AXLE RH	1	
14	08140-63017-000	BEARING RH	1	
15	09180-12143-000	SPACER (12.5X19X48)	1	
16	08140-62017-000	BEARING LH	1	
17	08110-62017-000	BEARING LH	1	
18	64651-45H00-000	ABSORBER, REAR HUB SHOCK	1	
19	64733-43000-000	RETAINER, REAR SPROCKET DRUM	1	
20	64611-22J00-000	DRUM, SPROCKET MOUNTING	1	
21	08113-62037-000	BEARING	1	
22	09285-25L01-000	OIL SEAL (24X40X6)	1	
23	64721-20G00-000	SPACER, RR SPROCKET DRUM	1	
24	08319-3112A-000	NUT	1	
25	64511-22J00-000	SPROCKET, REAR (NT:37)	1	
26	09105-08011-000	BOLT (8X36)	4	
27	08319-3108A-000	NUT	4	
28	65311-16H30-000	WHEEL RIM (17X1.60)	1	
29	65110-22J00-000	TIRE, REAR (80/90-17M/C 50P)	1	
30	65200-22J00-000	TUBE ASSY, INNER	1	
31	65261-22J00-000	PROTECTOR, INNER TUBE	1	
32	65320B45HB0N000	SPOKE SET, REAR WHEEL	1	
33	43300-22J00-000	ROD ASSY, REAR BRAKE	1	
34	09440-09004-000	.SPRING	1	
35	09209-11002-000	.PIN (11X18)	1	
36	09150-06010-000	.NUT	1	
37	08322-0105A-000	.WASHER	1	
38	04111-2020A-000	.PIN	1	

FIG. 55

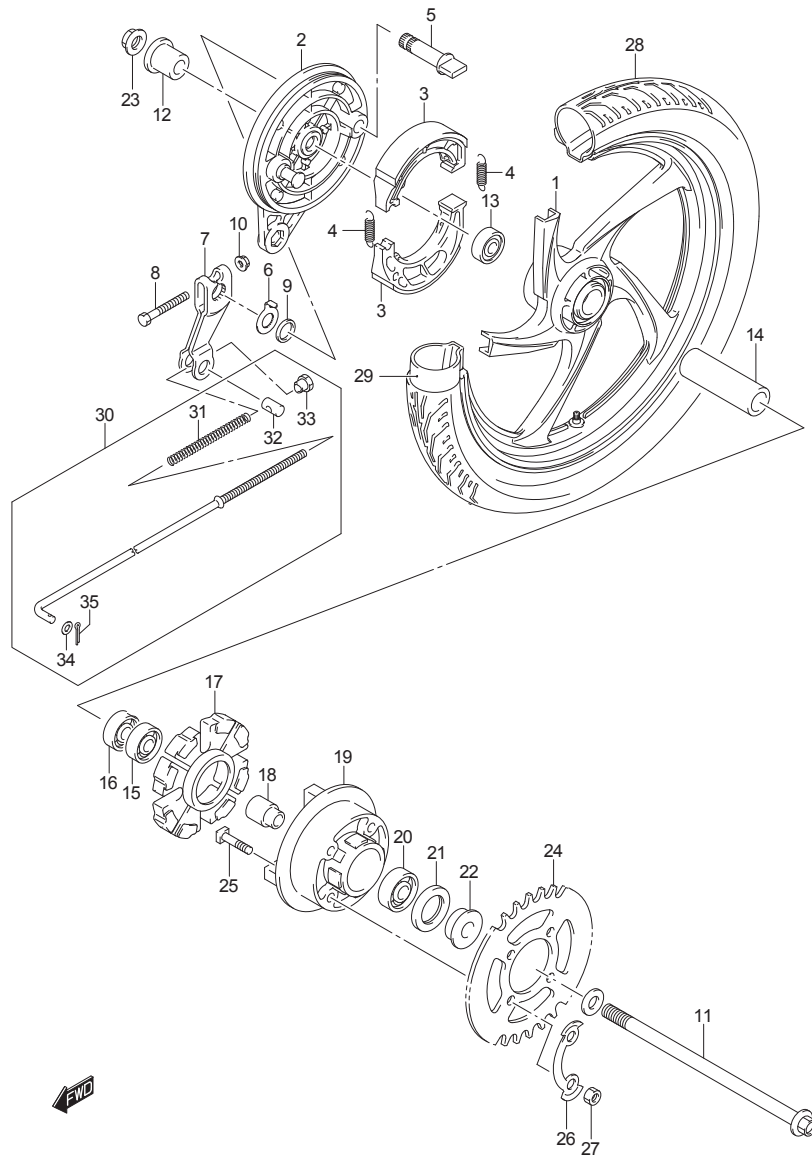


FIG. 55 REAR WHEEL (FV115LE)

REF.NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	64150-45H00-291	WHEEL, REAR (17X1.60) (BLACK)	1	
2	64210-45H10-291	PANEL, REAR BRAKE ANCHOR(BLACK)	1	
3	54400-09830-000	SHOE, BRAKE	2	
4	54424-09G00-000	SPRING	2	
5	64441-09G00-000	SHAFT, BRAKE CAM	1	
6	54492-09G00-000	PLATE, BRAKE LINING	1	
7	64451-09G00-000	LEVER, BRAKE CAM	1	
8	09100-06078-000	BOLT (6X33)	1	
9	54443-09G00-000	SEAL, REAR BRAKE CAM DUST	1	
10	54494-09G00-000	NUT	1	
11	64711-31C20-000	AXLE, REAR	1	
12	64741-07H00-000	SPACER, REAR AXLE RH	1	
13	08143-63017-000	BEARING RH	1	
14	09180-12143-000	SPACER (12.5X19X48)	1	
15	08143-62017-000	BEARING LH	1	
16	08113-62017-000	BEARING LH INNER	1	
17	64651-45H00-000	ABSORBER, REAR HUB SHOCK	1	
18	64733-43000-000	RETAINER, REAR SPROCKET DRUM	1	
19	64611-22J00-000	DRUM, SPROCKET MOUNTING	1	
20	08113-62037-000	BEARING	1	
21	09285-25L01-000	OIL SEAL (24X40X6)	1	
22	64721-20G00-000	SPACER, RR SPROCKET DRUM	1	
23	08319-3112A-000	NUT	1	
24	64511-22J00-000	SPROCKET, REAR (NT:37)	1	
25	09105-08011-000	BOLT (8X36)	4	
26	09160-12085-000	WASHER (12.5X26X2.3)	2	
27	08319-3108A-000	NUT	4	
28	65110-22J00-000	TIRE, REAR (80/90-17M/C 50P)	1	
29	65200-22J00-000	TUBE ASSY, INNER	1	
30	43300-22J00-000	ROD ASSY, REAR BRAKE	1	
31	09440-09004-000	.SPRING	1	
32	09209-11002-000	.PIN (11X18)	1	
33	09150-06010-000	.NUT	1	
34	08322-0105A-000	.WASHER	1	
35	04111-2020A-000	.PIN	1	

4

4