

SUZUKI

PARTS CATALOGUE

GSR750AL5

(JS1C5112)



Way of Life!

E99

2014-7

1ST EDITION

PREFACE

When it becomes necessary to replace parts on SUZUKI MOTORCYCLES, always use SUZUKI GENUINE PARTS which have passed a strict inspection which guarantees quality and performance.

This parts catalogue covers the list of all service parts for SUZUKI GSR750ALS.

INSTRUCTIONS FOR QUOTING THE CATALOGUE

1. DIMENSIONS

Dimensions of the parts in this catalogue are indicated in unit millimeters.

2. ABBREVIATIONS

Abbreviations used in this catalogue are as follows:

AR	: As required	NT	: Number of teeth
ASSY	: Assembly	OPT	: Optional
E. NO.	: Engine number	OS	: Over size
F. NO.	: Frame number	STD	: Standard
D	: Diameter of material	T	: Thickness
ID	: Inside diameter	US	: Under size
OD	: Outside diameter	W	: Width
L	: Length		
LH	: Left hand side		
RH	: Right hand side		
—100045	: Up to F. NO. 100045		
100045—	: From F. NO. 100046		
12 x 34 x 5.5	: Figures in the description column		
	: show the dimensions of parts.		
ID OD T (or R.L.)			

—12345-56789 (Parts No.) : indicates that the parts number was changed to 12345-56789 and the new parts are interchangeable with the former ones but the former ones are not interchangeable with new ones.

—12345-56789 (Parts No.) : indicates that the former and new parts are interchangeable with each other and both are usable.

3. INNER PARTS OF ASSEMBLY

Part name with a dot (.) in front as shown in the description column indicates the component of the assembly also available individually.

4. MODIFICATION NOTICE

A parts bulletin will be sent to you on all occasions when changes in parts occur, including interchangeable modifications between new parts and old ones.

5. NOTE

5-1. There are some different parts from those of production models among spare parts for the administrative reasons and common use of them with other models.

5-2. In respect of rubber hoses and vinyl tubes, please be sure to use them by cutting off according to the length mentioned on parts catalogue or what is actually required on the vehicle.

5-3. Note that the drawings on the illustration page are for ready reference of spare parts number, not to be used as an assembly manual. When assembling, use "SUZUKI SERVICE MANUAL".

6. SPECIFICATION CODE

This catalogue contains the parts for the model designed for the following spec. :
spec. code : E99.

7. SERIAL FRAME NUMBER

GSR750ALS (E99) : JS1C51123F0100001~

COLOR CHART
TABLEAU DES COULEURS

COLOR NO. NO DE COULEUR	COLOR DESCRIPTION DESCRIPTION DE COULEUR	COLOR NO. NO DE COULEUR	COLOR DESCRIPTION DESCRIPTION DE COULEUR
AH8	YB3,YWW		
AJX	PRL GLACIER WHITE		
A39	YB3,YKV		
CTY	YD8,YKV		
DW2	P3H,8BY		
PGZ	MET MAT FIBROIN GRAY		
P3H	BLACK (LEATHER)		
YAP	SHADOW BLACK METALLIC		
YB3	HAIRLINE CHROME BLACK METALLIC		
YD8	SONIC SILVER METALLIC		
YKV	MET MAT BLACK NO.2		
YMC	MAT TITANIUM SILVER METALLIC		
YU8	FLINT GRAY METALLIC		
YWW	PEARL GLACIER WHITE		
018	BLACK		
17U	GRAY METALLIC		
291	BLACK (SEMI-GLOSS)		
4TX	MAT BLACK METALLIC NO.2		
6ES	OFF BLACK		
6PK	BLACK		
8BY	BLACK		

[illegible]

MILLIMETER → INCH CONVERSION CHART


	0	1	2	3	4	5	6	7	8	9
00	.000	.009	.018	.027	.036	.045	.054	.063	.072	.081
10	.090	.100	.109	.118	.127	.136	.145	.154	.163	.172
20	.181	.190	.199	.208	.217	.226	.235	.244	.253	.262
30	.271	.280	.289	.298	.307	.316	.325	.334	.343	.352
40	.361	.370	.379	.388	.397	.406	.415	.424	.433	.442
50	.451	.460	.469	.478	.487	.496	.505	.514	.523	.532
60	.541	.550	.559	.568	.577	.586	.595	.604	.613	.622
70	.631	.640	.649	.658	.667	.676	.685	.694	.703	.712
80	.721	.730	.739	.748	.757	.766	.775	.784	.793	.802
90	.811	.820	.829	.838	.847	.856	.865	.874	.883	.892


How to read


	0	1	2	3	4
00	...	...	...	...	...
10	...	...	...	...	...
20	...	...	...	0.906	...
30	...	...	...	...	...



 23 millimeters equal 0.906 inch


Contents are subject to change without notice or obligation.

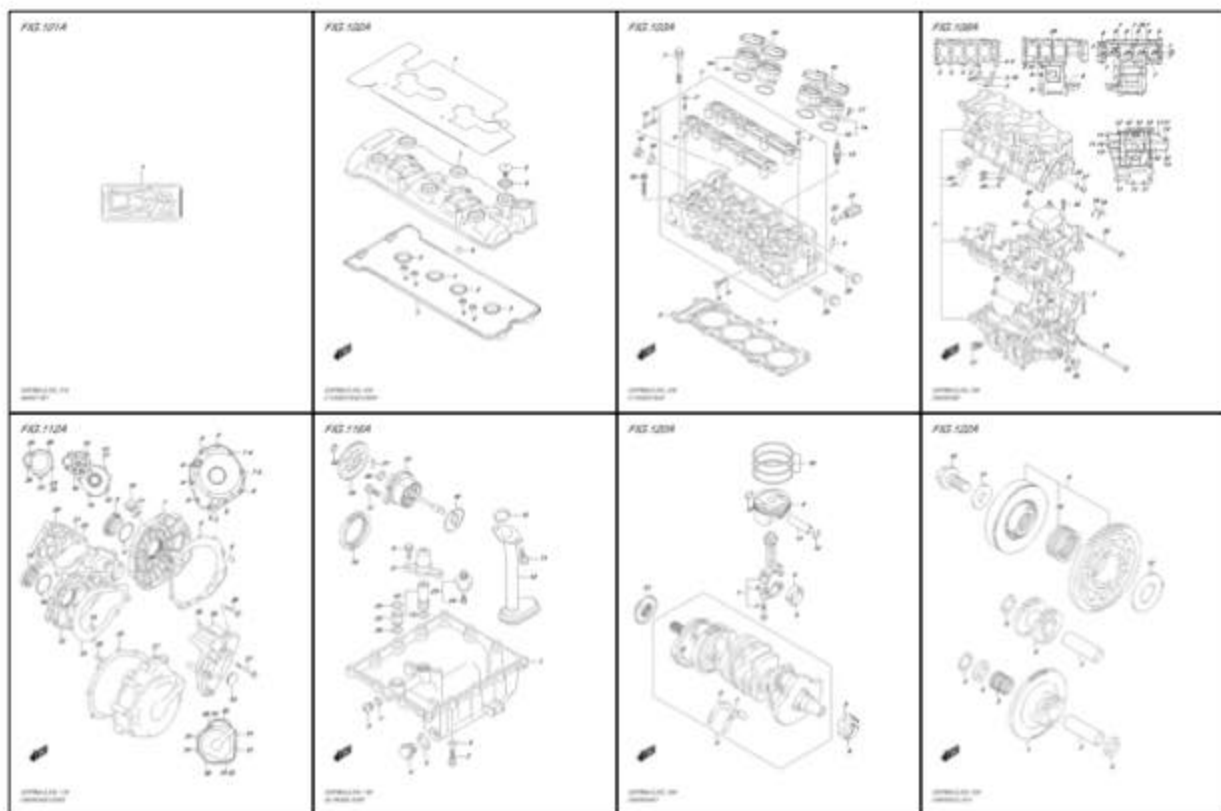

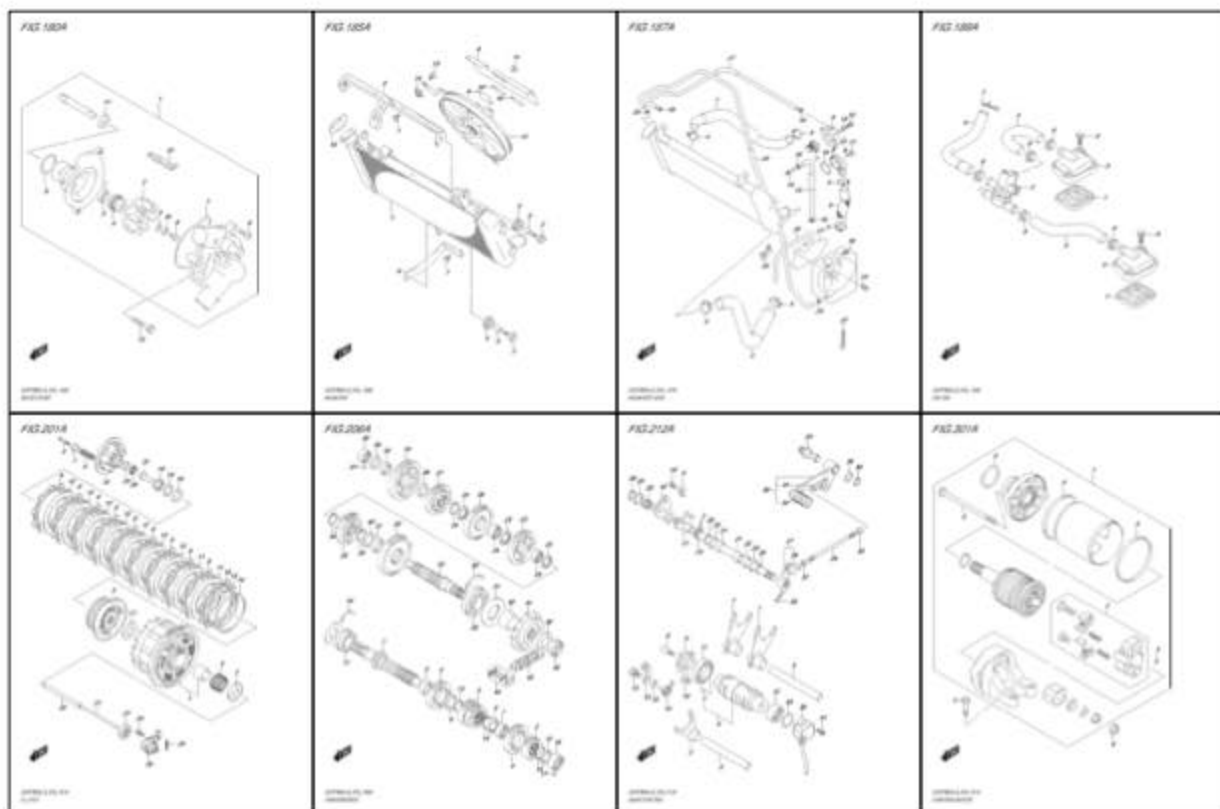

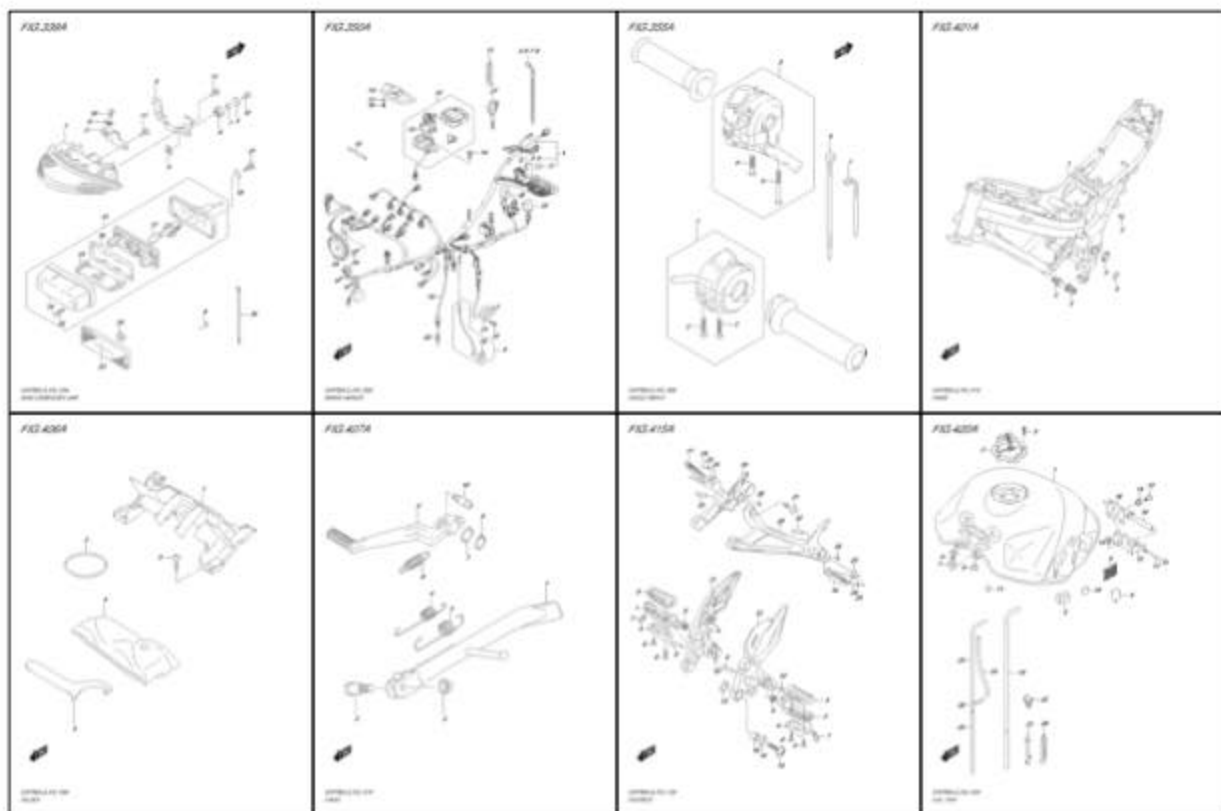

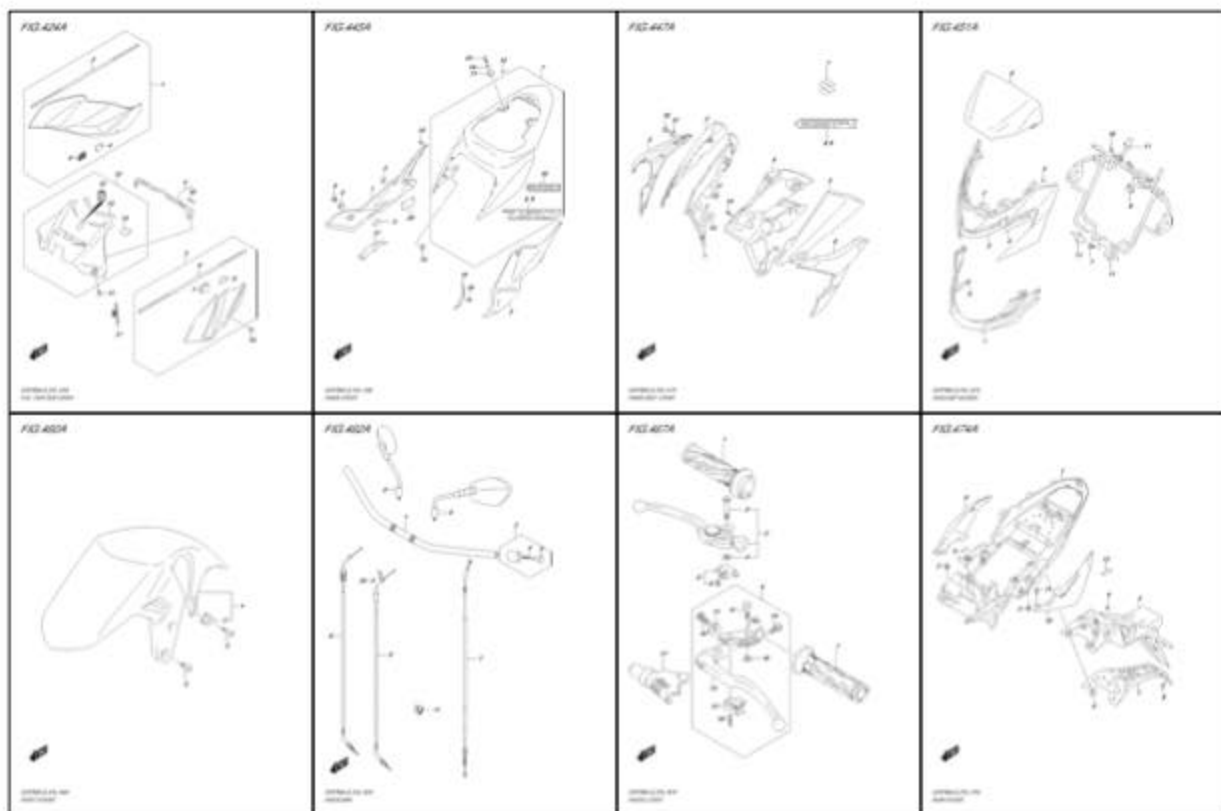

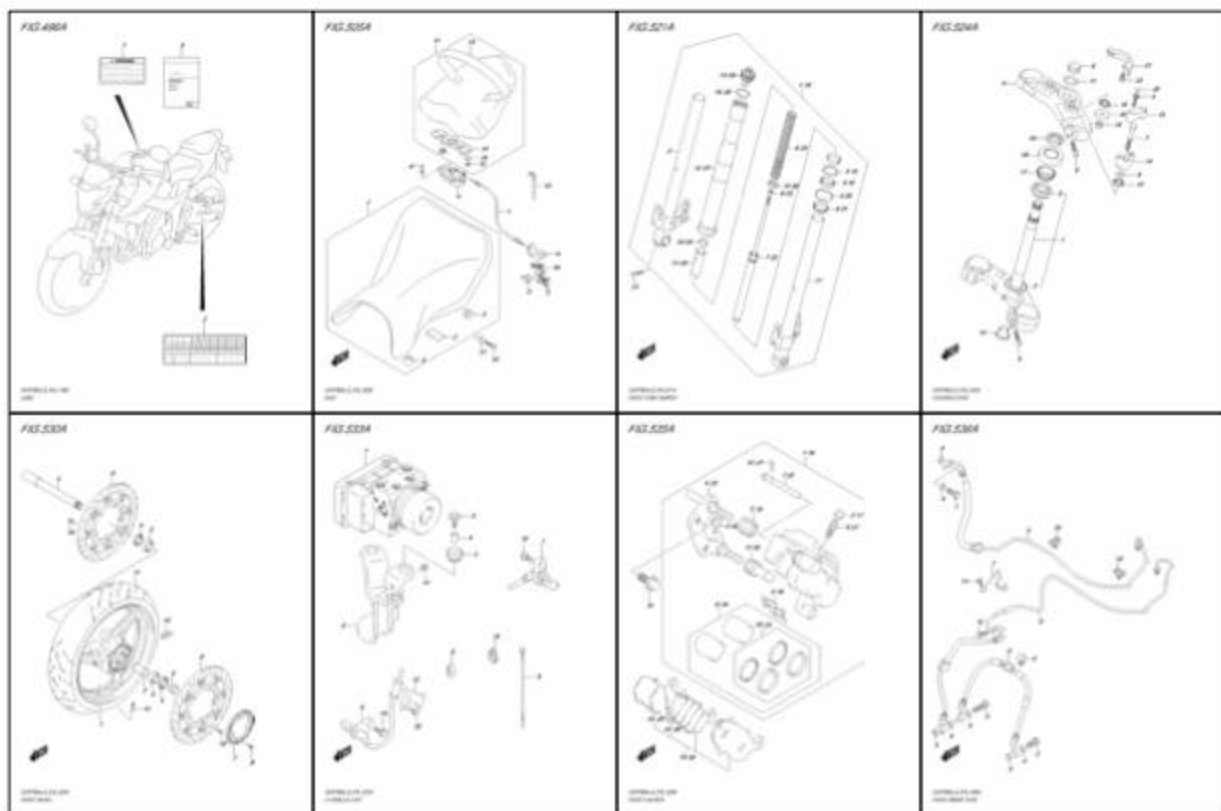


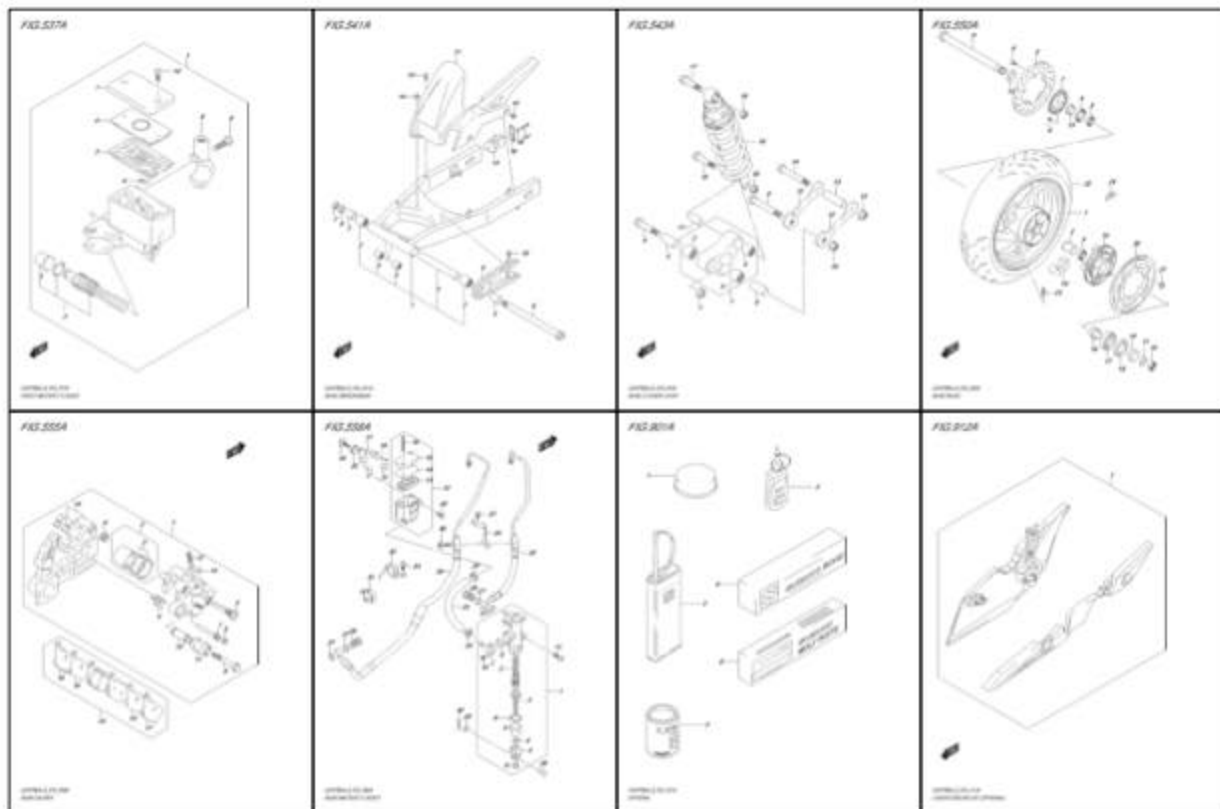


FIG. 2148

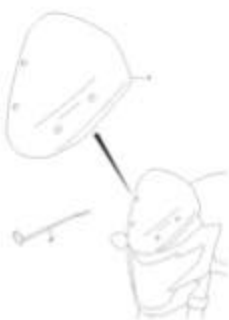

Copyright 1914
 by the
 United States Patent Office

FIG.101A

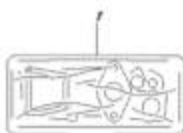


FIG.101A (1-B-2) GASKET SET

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	11401-08831	GASKET SET	1	OPT
2	11141-35F00	GASKET, CYLINDER HEAD	1	NOT ILLUSTRATED
3	11173-35F00	GASKET, CYL HEAD COVER NO.1	1	NOT ILLUSTRATED
4	11178-33E00	GASKET, CYL HEAD COVER NO.2	4	NOT ILLUSTRATED
5	11182-35F10	GASKET, 2ND AIR PASSAGE	4	NOT ILLUSTRATED
6	11482-40F10	GASKET, CLUTCH COVER	1	NOT ILLUSTRATED
7	11483-19Q00	GASKET, MAGNETO COVER	1	NOT ILLUSTRATED
8	11491-33E02	GASKET, STARTER CLUTCH COVER	1	NOT ILLUSTRATED
9	11492-33E00	GASKET, STARTER IDLE GEAR CAP	1	NOT ILLUSTRATED
10	12837-02H00	GASKET, TENSIONER ADJUSTER	1	NOT ILLUSTRATED
11	14181-46E00	GASKET, EXHAUST PIPE	4	NOT ILLUSTRATED

FIG.102A


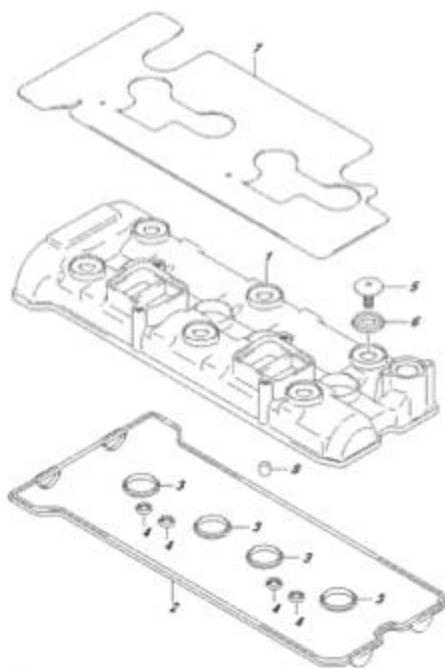


FIG.102A (1-B-3) CYLINDER HEAD COVER

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	11171-35F10	COVER, CYLINDER HEAD	1	
2	11173-35F00	GASKET, CYL HEAD COVER NO.1	1	
3	11178-33E00	GASKET, CYL HEAD COVER NO.2	4	
4	11182-35F10	GASKET, 2ND AIR PASSAGE	4	
5	09106-07009	BOLT (7X17.5)	6	
6	11191-27E00	WASHER	6	
7	11179-08J00	SHIELD, CYLINDER HEAD COVER	1	
8	09206-10016	PIN (8.2X18X13)	4	

FIG. 103A

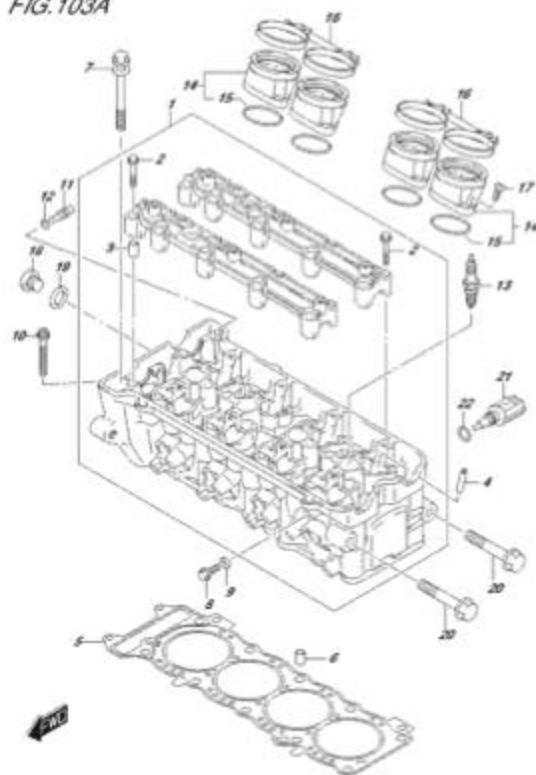


09103A_E, 09110A
CYLINDER HEAD

FIG. 103A (1-B-4) CYLINDER HEAD

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	11100-08J00	HEAD ASSY, CYLINDER	1	
2	09103-06266	BOLT (8X4)	20	
3	09206-08007	PIN (8.2X8X16)	4	
4	11115-11D70	GUIDE, VALVE (OS 0.3)	16	OPT
5	11141-35F00	GASKET, CYLINDER HEAD	1	
6	04211-11169	PIN	2	
7	11117-30C00	BOLT, CYLINDER HEAD (L-106)	10	
8	09103-06222	BOLT (8X12)	1	
9	09168-06023	GASKET (5.8X13X1.2)	1	
10	07120-0650A	BOLT	2	
11	09493-80005	JET (R)	1	
12	09280-04004	O RING (D:1.2/D:4)	1	
13-1	09482-00557	SPARK PLUG (JUZ7D)	4	DENSO
13-2	09482-00558	SPARK PLUG (CR8EA-9)	4	NGK
13-3	09482-00555	SPARK PLUG (JUZ4D)	4	OPT
				DENSO
13-4	09482-00556	SPARK PLUG (CR8EA-9)	4	OPT
				NGK
13-5	09482-00559	SPARK PLUG (JUZ1D)	4	OPT
				DENSO
13-6	09482-00560	SPARK PLUG (CR10EA-9)	4	OPT
				NGK
14	13101-08J00	PIPE ASSY, INTAKE	4	
15	09280-40010	O RING (D:2.4/D:39.7)	4	
16	13170-08J00	CLAMP, INTAKE PIPE	2	
17	02122-0616B	SCREW	8	
18	09248-18012	PLUG (16X8)	1	
19	09168-18009	GASKET (18X22X0.8)	1	
20	09103-10235	BOLT (10X30)	3	
21	13650-48X00	SENSOR, WATER TEMPERATURE	1	
22	09168-12017	GASKET (12X17X1)	1	

091750AL5_E99

FIG. 108A

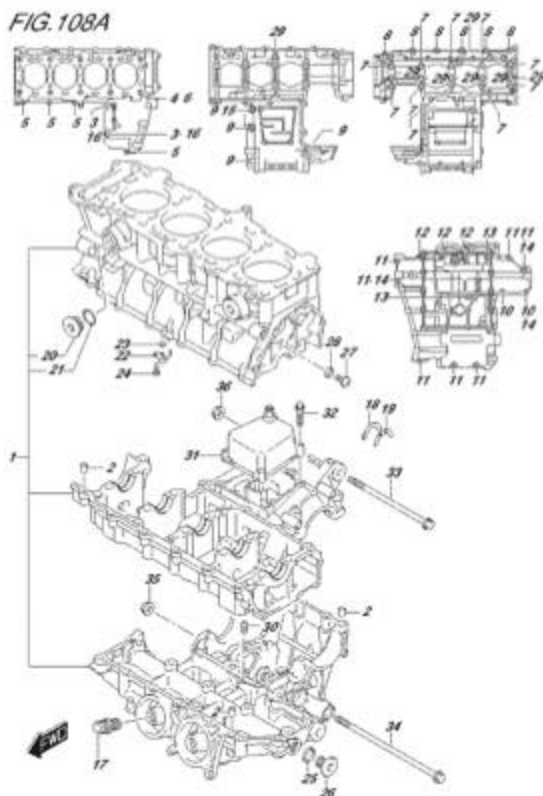


CRANKCASE ASSY
CRANKCASE

FIG. 108A (1-B-5) CRANKCASE

REF NO	PART NO	DESCRIPTION	QTY	REMARKS
1	11300-06810	CRANKCASE ASSY	1	
2	11319-33E50	PIN	6	
3	09106-06139	BOLT (8X12)	2	
4	09168-06023	GASKET (5.8X13X1.2)	1	
5	01547-0640A	BOLT	4	
6	01547-0680A	BOLT	1	
7	09103-09012	BOLT (3X6)	10	
8	01547-0640A	BOLT	6	
9	07120-0865A	BOLT	4	
10	01547-0630A	BOLT	2	
11	01547-0640A	BOLT	7	
12	01547-0660A	BOLT	3	
13	01547-0670A	BOLT	2	
14	09168-06023	GASKET (5.8X13X1.2)	3	
15	09168-08016	GASKET (6.2X14X1)	1	
16	09168-08016	GASKET (6.2X14X1)	2	
17	16591-06801	UNION, OIL FILTER STAND	1	
18	12228-17E00-0D0	BEARING, THRUST RH (GREEN)	1	
19-1	12228-17E00-0A0	BEARING, THRUST LH (RED)	1	
19-2	12228-17E00-0B0	BEARING, THRUST LH (BLACK)	1	
19-3	12228-17E00-0C0	BEARING, THRUST LH (BLUE)	1	
19-4	12228-17E00-0D0	BEARING, THRUST LH (GREEN)	1	
19-5	12228-17E00-0E0	BEARING, THRUST LH (YELLOW)	1	
19-6	12228-17E00-0F0	BEARING, THRUST LH (WHITE)	1	
20	11318-35F00	PLUG, WATER JACKET	3	
21	09280-20002	O RING (D:3.1, D:19.4)	3	
22	11390-35F00	JET, PISTON COOLING	4	
23	09280-04004	O RING (D:1.2, D:4)	4	
24	09106-06075	BOLT (8X12)	4	
25	09168-16002	GASKET (16X22X2)	3	
26	09248-16013	PLUG	3	
27	09248-10010	PLUG (10X10)	1	
28	09168-10002	GASKET (10X14X3.6)	1	
29	09280-08012	O RING (D:1.9, D:7.8)	7	
30	09493-28012	JET, 140	1	

GSR750AL5_E99

FIG.108A

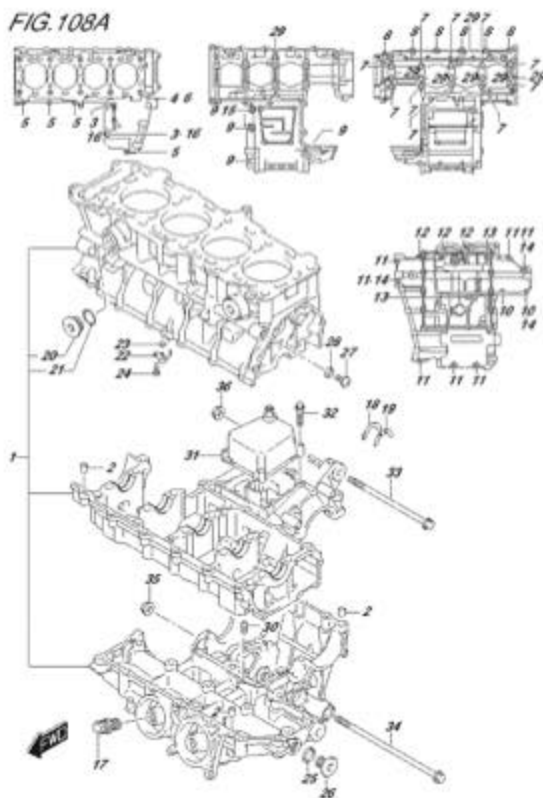


QSR750AL5_E99_108A
CRANKCASE

FIG.108A (1-B-6) CRANKCASE

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
31	11370-44000	COVER, BREATHER	1	
32	01547-0635A	BOLT	4	
33	09103-10456	BOLT	1	
34	09103-10137	BOLT (10X255)	1	
35	09159-10115	NUT	1	
36	09159-10123	NUT	1	

QSR750AL5_E99

FIG. 112A

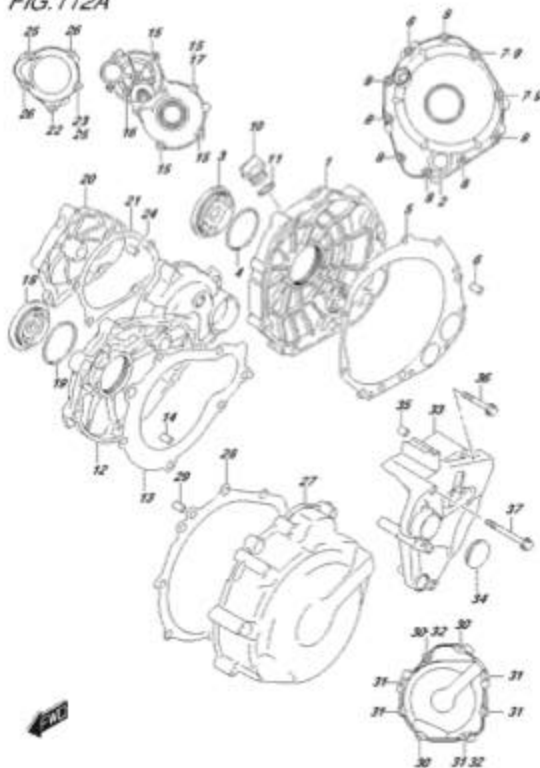


000700AL5_E99_1/04
CRANKCASE COVER

FIG. 112A (1-B-7) CRANKCASE COVER

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	11340-44G10	COVER, CLUTCH	1	
2	11971-33210	LENS, OIL LEVEL CHECK	1	
3	11342-41G10	CAP, CLUTCH RELEASE ADJUST	1	
4	31156-17E00	O RING	1	
5	11482-40F10	GASKET, CLUTCH COVER	1	
6	04211-09189	PIN	2	
7	09168-06023	GASKET (5.6X13X1.2)	2	
8	09103-06213	BOLT (EX30)	8	
9	09103-06215	BOLT (EX40)	2	
10	11971-25D00	PLUG, ENGINE OIL FILLER	1	
11	09280-17003	O RING (D:3.1/D:16.8)	1	
12	11381-35F10	COVER, STARTER CLUTCH	1	
13	11491-33E02	GASKET, STARTER CLUTCH COVER	1	
14	04211-09149	PIN	2	
15	09103-06212	BOLT (EX25)	4	
16	09103-06214	BOLT (EX35)	1	
17	09168-06023	GASKET (5.6X13X1.2)	1	
18	09259-36021	PLUG	1	
19	09280-33004	O RING (D:3.1/D:32.7)	1	
20	11382-33E10	CAP, STARTER IDLE GEAR	1	
21	11492-33E00	GASKET, STARTER IDLE GEAR CAP	1	
22	09103-06216	BOLT (EX55)	1	
23	09168-06023	GASKET (5.6X13X1.2)	1	
24	04211-09149	PIN	2	
25	09103-06212	BOLT (EX25)	2	
26	09103-06214	BOLT (EX35)	2	
27	11351-18G20	COVER, MAGNETO	1	
28	11483-18G00	GASKET, MAGNETO COVER	1	
29	04211-09149	PIN	2	
30	09103-06213	BOLT (EX30)	3	
31	09103-06224	BOLT (EX45)	5	
32	09168-06023	GASKET (5.6X13X1.2)	2	

000750AL5_E99

FIG. 112A

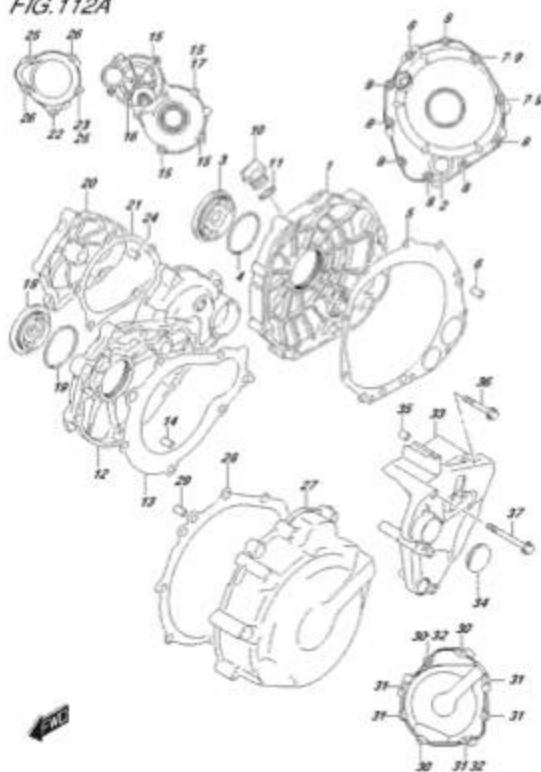


000704L5_EPR_1/04
CRANKCASE COVER

FIG. 112A (1-B-8) CRANKCASE COVER

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
33	11961-06J00	COVER, ENGINE SPROCKET	1	
34	09250-30003	CAP (CO.36)	1	
35	04211-09129	PIN	2	
36	01547-0665A	BOLT	2	
37	01547-0695A	BOLT	2	

00R750AL5_E99

FIG. 116A

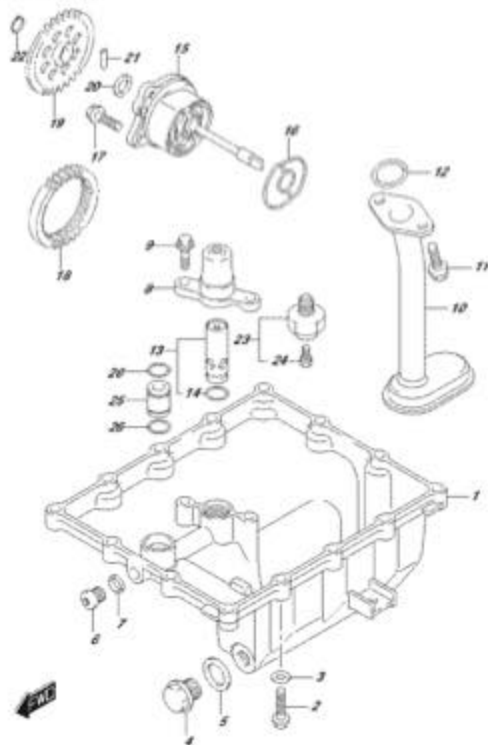


0017050AL5_E99 / 116A
OIL PAN/OIL PUMP

FIG. 116A (1-B-9) OIL PAN/OIL PUMP

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	11511-08J00	PAN, OIL	1	
2	01547-0625A	BOLT	14	
3	09168-06023	GASKET (5.6X13X1.2)	2	
4	09247-14036	PLUG (14X20)	1	OIL DRAIN
5	09168-14002	GASKET (13.8X18.6X4.8)	1	
6	09248-10010	PLUG (10X10)	1	
7	09168-10002	GASKET (10X14X3.6)	1	
8	11512-44G00	CAP. OIL RELIEF VALVE	1	
9	01547-0620A	BOLT	2	
10	16520-44G00	STRAINER ASSY, ENGINE OIL	1	
11	01550-0616A	BOLT	2	
12	09280-19008	O RING (D:2.62/D:20.3)	1	
13	16440-24F00	VALVE ASSY, OIL RELIEF	1	
14	09280-13004	O RING (D:1.9/D:13)	1	
15	16400-35F00	PUMP ASSY, ENGINE OIL	1	
16	16491-35F00	O RING	1	
17	01547-0620A	BOLT	3	
18	16321-35F01	GEAR, OIL PUMP DRIVE (NT:35)	1	
19	16331-35F00	GEAR, OIL PUMP DRIVEN (NT:35)	1	
20	09181-10158	SHIM (10X18X0.5)	1	
21	09261-04009	PIN (4X15.8)	1	
22	08331-31109	CIRCLIP	1	
23	37820-33D10	SWITCH ASSY, OIL PRESSURE	1	
24	37822-33D00	BOLT	1	
25	11281-44G00	PIPE, OIL GALLERY	1	
26	09280-13004	O RING (D:1.9/D:13)	2	

0017050AL5_E99

FIG. 120A

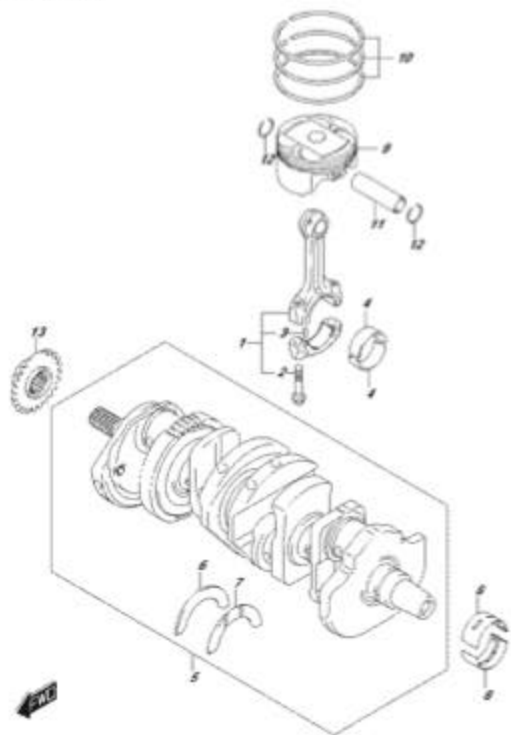


QSR750AL5_E99_0304
CRANKSHAFT

FIG. 120A (1-B-10) CRANKSHAFT

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	12160-06J00	ROD ASSY, CONNECTING	4	
2	12163-35F00	BOLT	8	
3	04221-04089	PIN	8	
4-1	12164-35F00-0A0	BEARING, CRANK PIN (GREEN)	8	
4-2	12164-35F00-0B0	BEARING, CRANK PIN (BLACK)	8	
4-3	12164-35F00-0C0	BEARING, CRANK PIN (BROWN)	8	
4-4	12164-35F00-0D0	BEARING, CRANK PIN (YELLOW)	8	
5	12000-30810	CRANKSHAFT SET	1	
6	12228-17E00-0D0	BEARING, THRUST RH (GREEN)	1	
7-1	12228-17E00-0A0	BEARING, THRUST LH (RED)	1	
7-2	12228-17E00-0B0	BEARING, THRUST LH (BLACK)	1	
7-3	12228-17E00-0C0	BEARING, THRUST LH (BLUE)	1	
7-4	12228-17E00-0D0	BEARING, THRUST LH (GREEN)	1	
7-5	12228-17E00-0E0	BEARING, THRUST LH (YELLOW)	1	
7-6	12228-17E00-0F0	BEARING, THRUST LH (WHITE)	1	
8-1	12229-35F00-0A0	BEARING, CRANKSHAFT (GREEN)	10	
8-2	12229-35F00-0B0	BEARING, CRANKSHAFT (BLACK)	10	
8-3	12229-35F00-0C0	BEARING, CRANKSHAFT (BROWN)	10	
8-4	12229-35F00-0D0	BEARING, CRANKSHAFT (YELLOW)	10	
9	12111-06J00-0F0	PISTON (YELLOW)	4	
10	12140-06J00	RING SET, PISTON	4	
11	12151-10G00	PIN, PISTON	4	
12	09381-16001	SNAP RING	8	
13	12731-06J00	SPROCKET, CAM CHAIN (NT-17)	1	

QSR750AL5_E99

FIG. 122A

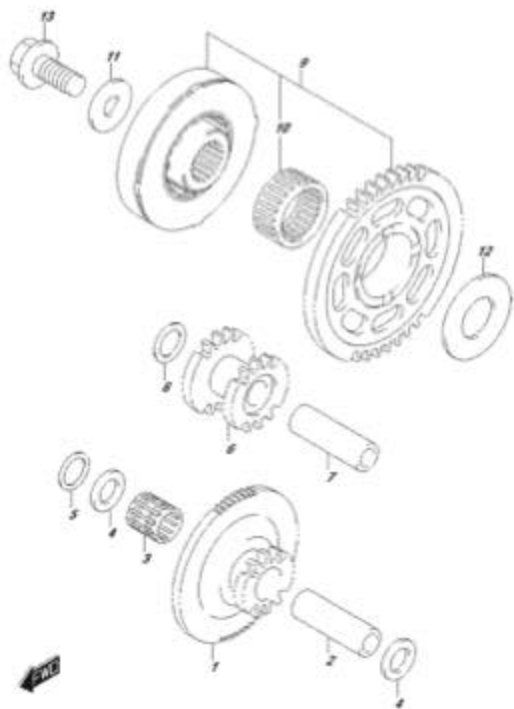


000700A5_EPR_004
STARTER CLUTCH

FIG. 122A (1-B-11) STARTER CLUTCH

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	12611-40F00	GEAR, STARTER IDLE NO.1 (NT-1570)	1	
2	12151-09204	PIN	1	
3	09263-12023	BEARING (12X16X16)	1	
4	09181-12167	SHIM (12X26X1)	2	
5	09164-12021	WASHER	1	
6	12612-40F00	GEAR, STARTER IDLE NO.2 (NT-1517)	1	
7	12151-09204	PIN	1	
8	09164-12021	WASHER	1	
9	12600-40831	CLUTCH SET, STARTER (NT-44)	1	
10	09263-26035	BEARING (26X31X16)	1	
11	08211-10285	WASHER	1	
12	08211-20403	WASHER	1	
13	09103-10189	BOLT (10X23)	1	

00R750AL5_E99

FIG. 126A

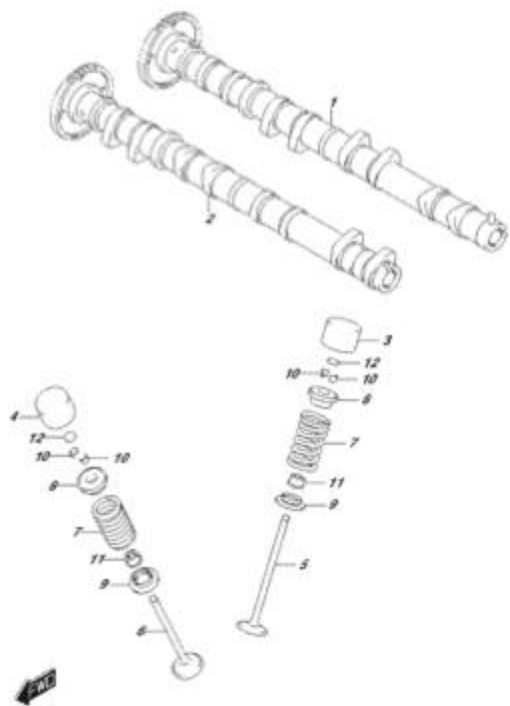


QSR750AL5_E99_126A
CAMSHAFT/VALVE

FIG. 126A (1-B-12) CAMSHAFT/VALVE

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	12710-08J00	CAMSHAFT, INTAKE	1	
2	12720-08J00	CAMSHAFT, EXHAUST	1	
3	12891-08J00	TAPPET	8	
4	12893-08J00	TAPPET	8	
5	12911-44G20	VALVE, INTAKE	8	
6	12912-44G20	VALVE, EXHAUST	8	
7	12921-40F00	SPRING, VALVE	16	
8	12931-35F10	RETAINER, VALVE SPRING	16	
9	12933-35F10	SEAT, VALVE SPRING	16	
10	12932-05C00	COTTER, VALVE	32	
11	09289-04003	OIL SEAL (3.2X8.6X8)	16	
12-1	12892-05C00-120	SHIM, TAPPET (T.1.20)	16	
12-2	12892-05C00-125	SHIM, TAPPET (T.1.25)	16	
12-3	12892-05C00-130	SHIM, TAPPET (T.1.30)	16	
12-4	12892-05C00-135	SHIM, TAPPET (T.1.35)	16	
12-5	12892-05C00-140	SHIM, TAPPET (T.1.40)	16	
12-6	12892-05C00-145	SHIM, TAPPET (T.1.45)	16	
12-7	12892-05C00-150	SHIM, TAPPET (T.1.50)	16	
12-8	12892-05C00-155	SHIM, TAPPET (T.1.55)	16	
12-9	12892-05C00-160	SHIM, TAPPET (T.1.60)	16	
12-10	12892-05C00-165	SHIM, TAPPET (T.1.65)	16	
12-11	12892-05C00-170	SHIM, TAPPET (T.1.70)	16	
12-12	12892-05C00-175	SHIM, TAPPET (T.1.75)	16	
12-13	12892-05C00-180	SHIM, TAPPET (T.1.80)	16	
12-14	12892-05C00-185	SHIM, TAPPET (T.1.85)	16	
12-15	12892-05C00-190	SHIM, TAPPET (T.1.90)	16	
12-16	12892-05C00-195	SHIM, TAPPET (T.1.95)	16	
12-17	12892-05C00-200	SHIM, TAPPET (T.2.00)	16	
12-18	12892-05C00-205	SHIM, TAPPET (T.2.05)	16	
12-19	12892-05C00-210	SHIM, TAPPET (T.2.10)	16	
12-20	12892-05C00-215	SHIM, TAPPET (T.2.15)	16	
12-21	12892-05C00-220	SHIM, TAPPET (T.2.20)	16	

QSR750AL5_E99

FIG.126A

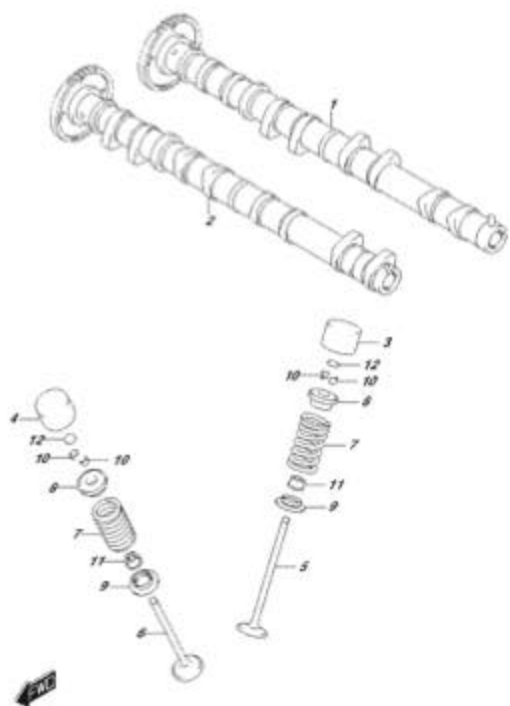

QSR750AL5_E99_1384
CAMSHAFT/VALVE

FIG.126A (1-B-13) CAMSHAFT/VALVE

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
13	12800-05830	SHIM SET, TAPPET T:1.25, 1.25, 2.95, 3.00 (PCS EACH) & CASE	1	OPT NOT ILLUSTRATED
14	99000-89491	CASE, TAPPET SHIM	1	OPT NOT ILLUSTRATED

QSR750AL5_E99

FIG. 127A

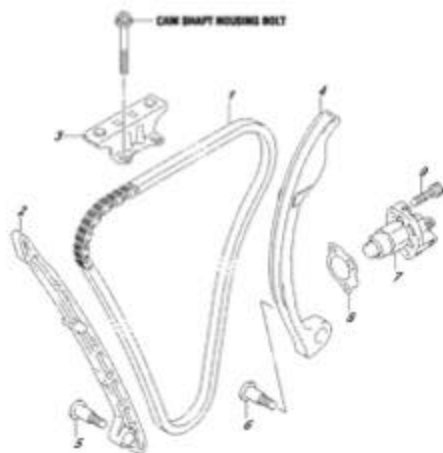


FIG. 127A (1-B-14) CAM CHAIN

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	12760-35F01	CHAIN, CAM SHAFT DRIVE	1	
2	12771-30G00	GUIDE, CAM CHAIN NO.1	1	
3	12762-35F10	GUIDE, CAM CHAIN NO.2	1	
4	12811-08J00	TENSIONER, CAM CHAIN	1	
5	12812-26802	BOLT, TENSIONER & GUIDE	1	
6	12812-31G00	BOLT, CAM CHAIN TENSIONER	1	
7	12830-37H00	ADJUSTER ASSY, TENSIONER	1	
8	12837-02H00	GASKET, TENSIONER ADJUSTER	1	
9	07130-0625A	BOLT	2	

FIG.140A

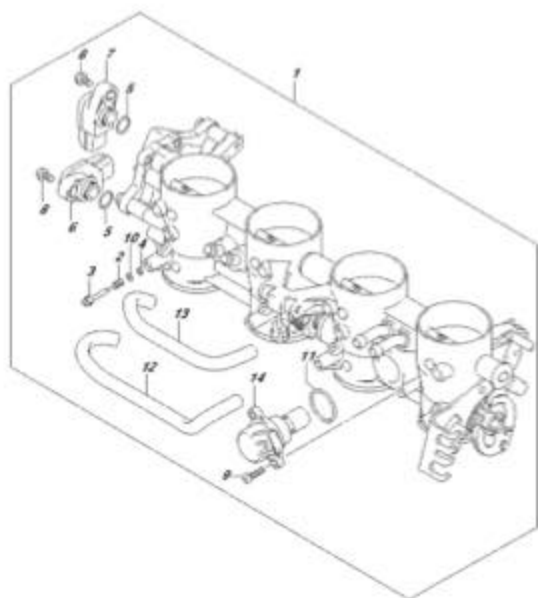


FIG.140A (1-B-15) THROTTLE BODY

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	13405-06J11	BODY ASSY, THROTTLE	1	
2	13268-46700	SPRING	4	
3	13269-33E00	SCREW	4	
4	13295-29900	O RING	4	
5	13579-29G20	O RING	2	
6	13580-14J00	SENSOR	1	
7	13580-29C00	SENSOR ASSY	1	
8	13605-02F00	SCREW	2	
9	13605-37H00	SCREW	2	
10	13606-47A00	WASHER	4	
11	13679-37H00	O RING	1	
12	13698-06J00	HOSE	1	
13	13698-06J10	HOSE	1	
14	18117-14J01	MOTOR ASSY	1	

FIG.142A

FIG.142A (1-C-2) THROTTLE BODY HOSE/JOINT

REF NO	PART NO	DESCRIPTION	QTY	REMARKS
1	13473-06J00	PIPE, DELIVERY	2	
2	13473-29G00	NIPPLE ASSY	1	
3	13601-29G00	SCREW	4	
4	13602-29G00	PACKING	4	
5	13681-38F00-050	HOSE	4	
6	13683-06J00	HOSE	1	
7	13683-06J10	HOSE	2	
8	13685-02FA0	NIPPLE	3	
9	15710-14J00	INJECTOR ASSY	4	
10	15717-58B00	O RING	4	
11	15721-06J00	O RING	2	
12	15722-14J00	SEAL	4	


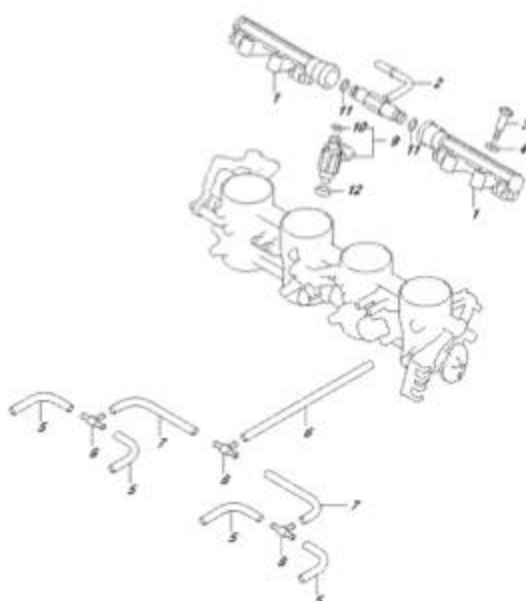


FIG.155A

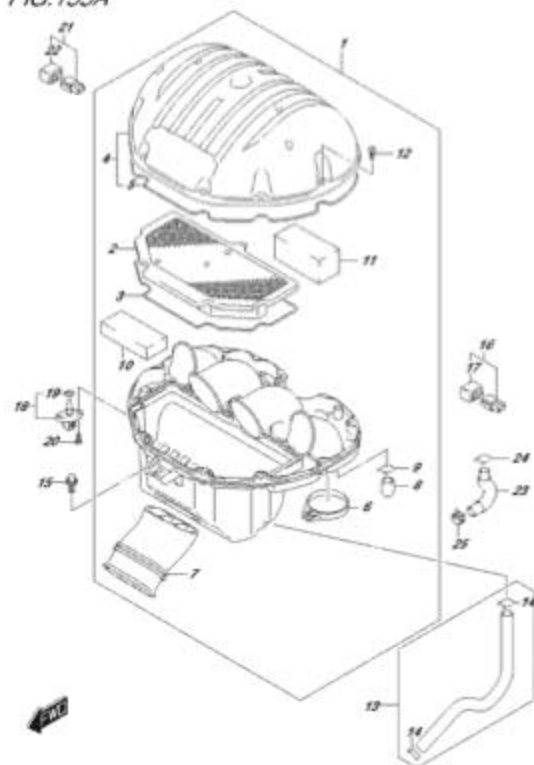


000700AL5_E01_004
AIR CLEANER

FIG.155A (1-C-3) AIR CLEANER

REF NO	PART NO	DESCRIPTION	QTY	REMARKS
1	13700-08J02	CLEANER ASSY, AIR	1	
2	13780-44G00	FILTER ASSY	1	
3	13756-44G00	GASKET, CASE	1	
4	13740-08J00	CAP	1	
5	13746-08J00	GASKET, CAP	1	
6	13170-25D01	CLAMP	4	
7	13891-08J00	TUBE, INLET	1	
8	13859-41B10	PLUG	1	
9	09401-14101	CLIP	1	
10	13788-08J00	FILTER, BREATHER	1	
11	13789-08J00	FILTER, BREATHER	1	
12	03541-0520A	SCREW	12	
13	13850-08J00	TUBE, BREATHER	1	
14	09401-15101	CLIP	2	
15	09116-06130	BOLT (RX16)	1	
16	15630-29G10	SENSOR, BOOST	1	
17	15625-29G00	COVER	1	
18	13650-14G10	SENSOR, AIR TEMPERATURE	1	
19	13655-14G10	O RING	1	
20	03511-0516A	SCREW	2	
21	15630-29G10	SENSOR, BOOST	1	
22	15625-29G00	COVER	1	
23	13697-08J00	HOSE, ISC VALVE	1	
24	09401-15101	CLIP	1	
25	09401-16407	CLIP	1	

000750AL5_E09

FIG. 163A

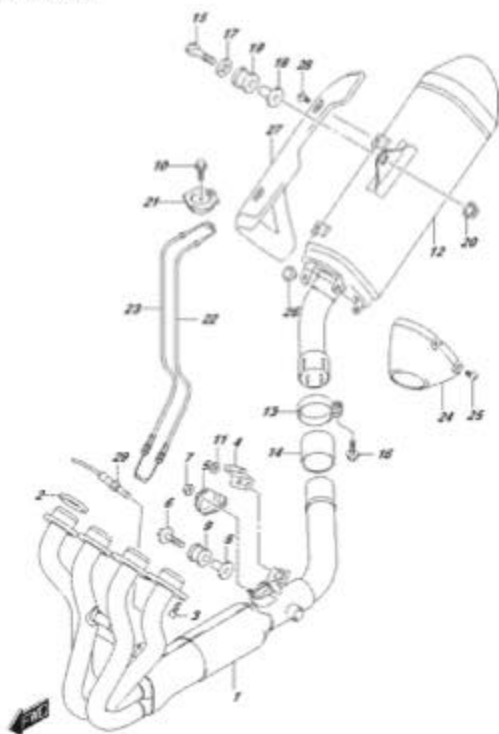


EXHAUST PIPE, NEW
MUFFLER

FIG. 163A (1-C-4) MUFFLER

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	14100-08J00	EXHAUST	1	
2	14181-46E00	GASKET, EXHAUST PIPE	4	
3	09106-08165	BOLT (RX25)	8	
4	14250-21H00	BRACKET, EXHAUST VALVE CABLE	1	
5	14280-08J00	COVER, EXHAUST VALVE	1	
6	09118-08152-A05	BOLT (RX45)	1	
7	09159-06100	NUT	2	
8	09180-08152	SPACER (8.5X12X34.2)	1	
9	09320-12077	CUSHION	1	
10	01547-0518A	BOLT	1	
11	08316-1006A	NUT	1	
12	14310-08J00	BODY, MUFFLER	1	
13	14459-08J00	CLAMP	1	
14	14771-42F31	CONNECTOR, MUFFLER	1	
15	09103-08358	BOLT (RX45)	1	
16	09103-08392	BOLT (RX40)	1	
17	09160-08142	WASHER (8.5X28X1.5)	1	
18	09180-08152	SPACER (8.5X12X34.2)	1	
19	09320-12048	CUSHION	1	
20	08361-2508A	NUT	1	
21	11269-18G01	PULLEY, CONTROLLER	1	
22	11276-08J00	CABLE, EXHAUST VALVE NO.1	1	
23	11277-08J00	CABLE, EXHAUST VALVE NO.2	1	
24	14770-08J00	COVER, MUFFLER FRONT	1	
25	09139-06078	SCREW (EX10)	2	
26	09321-10016	CUSHION	1	
27	14780-08J00	COVER, MUFFLER CENTER	1	
28	09139-06122	SCREW (EX10)	2	
29	18213-18H10	SENSOR, OXYGEN	1	

GSR750AL5_E99

FIG.172A

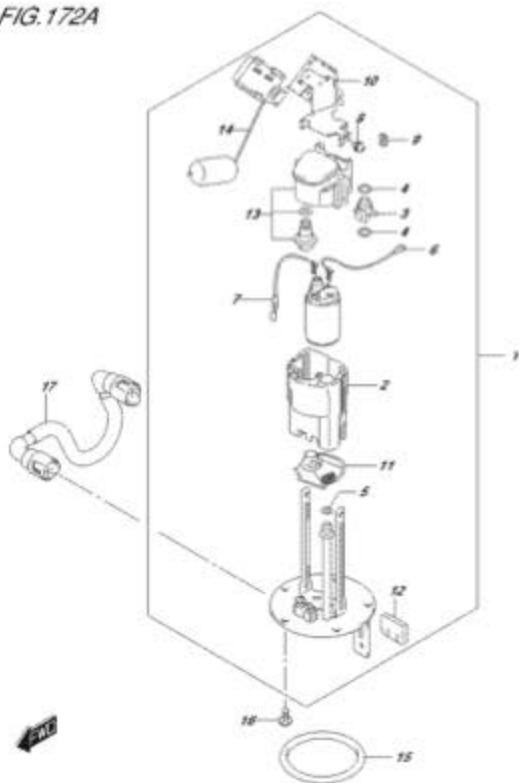


QSR750AL5_E99_172A
FUEL PUMP

FIG.172A (1-C-5) FUEL PUMP

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	15100-08J00	PUMP ASSY, FUEL	1	
2	15111-27Q00	CUP, RESERVOIR	1	
3	15112-05H00	JOINT	1	
4	15113-05H00	O RING	2	
5	15113-35F00	O RING	1	
6	15114-14J00	WIRE, EARTH	1	
7	15115-08J00	WIRE, LEAD	1	
8	15116-10F00	SCREW	3	
9	15119-08J00	SADDLE, EDGE	1	
10	15181-08J00	BRACKET, GAUGE	1	
11	15420-05H00	STRAINER	1	
12	15583-18H00	CAP, STAY	1	
13	15610-14J00	REGULATOR	1	
14	34810-06J10	GAUGE ASSY, FUEL LEVEL	1	
15	15201-35F00	O RING	1	
16	07120-0612A	BOLT	5	
17	15810-15H01	HOSE, FUEL	1	

QSR750AL5_E99

FIG.178A

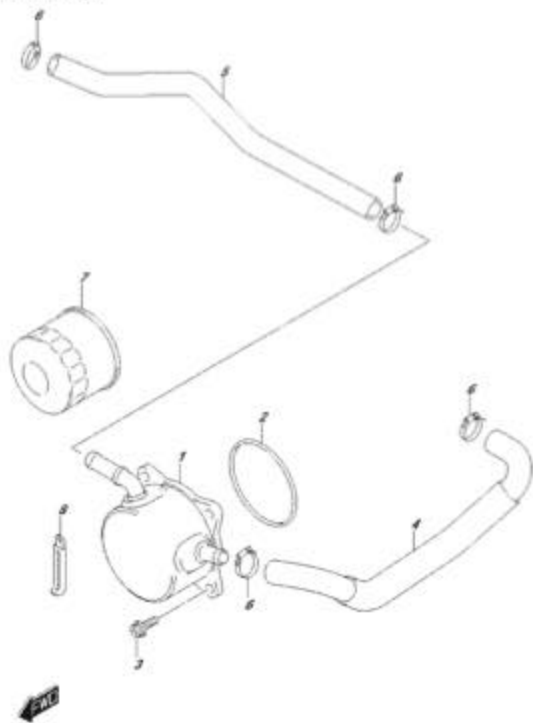


001700415_E01_178A
OIL COOLER

FIG.178A (1-C-6) OIL COOLER

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	16600-29C00	COOLER ASSY, OIL	1	
2	09280-64003	O-RING (D3.1/D63.9)	1	
3	09106-06099	BOLT (EX16)	4	
4	16461-08J00	HOSE, OIL COOLER WATER INLET	1	
5	16471-08J00	HOSE, OIL COOLER WATER OUTLET	1	
6	09402-22512	CLAMP	4	
7	16510-07J00	FILTER ASSY, ENGINE OIL	1	
8	09404-06433	CLAMP (J.85)	1	

001750415_E09

FIG.180A

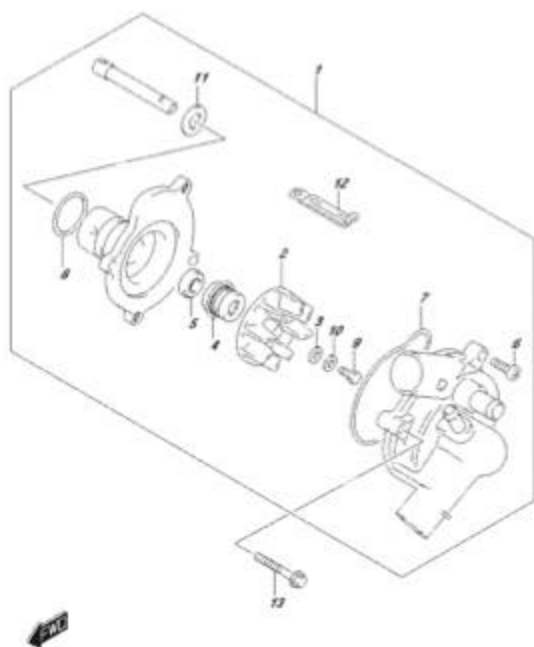


QSR750AL5_E99_180A
WATER PUMP

FIG.180A (1-C-7) WATER PUMP

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	17400-35F30	PUMP ASSY, WATER	1	
2	17491-17E01	IMPELLER	1	
3	09168-06025	GASKET (8X15X2.2)	1	
4	17470-02F10	SEAL, MECHANICAL	1	
5	17461-48G20	OIL SEAL	1	
6	02112-0616A	SCREW	2	
7	17418-33400	O RING	1	
8	17435-33400	O RING	1	
9	09100-06099	BOLT (6X13)	1	
10	09164-06006	WASHER	1	
11	17432-07G20	WASHER	1	
12	09404-06429	CLAMP (L45)	1	
13	01550-0635A	BOLT	2	

QSR750AL5_E99

FIG.185A

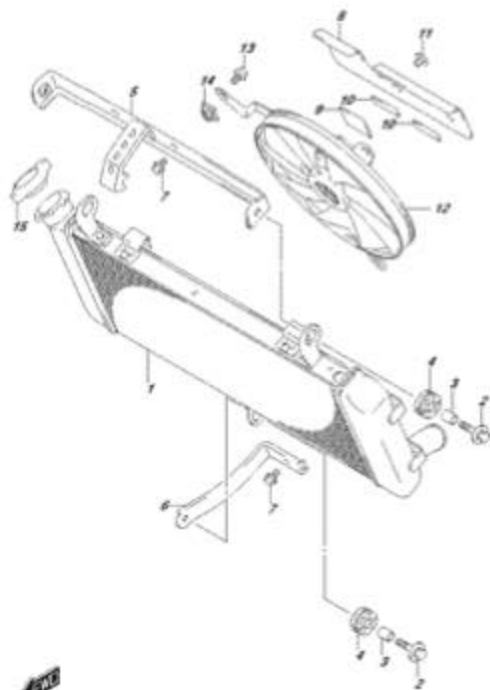


0000000000_0000_0000
RADIATOR

FIG.185A (1-C-8) RADIATOR

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	17710-06J00	RADIATOR ASSY, WATER	1	
2	09118-06122	BOLT (EX25)	3	
3	09180-06290	SPACER (8.5X10X12)	3	
4	09320-10051	CUSHION	3	
5	17740-06J10	BRACKET, RADIATOR UPPER	1	
6	17750-06J00	BRACKET, RADIATOR LOWER	1	
7	01550-0612A	BOLT	3	
8	17771-06J00	SHIELD, HEAT	1	
9	44894-24A00	CUSHION, HEAT SHIELD	1	
10	94476-38C00	CUSHION, HEAT SHIELD	2	
11	09409-06322-5PK	CLIP (BLACK)	2	
12	17800-06J00	FAN ASSY, RADIATOR	1	
13	17711-06J00	BOLT	3	
14	17712-40F00	NUT	3	
15	17730-06J00	CAP, RADIATOR	1	

0000000000_0000_0000

FIG. 187A

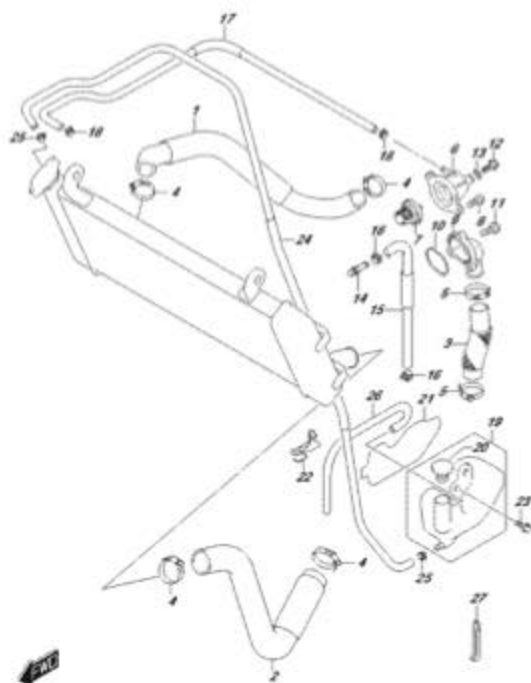

DISCRETE, ETC. 187A
RADIATOR HOSE

FIG. 187A (1-C-9) RADIATOR HOSE

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	17851-08J00	HOSE, RADIATOR INLET	1	
2	17852-08J10	HOSE, RADIATOR OUTLET	1	
3	17853-35F10	HOSE, CYLINDER INLET	1	
4	09402-35501	CLAMP	4	
5	09402-38512	CLAMP	2	
6	17661-35F00	COVER, THERMOSTAT	1	
7	17670-76G00	THERMOSTAT, WATER	1	
8	01547-0620A	BOLT	2	
9	17861-08J00	CONNECTOR, CYLINDER WATER	1	
10	17863-33E00	O RING	1	
11	01547-0620A	BOLT	3	
12	17568-50F00	BOLT, THERMOSTAT COVER AIR	1	
13	09168-06026	GASKET (8.4X11.5X0.8)	1	
14	09362-09011	UNION	1	
15	17854-08J00	HOSE, WATER BYPASS	1	
16	09401-12414	CLAMP	2	
17	17855-08J00	HOSE, WATER AIR BLEED	1	
18	09401-10409	CLIP	2	
19	17910-08J00	TANK ASSY, RESERVOIR	1	
20	17931-02FA0	CAP	1	
21	17912-08J00	SHIELD, RESERVOIR TANK HEAT	1	
22	17914-08J00	PLATE, RESERVOIR TANK CAP	1	
23	09111-06085	BOLT (EX12)	2	
24	17981-08J00	HOSE, RESERVOIR TANK INLET	1	
25	09401-08411	CLIP	2	
26	17981-19F00	HOSE, OVER FLOW	1	CUT AS REQUIRED
27	09404-06429	CLAMP (L-45)	1	

GSR750AL5_E99

FIG.189A


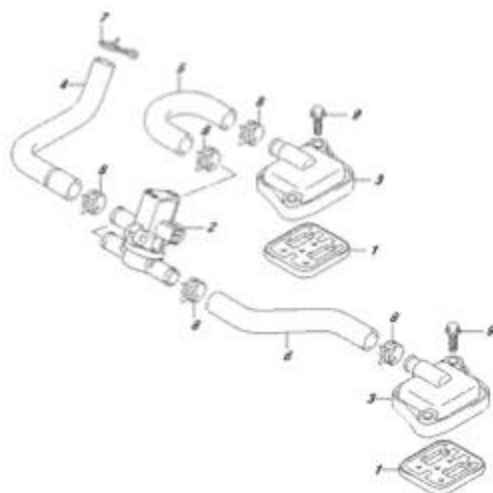


FIG.189A (1-C-10) 2ND AIR

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	18450-35F11	VALVE ASSY, 2ND AIR REED	2	
2	18510-29G31	VALVE ASSY, AIR CUT	1	
3	18531-35F20	COVER, 2ND AIR REED VALVE	2	
4	18711-08J00	HOSE, 2ND AIR CLEANER	1	
5	18461-08J00	HOSE, 2ND AIR VALVE RH	1	
6	18471-08J00	HOSE, 2ND AIR VALVE LH	1	
7	09401-17201	CLIP	1	
8	09401-17401	CLIP	5	
9	01547-0620A	BOLT	4	

FIG.201A

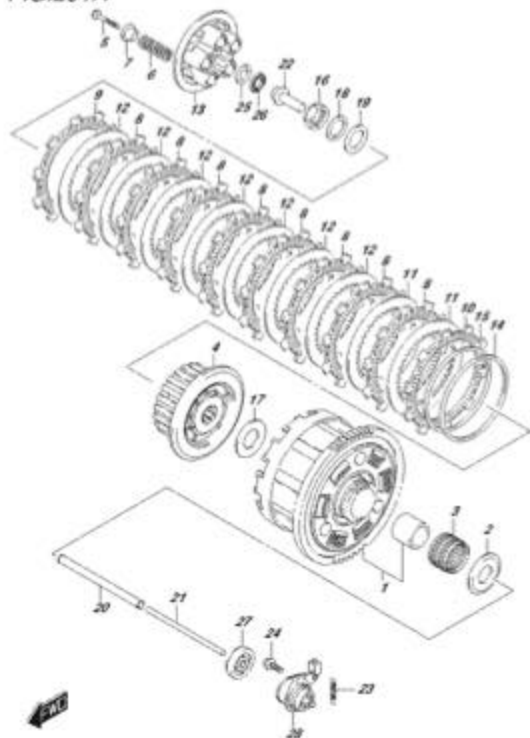


020700AL5_E99_001A
CLUTCH

FIG.201A (1-C-11) CLUTCH

REF NO	PART NO	DESCRIPTION	QTY	REMARKS
1	21200-35830	GEAR ASSY, PRIMARY DRIVEN (NT.76)	1	
2	09160-25073	WASHER (25X54X2.4)	1	
3	09263-35036	BEARING (35X40X29.8)	1	
4	21410-35F20	HUB, CLUTCH SLEEVE	1	
5	21482-40F00	BOLT, CLUTCH SPRING	5	
6	21413-08J00	SPRING, CLUTCH	5	
7	21414-29F00	WASHER, CLUTCH SPRING	5	
8	21441-31EA0	PLATE, CLUTCH DRIVE NO.1 (T.3.0)	8	
9	21441-31E60	PLATE, CLUTCH DRIVE NO.2 (T.3.0)	1	
10	21442-31E21	PLATE, CLUTCH DRIVE NO.3 (T.3.0)	1	
11	21451-31E00	PLATE, CLUTCH DRIVEN NO.1 (T.1.6)	2	
12	21451-31E10	PLATE, CLUTCH DRIVEN NO.2 (T.2.0)	7	
13	21462-35F00	DISC, CLUTCH PRESSURE	1	
14	21471-31E20	SEAT, WAVE WASHER	1	
15	21472-38F00	WASHER, CLUTCH PLATE WAVE	1	
16	09150-24010	NUT	1	
17	09160-25056	WASHER (25X50X2.5)	1	
18	09164-24008	WASHER	1	
19	09181-25223	SHIM (25X38X1)	1	
20	23110-27A00	ROD, CLUTCH	1	
21	23111-35F00	ROD, CLUTCH PUSH LH	1	
22	23121-31E00	PIECE, CLUTCH PUSH	1	
23	09443-09051	SPRING	1	
24	01550-0616A	BOLT	2	
25	09160-15045	WASHER (15.5X28X1)	1	
26	09263-15003	BEARING (15X28X2)	1	
27	09283-06010	OIL SEAL (6X34X10.5)	1	
28	23200-35F01	SCREW ASSY, CLUTCH RELEASE	1	

020700AL5_E99

FIG.206A

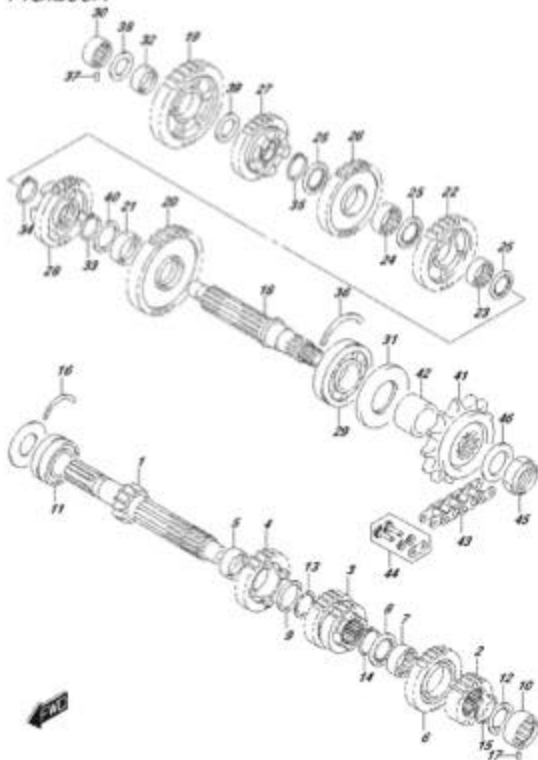


0000000000_070_0004
TRANSMISSION

FIG.206A (1-C-12) TRANSMISSION

REF NO	PART NO	DESCRIPTION	QTY	REMARKS
1	24120-35F20	SHAFT, COUNTER (NT.14)	1	
2	24221-35F00	GEAR, 2ND DRIVE (NT.19)	1	
3	24231-35F01	GEAR, 3RD & 4TH DRIVE (NT.20/22)	1	
4	24251-35F21	GEAR, 5TH DRIVE (NT.23)	1	
5	24252-35F00	BUSH 5TH DRIVE GEAR	1	
6	24251-35F02	GEAR, 6TH DRIVE (NT.22)	1	
7	24252-35F10	BUSH, 6TH DRIVE GEAR	1	
8	09167-27003	LOCK WASHER	1	
9	09181-27014	SHIM (27X36X2.5)	1	
10	09263-20087	BEARING (20X34X13.5)	1	LH
11	09267-25013	BEARING (25X52X20.6)	1	RH
12	09285-20006	OIL SEAL (26X31.2X2.7)	1	
13	09380-27006	CIRCLIP	1	
14	09380-27006	CIRCLIP	1	
15	09380-27004	CIRCLIP	1	
16	09390-58001	C RING	1	RH
17	09261-06003	PIN (6X10)	1	LH
18	24131-35F01	SHAFT, DRIVE	1	
19	24311-35F20	GEAR, 1ST DRIVEN (NT.39)	1	
20	24321-35F11	GEAR, 2ND DRIVEN (NT.38)	1	
21	24322-35F00	BUSH, 2ND DRIVEN GEAR	1	
22	24331-35F10	GEAR, 3RD DRIVEN (NT.37)	1	
23	24332-35F00	BUSH, 3RD DRIVEN GEAR	1	
24	24332-35F00	BUSH, 4TH DRIVEN GEAR	1	
25	24333-02F00	WASHER, 3RD & 4TH DRIVEN GEAR	3	
26	24341-35F10	GEAR, 4TH DRIVEN (NT.29)	1	
27	24351-35F10	GEAR, 5TH DRIVEN (NT.30)	1	
28	24361-35F10	GEAR, 6TH DRIVEN (NT.26)	1	
29	09262-28025	BEARING (28X70X18)	1	LH
30	09263-20087	BEARING (20X34X13.5)	1	RH
31	09283-36006	OIL SEAL (34.8X70X6)	1	
32	09300-22008	BUSH (22X26X8)	1	

GSR750AL5_E99

FIG.206A

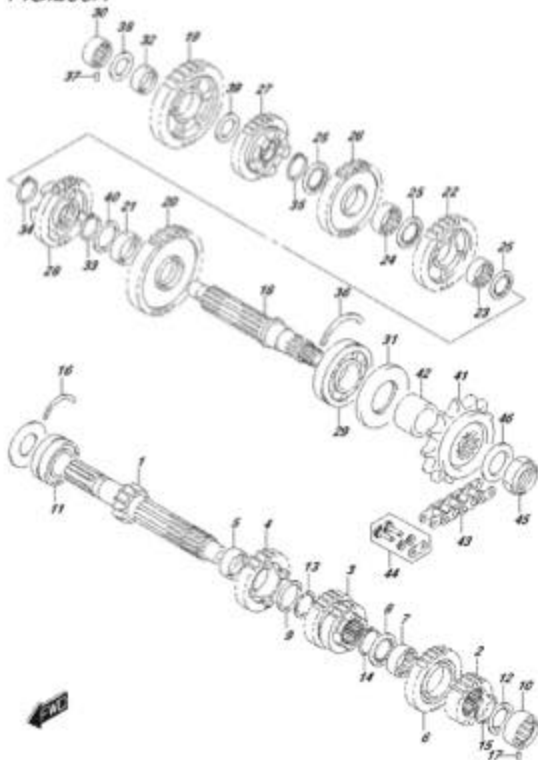


0000000000_070_0004
TRANSMISSION

FIG.206A (1-C-13) TRANSMISSION

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
33	09380-27006	CIRCLIP	1	
34	09380-27006	CIRCLIP	1	
35	09380-27006	CIRCLIP	1	
36	09390-70001	C RING	1	LH
37	09261-06003	PIN (6X10)	1	RH
38	09181-20251	SHIM (20X34X1)	1	
39	09181-22223	SHIM (22X34X1)	1	
40	09160-27008	WASHER (27X36X1)	1	
41	27510-20A20	SPROCKET, ENGINE (NT-17)	1	
42	27531-35F01	SPACER, ENGINE SPROCKET	1	
43	27600-06G40-112	CHAIN ASSY (PK 525SMX)	1	
44	27620-06G40	JOINT SET, CHAIN	1	OPT
45	09159-20004	NUT	1	
46	09160-25009	WASHER (25X41X3)	1	

0000000000_070_0004
TRANSMISSION

FIG.212A

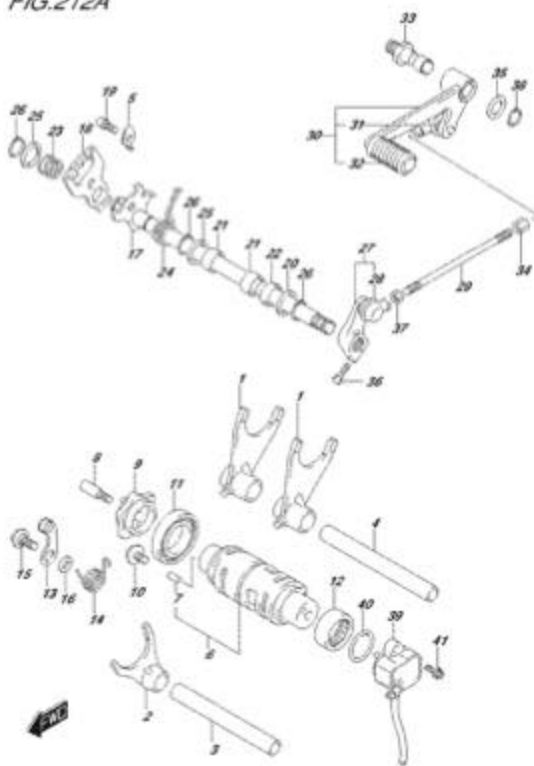


GEARSHIFTING_EPR_P104
GEAR SHIFTING

FIG.212A (1-C-14) GEAR SHIFTING

REF NO	PART NO	DESCRIPTION	QTY	REMARKS
1	25211-35F11	FORK, GEAR SHIFT, NO.1	2	
2	25231-35F11	FORK, GEAR SHIFT, NO.3	1	
3	25411-26D01	SHAFT, GEAR SHIFT FORK, NO.2	1	
4	25411-35F00	SHAFT, GEAR SHIFT FORK, NO.1	1	
5	25451-35F00	RETAINER, SHIFT FORK SHAFT	1	
6	25310-35F00	CAM, GEAR SHIFT	1	
7	04221-04089	Pin	1	
8	20312-42F01	BOLT, GEAR SHIFT CAM PLATE	1	
9	25381-13E30	PLATE, GEAR SHIFT CAM	1	
10	09136-05147	SCREW (8X12)	2	
11	09262-25006	BEARING (25X47X9)	1	
12	09263-25018	BEARING (25X32X12)	1	LH
13	20350-35F00	STOPPER, SHIFT CAM	1	
14	20355-05G00	SPRING, SHIFT CAM STOPPER ARM	1	
15	09111-06041	BOLT (8X14.3)	1	
16	08211-06141	WASHER	1	
17	25510-08J00	SHAFT, GEAR SHIFT	1	
18	25512-06G10	PLATE, GEAR SHIFT CAM DRIVE	1	
19	25671-35F00	STOPPER, GEAR SHIFT ARM	1	
20	09160-14016	WASHER (14X25X0.8)	1	LH
21	09263-14027	BEARING (14X23X12)	2	
22	09283-14005	OIL SEAL (14X22X1.3)	1	
23	09440-17009	SPRING	1	
24	09444-20001	SPRING	1	
25	09181-14167	SHIM (14X22X1)	2	
26	08331-3114A	CIRCLIP	3	
27	25520-06G10	ARM, GEAR SHIFT LINK	1	
28	25526-47000	COVER, DUST	1	
29	25529-12B00	ROD, GEAR SHIFT LINK	1	
30	25600-08J00	LEVER ASSY, GEAR SHIFT	1	
31	25526-47000	COVER, DUST	1	
32	25652-20C00	RUBBER, GEAR SHIFT PEDAL	1	

GSR750AL5_E99

FIG.212A

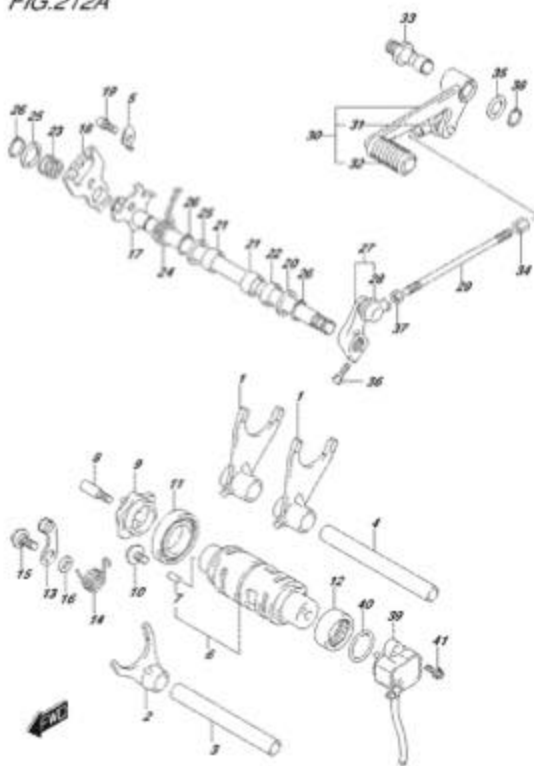

000750AL5_E99_P104
GEAR SHIFTING

FIG.212A (1-C-15) GEAR SHIFTING

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
33	25617-03F10	SHAFT, GEAR SHIFT LEVER	1	
34	09140-09025	NUT	1	
35	09160-12011	WASHER (12.5X20X1)	1	
36	01547-0520A	BOLT	1	
37	08310-0006A	NUT	1	
38	08331-3112A	CIRCLIP	1	
39	37730-06J00	SENSOR ASSY, GEAR POSITION	1	
40	09280-26005	O RING (D2.4/D.26.2)	1	
41	09106-05023	BOLT (5X16)	2	

000750AL5_E99

FIG.301A

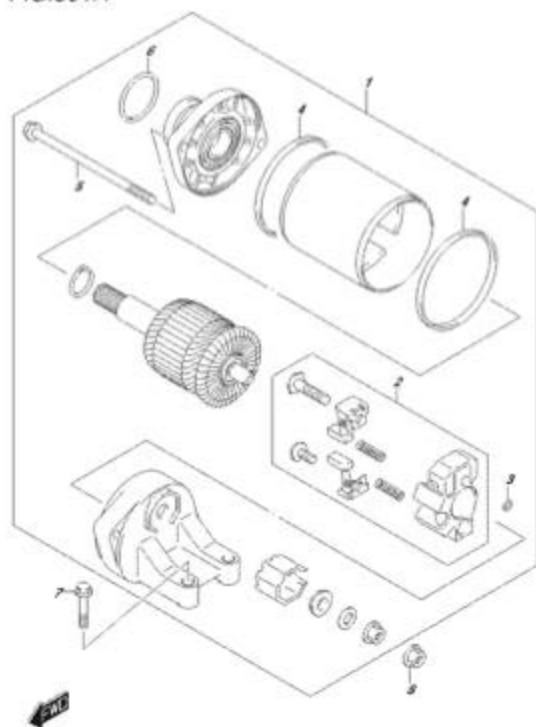


FIG.301A (1-D-2) STARTING MOTOR

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	31100-06J00	MOTOR ASSY. STARTING	1	
2	31132-38F10	BRUSH HOLDER SET	1	
3	31143-49040	O RING	1	
4	31264-38F10	SQUARE RING	2	
5	31280-38F10	BOLT	2	
6	31156-98E00	O RING	1	
7	09103-06212	BOLT (EX25)	2	
8	08361-3506A	NUT	1	

FIG.304A

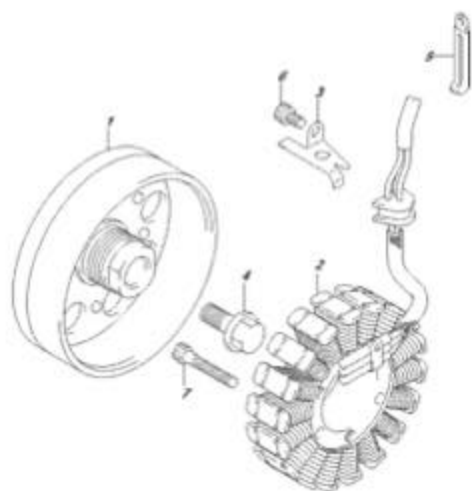


FIG.304A (1-D-3) GENERATOR

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	31402-06J00	ROTOR ASSY	1	
2	31401-29G20	STATOR ASSY	1	
3	32371-33E00	CLAMP, GENERATOR LEAD WIRE	1	
4	09103-12005	BOLT (12X23)	1	
5	09404-06429	CLAMP (L45)	1	
6	07130-0612A	BOLT	1	
7	07130-0635A	BOLT	3	



FIG.306A

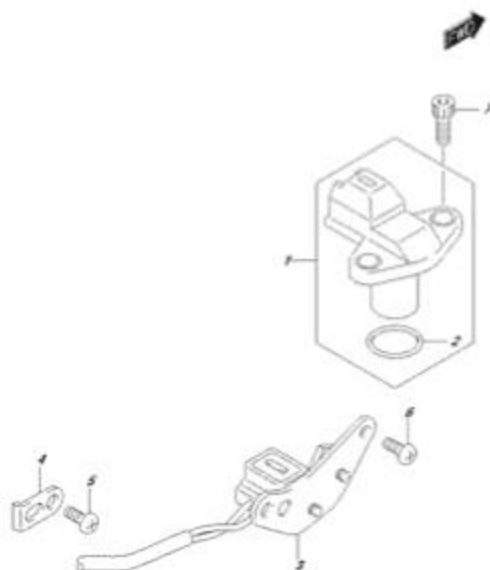


FIG.306A (1-D-4) SIGNAL GENERATOR

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	32160-02F10	SENSOR ASSY, CAM POSITION	1	
2	32161-02F00	PACKING	1	
3	33110-06J00	STATOR, SIGNAL GENERATOR	1	
4	33115-33E00	CLAMP, SIGNAL GENERATOR	1	
5	02112-0510A	SCREW	1	
6	02112-0510A	SCREW	2	
7	09106-06073	BOLT (EX16)	2	

FIG.310A


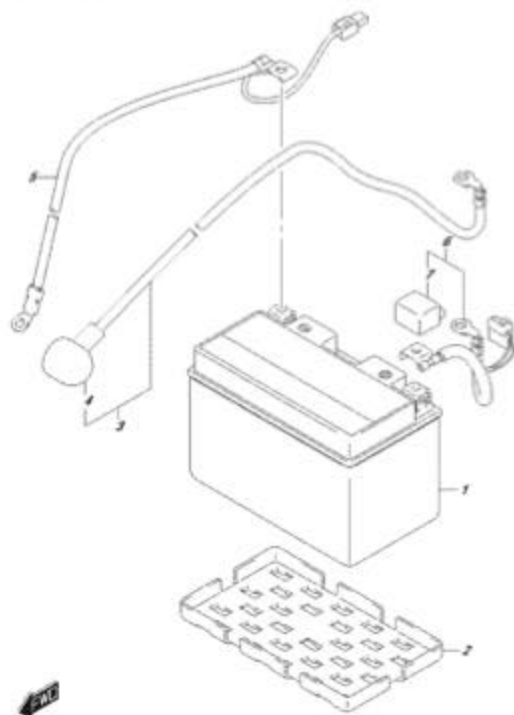


FIG.310A (1-D-5) BATTERY

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	33610-14Q11	BATTERY ASSY (FT12A-BS, 12V,10AH)	1	
2	33652-16G00	PROTECTOR, BATTERY	1	
3	33810-08J00	WIRE, STARTER MOTOR LEAD	1	
4	33624-18H10	CAP, STARTER MOTOR	1	
5	33860-08J00	WIRE, BATTERY MINUS LEAD	1	
6	33820-08J10	WIRE, BATTERY PLUS LEAD	1	
7	33624-16G00	CAP, BATTERY PLUS	1	

FIG.312A

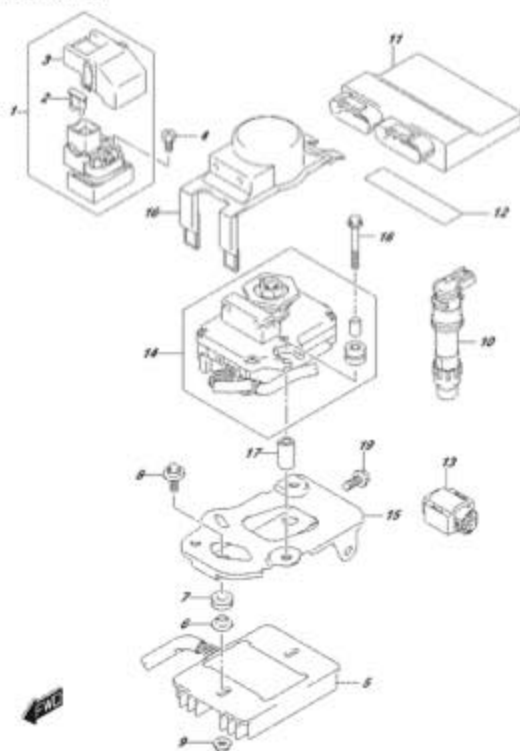


QSR750AL5_E99_312A
ELECTRICAL

FIG.312A (1-D-6) ELECTRICAL

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	31900-06000	RELAY ASSY, STARTING MOTOR	1	
2	09481-30101	FUSE (30A)	2	
3	31861-47E00	COVER	1	
4	09128-06013	SCREW (EX3)	2	
5	32800-47H30	RECTIFIER ASSY	1	
6	09180-06325	SPACER (8.2X8.4X6.8)	2	
7	09320-08066	CUSHION	2	
8	09116-06182	BOLT (EX20)	2	
9	08316-1006A	NUT	2	
10	33410-47H00	COIL ASSY, IGNITION	4	
11	32820-06J70	CONTROL UNIT, FI	1	
12	33652-38A10	CUSHION, FI CONTROL UNIT	3	
13	33960-27G00	SENSOR ASSY, FUEL CUT	1	
14	33970-47H01	ACTUATOR, EXHAUST CONTROL	1	
15	33971-08J00	HOLDER, ACTUATOR	1	
16	33973-48G01	COVER, ACTUATOR	1	
17	09180-06345	SPACER (8.2X14.5X26)	2	
18	01550-0650A	BOLT	2	
19	02162-0616A	SCREW	3	

QSR750AL5_E99

FIG.330A

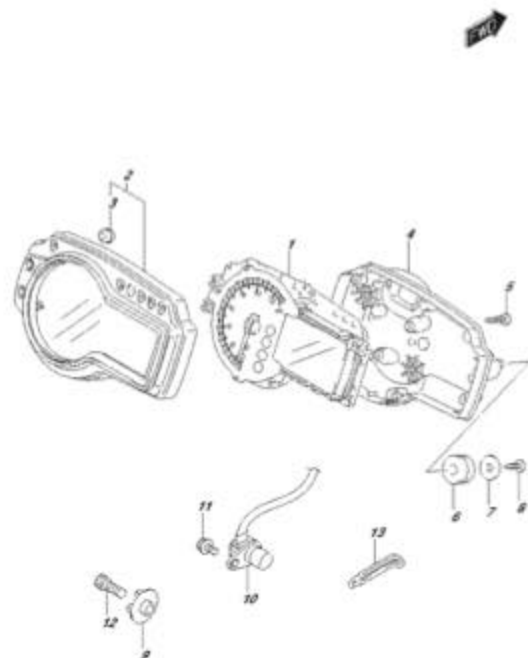


QSR750AL5_E99_330A
SPEEDOMETER

FIG.330A (1-D-7) SPEEDOMETER

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	34120-08J20	SPEEDOMETER	1	
2	34150-08J10	UPPER CASE ASSY	1	
3	34124-39G00	RUBBER, SWITCH	2	
4	34111-08J00	LOWER CASE ASSY	1	
5	09132-03006	SCREW (3X16)	6	
6	34189-08J00	CUSHION, SPEEDOMETER	3	
7	09160-04026	WASHER (4.5X16X1.2)	1	
8	03541-0416A	SCREW	1	
9	34981-38Q01	ROTOR, SPEED	1	
10	34990-35F00	SENSOR, SPEED	1	
11	07120-0512A	BOLT	1	
12	07130-0825B	BOLT	1	
13	09404-06429	CLAMP (L45)	1	

QSR750AL5_E99

FIG.333A

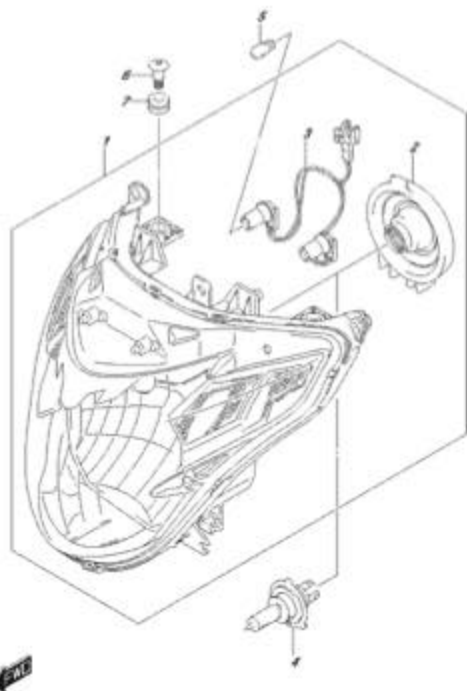


00000000_000_000
HEADLAMP

FIG.333A (1-D-8) HEADLAMP (N/FRONT REFLECTOR)

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	35100-06J00-999	HEADLAMP ASSY	1	
2	35125-77A00	COVER, SOCKET	1	
3	36118-06J00	CORD ASSY	1	
4	09471-12185	BULB (12V,60/55W)	1	
5	09471-12216	BULB (12V55W)	2	
6	09139-06126	SCREW (BK30)	2	
7	09320-09501	CUSHION	2	

00000000_000_000

FIG.333B

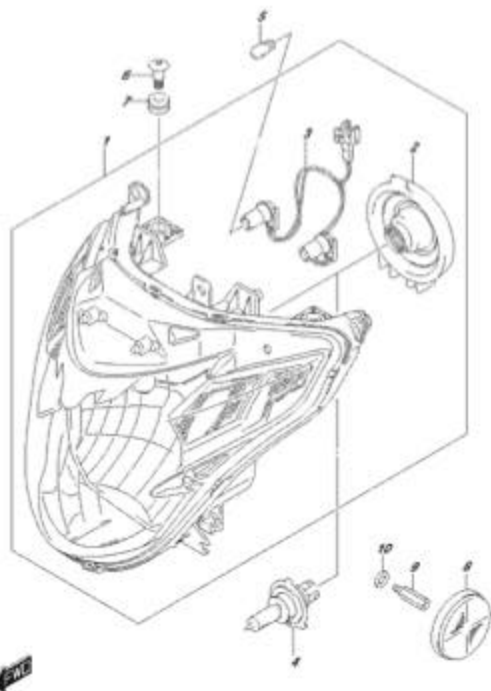


000700AL5_E00_333B
HEADLAMP

FIG.333B (1-D-9) HEADLAMP (W/FRONT REFLECTOR)

REF NO	PART NO	DESCRIPTION	QTY	REMARKS
1	35100-06J00-999	HEADLAMP ASSY	1	
2	35125-77A00	COVER, SOCKET	1	
3	36118-06J00	CORD ASSY	1	
4	09471-12185	BULB (12V,60/55W)	1	
5	09471-12216	BULB (12V55W)	2	
6	09139-06126	SCREW (BK20)	2	
7	09320-09501	CUSHION	2	
8	35950-14A11	REFLEX REFLECTOR ASSY, FR SIDE	2	
9	09119-06109	BOLT	2	
10	09160-08043	WASHER (8.5X18X1)	2	

000750AL5_E00

FIG.334A

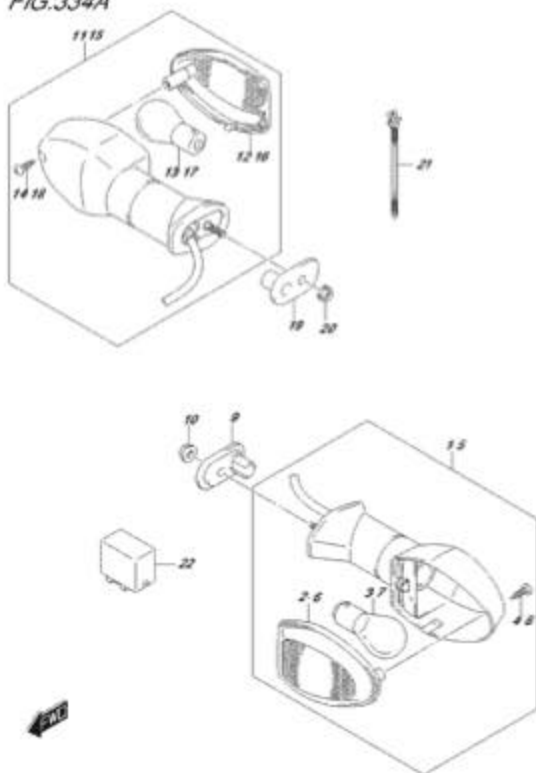


DSR750AL5_E99_2004
TURN SIGNAL LAMP

FIG.334A (1-D-10) TURN SIGNAL LAMP

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	35601-08J01	LAMP ASSY, FRONT TURN SIGNAL RH	1	
2	35612-08J01	LENS	1	
3	09471-12045	BULB (12V,21W)	1	
4	03211-0414B	SCREW	1	
5	35602-08J01	LAMP ASSY, FRONT TURN SIGNAL LH	1	
6	35632-08J01	LENS	1	
7	09471-12045	BULB (12V,21W)	1	
8	03211-0414B	SCREW	1	
9	35629-31F40	PLATE, FRONT TURN SIGNAL	2	
10	08316-1005A	NUT	2	
11	35603-08J01	LAMP ASSY, REAR TURN SIGNAL RH	1	
12	35632-08J01	LENS	1	
13	09471-12045	BULB (12V,21W)	1	
14	03211-0414B	SCREW	1	
15	35604-08J01	LAMP ASSY, REAR TURN SIGNAL LH	1	
16	35612-08J01	LENS	1	
17	09471-12045	BULB (12V,21W)	1	
18	03211-0414B	SCREW	1	
19	35629-31F40	PLATE, REAR TURN SIGNAL	2	
20	08316-1005A	NUT	2	
21	09407-11402	CLAMP (L-96)	1	
22	38610-03F00	RELAY ASSY, TURN SIGNAL LAMP	1	

DSR750AL5_E99

FIG.339A

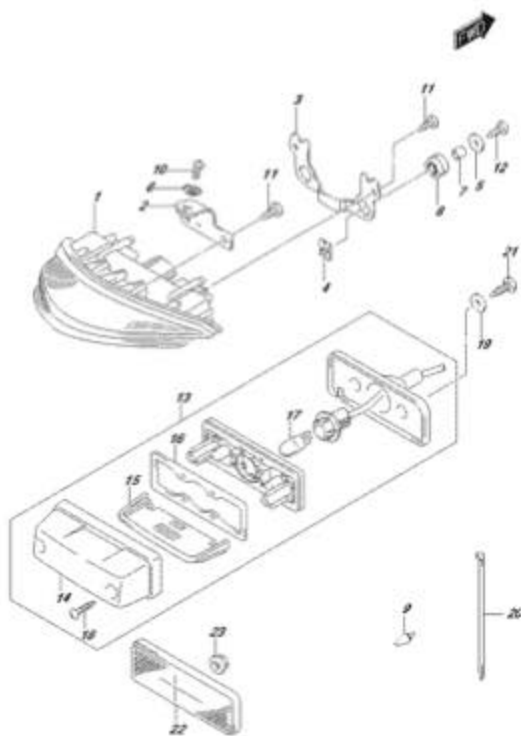


001700A15_070_004
REAR COMBINATION LAMP

FIG.339A (1-D-11) REAR COMBINATION LAMP

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	35710-21H00	LAMP ASSY, REAR COMBINATION	1	
2	35726-08J00	BRACKET, REAR COMBINATION LAMP	1	
3	35726-08J10	BRACKET, REAR COMBINATION LAMP	1	
4	09148-05047	NUT	2	
5	09160-05501	WASHER (5.5X20X1.2)	2	
6	09169-06071	WASHER	1	
7	09180-06285	SPACER (6.5X10X3)	2	
8	09320-09009	CUSHION	2	
9	09321-09028	CUSHION	1	
10	02142-0512A	SCREW	1	
11	03541-0516A	SCREW	4	
12	03541-0520B	SCREW	2	
13	35910-16G11	LAMP ASSY, LICENSE	1	
14	35917-16G00	COVER	1	
15	35912-16G01	LENS	1	
16	35913-16G00	GASKET	1	
17	09471-12216	BULB (12V5W)	1	
18	03211-0416A	SCREW	2	
19	09160-05501	WASHER (5.5X20X1.2)	2	
20	09407-14407	CLAMP (L-145)	1	
21	03541-0516A	SCREW	2	
22	35970-07F01	REFLECTOR ASSY, REAR SIDE	1	
23	08316-1005A	NUT	1	

001700A15_070_004

FIG.350A

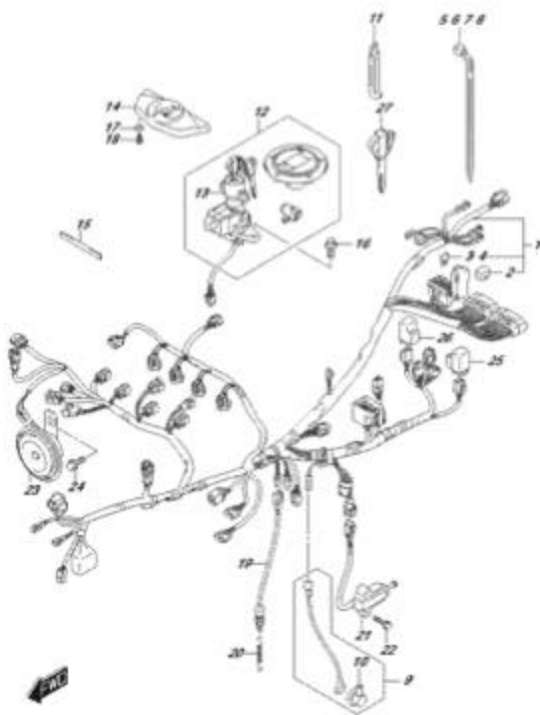

00703045_E99_004
WIRING HARNESS

FIG.350A (1-D-12) WIRING HARNESS

REF NO	PART NO	DESCRIPTION	QTY	REMARKS
1	36610-06J00	HARNESS, WIRING	1	
2	36654-06J30	CAP, TS	1	
3	09481-10501	FUSE (10A)	5	
4	09481-15501	FUSE (15A)	1	
5	09407-14407	CLAMP (L145)	3	
6	09407-14403	CLAMP (L125)	1	
7	09407-18402	CLAMP (L165)	1	
8	09407-19401	CLAMP (L185)	2	
9	36851-44G00	WIRE, OIL PRESSURE SWITCH LEAD	1	
10	36618-43410	CAP, OIL PRESSURE SWITCH	1	
11	09404-06429	CLAMP (L45)	2	
12	37101-44810	LOCK SET	1	
13	37100-44G20	LOCK ASSY, STEERING	1	
14	37180-44G20	COVER, STEERING LOCK	1	
15	37187-44G00	PROTECTOR, IGNITION SWITCH	1	
16	09119-08100	BOLT (RX20)	2	
17	09160-05037	WASHER (5.5X16X1.2)	2	
18	01550-0510A	BOLT	2	
19	37740-45D00	SWITCH ASSY, STOP LAMP	1	
20	09443-08012	SPRING	1	
21	37840-35F00	SWITCH ASSY, SIDE STAND	1	
22	01550-0620A	BOLT	2	
23	38500-16G01	HORN ASSY	1	
24	01550-0812A	BOLT	1	
25	38740-24X50	RELAY ASSY, FUEL PUMP	1	FOR FUEL PUMP
26	38740-24X50	RELAY ASSY, FAN MOTOR	1	FOR FAN MOTOR
27	37146-41G00	KEY, BLANK	1	OPT

00703045_E99

FIG.401A

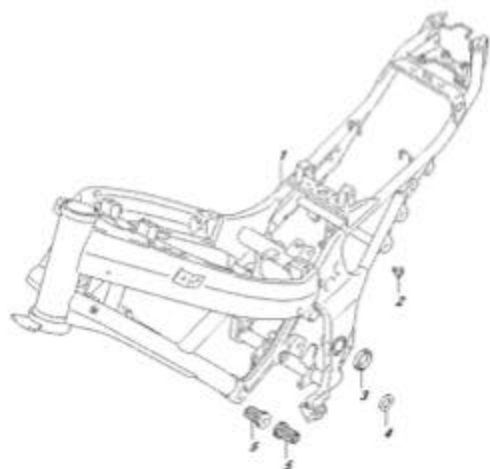


FIG.401A (1-D-14) FRAME

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	41100-06J10-YAP	FRAME (BLACK)	1	
2	43585-01H01	PLUG, TANK RAIL	2	
3	43585-40H10	CAP., FRAME PIVOT	2	
4	09161-12010	WASHER (12.6X24X2.2)	2	
5	41184-06J01	BUSH, ENGINE MOUNTING REAR	2	



FIG.406A

FIG.406A (1-D-15) HOLDER

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	47431-06J00	HOLDER, ELECTRIC PARTS	1	
2	09280-63003	O RING (D3.5/D 62.5)	1	
3	03541-0516A	SCREW	2	
4	09800-21056	TOOL ASSY	1	
5	09622-00003	CLAMP, WRENCH	1	

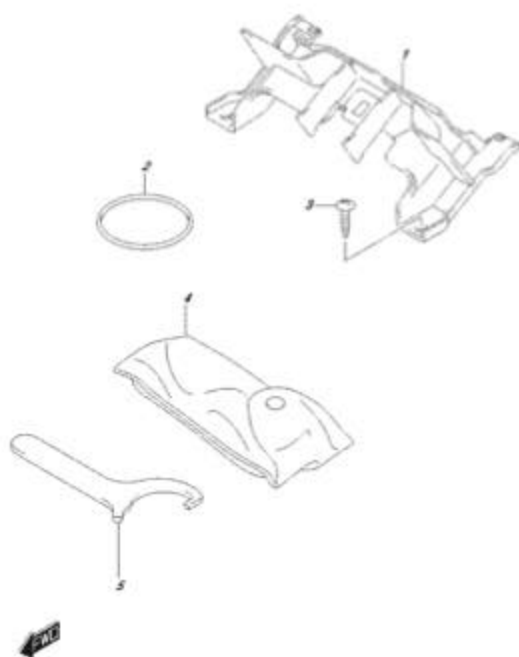


FIG.407A


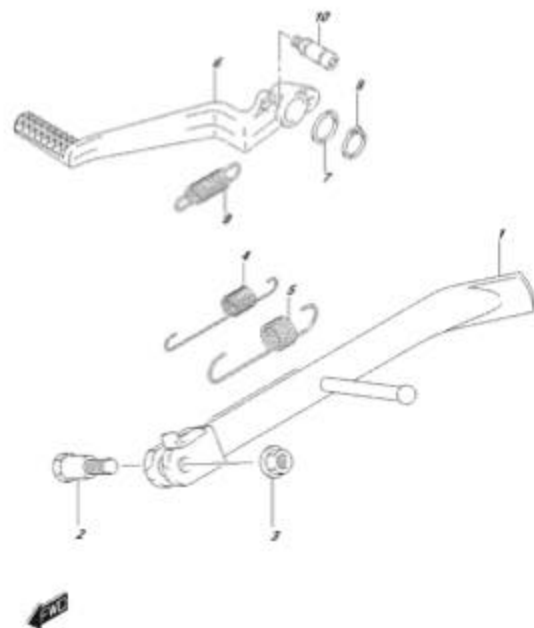


FIG.407A (1-E-2) STAND

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	42310-08J00	STAND, PROP	1	
2	09111-10059	BOLT (16X21)	1	
3	08319-3110A	NUT	1	
4	09443-14058	SPRING	1	
5	09443-19011	SPRING	1	
6	43111-08J00	PEDAL, BRAKE	1	
7	09160-18022	WASHER (18X24X1)	1	
8	08331-3118A	CIRCLIP	1	
9	09443-13032	SPRING	1	
10	43561-24F00	HOOK, RETURN SPRING	1	

FIG.415A

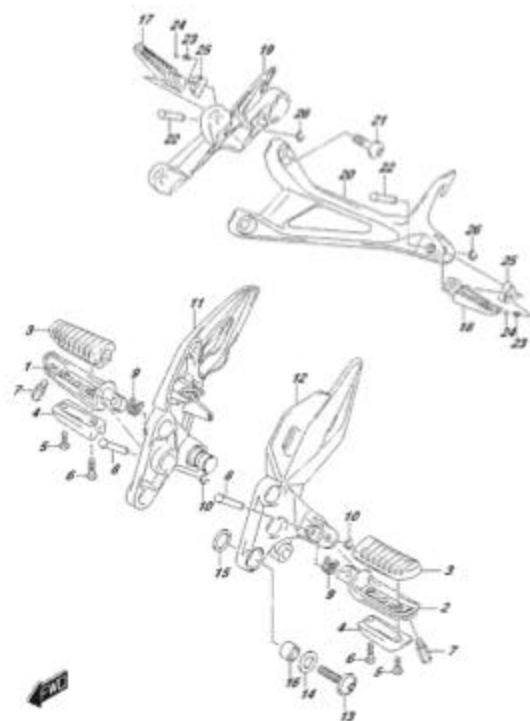


000700415_E01_415A
FOOTREST

FIG.415A (1-E-3) FOOTREST

REF NO	PART NO	DESCRIPTION	QTY	REMARKS
1	43511-44G10	BAR, FRONT FOOTREST RH	1	
2	43521-44G10	BAR, FRONT FOOTREST LH	1	
3	43550-44G20	RUBBER	2	
4	43536-44G00	BALANCER, FRONT FOOTREST	2	
5	02142-0525A	SCREW	2	
6	02142-0530A	SCREW	2	
7	43576-48B02	BOLT, BANK SENSOR	2	
8	09208-06019	PIN	2	
9	09448-14046	SPRING	2	
10	08332-1106A	E RING	2	
11	43510-06J00	BRACKET, FRONT FOOTREST RH	1	
12	43521-06J00	BRACKET, FRONT FOOTREST LH	1	
13	09106-08147	BOLT (BX3)	6	
14	09161-13004	WASHER (13.7X24X2)	6	
15	09161-17002	WASHER (17.2X24X2.2)	6	
16	09319-08045	BUSH (8.4X25X16)	6	
17	43611-37H00	BAR, PILLION FOOTREST RH	1	
18	43621-37H00	BAR, PILLION FOOTREST LH	1	
19	43611-06J00-YAP	BRACKET, PILLION FOOTREST RH (BLACK)	1	
20	43621-06J00-YAP	BRACKET, PILLION FOOTREST LH (BLACK)	1	
21	09106-08186	BOLT (BX2)	4	
22	09208-06020	PIN	2	
23	09440-05003	SPRING	2	
24	06111-07004	BALL	2	
25	43616-01H20	PLATE, PILLION FOOTREST RH	2	
26	08332-1106A	E RING	2	

000750415_E09

FIG.420A

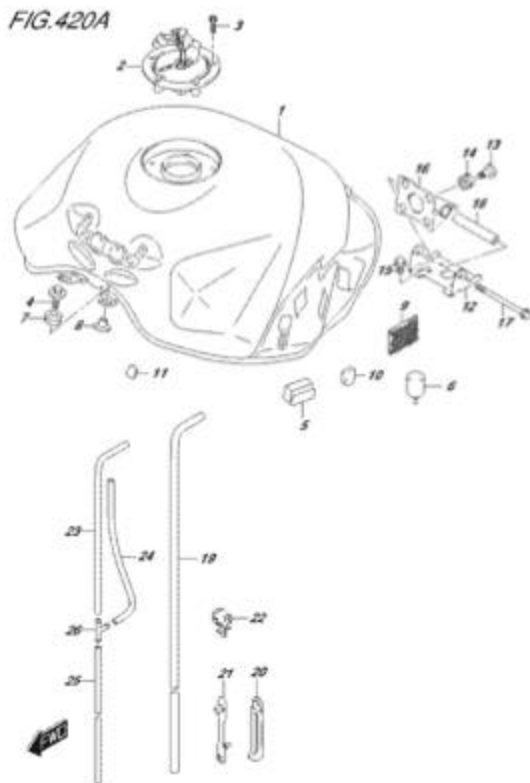


020700AL5_E02_420A
FUEL TANK

FIG.420A (1-E-4) FUEL TANK

REF NO	PART NO	DESCRIPTION	QTY	REMARKS
1-1	44100-08J01-YYK	TANK ASSY, FUEL (BLACK)	1	
1-2	44100-08J01-YYW	TANK ASSY, FUEL (WHITE)	1	
2	44200-16850	CAP SET, FUEL TANK	1	
3	09106-05017	BOLT (5X20)	3	
4	01560-0625A	BOLT	2	
5	44541-08J00	CUSHION, FUEL TANK SIDE	2	
6	44542-41G00	CUSHION, FUEL TANK REAR	2	
7	44511-16G00	CUSHION, FUEL TANK FRONT	2	
8	44512-16G00	SPACER, FUEL TANK FRONT	2	
9	44572-13G00	FASTENER	4	
10	44542-08J00	CUSHION, TANK COVER SIDE	2	
11	44543-08J00	CUSHION, TANK COVER CENTER	2	
12	44550-08J00	BRACKET, FUEL TANK REAR NO.2	1	
13	09139-06191	SCREW (8X22)	4	
14	09320-08071	CUSHION	4	
15	01550-0612A	BOLT	4	
16	44530-41G00	BRACKET, FUEL TANK REAR	1	
17	07120-0695A	BOLT	1	
18	44561-18G00	SPACER, FUEL TANK REAR	1	
19	44423-08J01	HOSE, FUEL TANK DRAIN	1	
20	09404-06433	CLAMP (L.85)	1	
21	09407-05406	CLAMP (L.118)	1	
22	09403-18307	CLAMP	2	
23	44424-08J01	HOSE, BREATHING NO.1	1	
24	44424-15H10	HOSE, BREATHING NO.3	1	
25	09352-50823-600	HOSE (5X8.2X693)	1	L:600-~260
26	09367-06007	3 WAY	1	

020750AL5_E09

FIG.424A

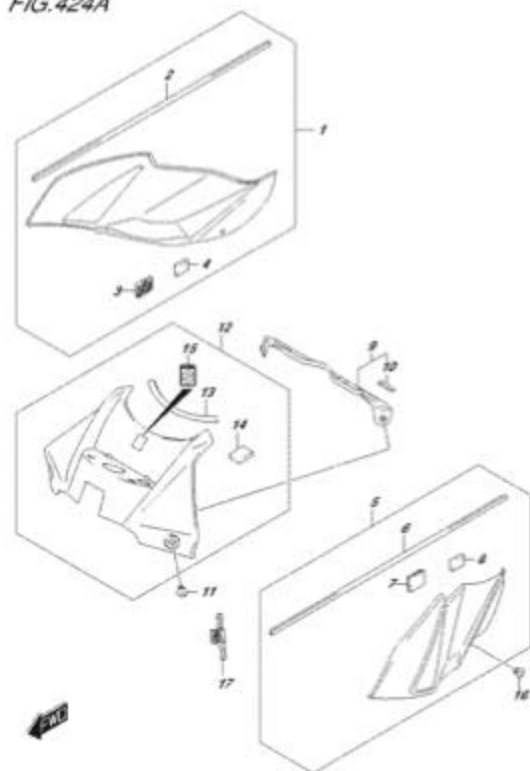

DISPOSABLE, ETC. AREA
FUEL TANK SIDE COVER

FIG.424A (1-E-5) FUEL TANK SIDE COVER

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	44250-06J00-291	COVER, TANK SIDE RH (BLACK)	1	
2	44252-06J00	CUSHION	1	
3	44572-02F01	FASTENER	2	
4	47163-10FA0	CUSHION	2	
5	44250-06J00-291	COVER, TANK SIDE LH (BLACK)	1	
6	44252-06J00	CUSHION	1	
7	44572-02F01	FASTENER	2	
8	47163-10FA0	CUSHION	2	
9	44160-06J00	BRACKET, TANK COVER CENTER	1	
10	51961-21D00	MOLDING, BRACKET	2	
11	09139-06172	SCREW (5X10)	2	
12	44290-06J10-PGZ	COVER, TANK CENTER (GRAY)	1	
13	44292-06J00	CUSHION, FUEL TANK COVER CTR	1	
14	47163-10FA0	CUSHION, TANK COVER CTR NO.2	2	
15	68281-47HA0	EMBLEM "S"	1	
16	09409-06314-5PK	CLIP (BLACK)	2	
17	44293-06J00	CUSHION, TANK COVER	2	

GSR750AL5_E99

FIG.445A

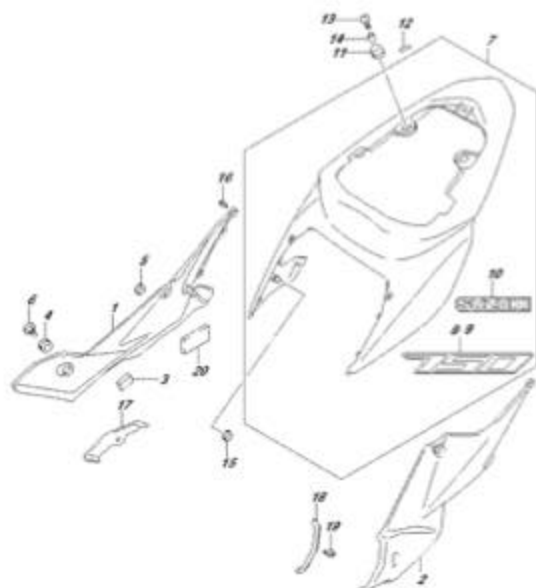


FIG.445A (1-E-6) FRAME COVER

REF NO	PART NO	DESCRIPTION	QTY	REMARKS
1	47511-06J00-291	COVER, FRAME FRONT RH (BLACK)	1	
2	47611-06J00-291	COVER, FRAME FRONT LH (BLACK)	1	
3	94422-06G00	CUSHION	2	
4	09320-09016	CUSHION	2	
5	47113-37H00	CUSHION	2	
6	47118-06J00	SCREW, FRAME COVER FRONT	2	
7-1	47310-06J00-AJX	COVER, FRAME CENTER (WHITE)	1	FOR AJX
7-2	47310-06J20-4TX	COVER, FRAME CENTER (BLACK)	1	FOR YKV
8-1	68161-06J00-AHS	EMBLEM, "750" RH (BLACK/WHITE)	1	FOR AJX
8-2	68161-06J00-A38	EMBLEM, "750" RH (RED/BLACK)	1	FOR 4TX
9-1	68171-06J00-AHS	EMBLEM, "750" LH (BLACK/WHITE)	1	FOR AJX
9-2	68171-06J00-A38	EMBLEM, "750" LH (RED/BLACK)	1	FOR 4TX
10-1	68171-28H00-YU8	EMBLEM, "SUZUKI" (GRAY)	1	FOR AJX
10-2	68171-28H10-CTY	EMBLEM, "SUZUKI" (SILVER/BLACK)	1	FOR 4TX
11	47312-37H00	CUSHION	2	
12	94443-06G00	TAPE, FRAME COVER CENTER	4	
13	09136-06105	SCREW (EX20)	2	
14	09180-06283	SPACER (8.5X10X7)	2	
15	09320-08018	CUSHION	2	
16	09409-06314-SPK	CLIP (BLACK)	4	
17	47711-06J00	COVER, FRAME TOP RH	1	
18	47811-06J00	COVER, FRAME TOP LH	1	
19	09409-07333	CLIP	2	
20	33652-21G10	CUSHION, FUEL TANK COVER SIDE	2	


FIG.447A



FIG.447A (1-E-7) FRAME BODY COVER

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	47531-08J00	COVER, FRAME BODY INNER RH	1	
2-1	47532-08J00-YKV	COVER, FRAME BODY RH (BLACK)	1	
2-2	47532-08J00-YYWV	COVER, FRAME BODY RH (WHITE)	1	
3	47533-08J00-PGZ	COVER, FRAME BODY LOWER RH (GRAY)	1	
4	47541-08J00	COVER, FRAME BODY INNER LH	1	
5-1	47542-08J00-YKV	COVER, FRAME BODY LH (BLACK)	1	
5-2	47542-08J00-YYWV	COVER, FRAME BODY LH (WHITE)	1	
6	47543-08J00-PGZ	COVER, FRAME BODY LOWER LH (GRAY)	1	
7	68111-47HA0	EMBLEM, "S"	2	
8-1	68661-08J10-A39	EMBLEM, "GSR" RH (RED/BLACK)	1	
8-2	68661-08J10-AHS	EMBLEM, "GSR" RH (BLACK/WHITE)	1	
9-1	68671-08J10-A39	EMBLEM, "GSR" LH (RED/BLACK)	1	
9-2	68671-08J10-AHS	EMBLEM, "GSR" LH (BLACK/WHITE)	1	
10	09139-05190	BOLT (10X30)	4	
11	09320-08028	CUSHION	2	
12	09320-09016	CUSHION	6	
13	09329-18001	CUSHION	4	
14	03541-0516A	SCREW	6	

FIG.451A

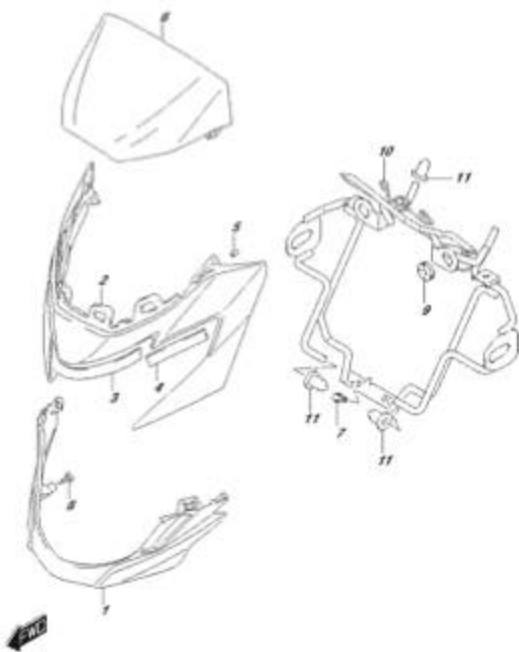

QSR750AL5_E99_451A
HEADLAMP HOUSING

FIG.451A (1-E-8) HEADLAMP HOUSING

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	51831-08J00-PGZ	COVER, HEADLAMP LOWER (GRAY)	1	
2-1	51821-08J00-YKV	COVER, HEADLAMP UPPER (BLACK)	1	
2-2	51821-08J00-YVW	COVER, HEADLAMP UPPER (WHITE)	1	
3	51822-08J00	CUSHION, COVER UPPER	1	
4	51823-08J00	CUSHION, COVER	2	
5	44294-43H00	CUSHION, HEADLAMP COVER	4	
6	51811-08J00	COVER, METER	1	
7	01547-0612A	BOLT	2	
8	03541-0518A	SCREW	4	
9	09320-08026	CUSHION	2	
10	51850-08J00	BRACE, HEADLAMP HOUSING	1	
11	51831-21D00	CUSHION, BRACE	4	

QSR750AL5_E99

FIG.460A

FIG.460A (1-E-9) FRONT FENDER

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1-1	53100-08J10-YYWW	FENDER, FRONT (WHITE)	1	
1-2	53100-08J10-YYKV	FENDER, FRONT (BLACK)	1	
2	09320-09016	CUSHION	2	
3	09139-06146	SCREW (BX16)	2	
4	09139-06131	SCREW (BX16)	4	


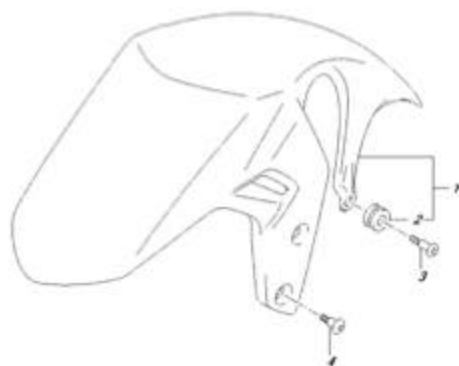


FIG.462A

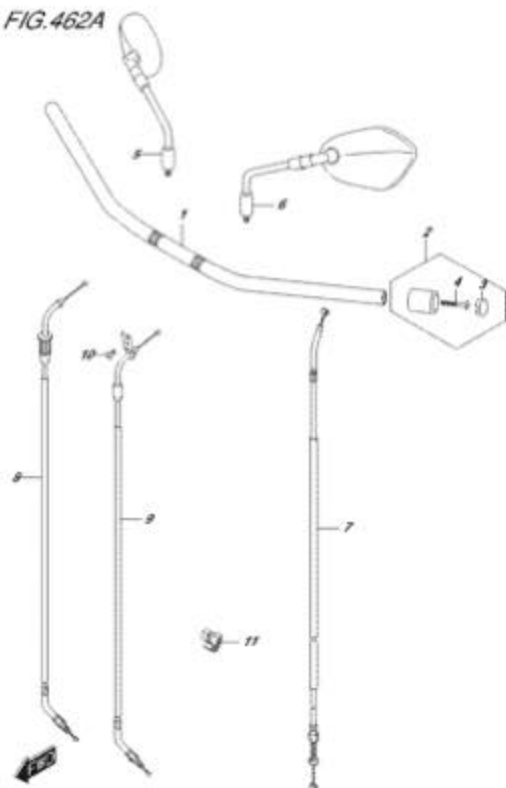


000704L5_E02_4834
HANDLEBAR

FIG.462A (1-E-10) HANDLEBAR

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	56110-06J10-YMC	HANDLEBAR (SILVER)	1	
2	56200-33870	BALANCER SET, HANDLEBAR	2	
3	56279-33E00	CAP	2	
4	02142-0640A	SCREW	2	
5	56500-06J00	MIRROR ASSY, REAR VIEW RH	1	
6	56600-06J00	MIRROR ASSY, REAR VIEW LH	1	
7	58200-06J00	CABLE ASSY, CLUTCH	1	
8	58300-06J00	CABLE ASSY, THROTTLE NO.1	1	
9	58300-06J10	CABLE ASSY, THROTTLE NO.2	1	
10	09125-05042	SCREW (5X10)	1	
11	09403-11321	CLAMP	1	

00R750AL5_E09

FIG.467A

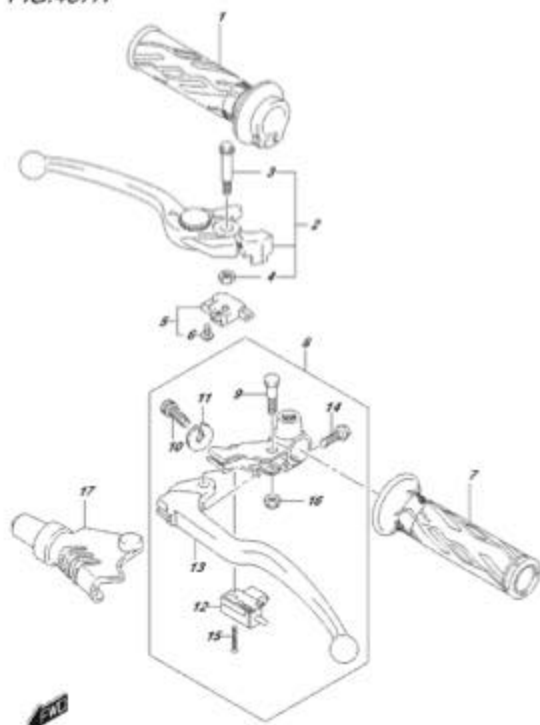

0000000000_0000_0000
HANDLE LEVER

FIG.467A (1-E-11) HANDLE LEVER

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	57110-21H01	GRIP, THROTTLE	1	
2	57300-44G12	LEVER ASSY, BRAKE	1	
3	57431-17H02	BOLT, PIVOT	1	
4	08319-2106A	NUT	1	
5	57460-14J01	SWITCH ASSY, FRONT BRAKE	1	
6	57465-17C00	SCREW	1	
7	57211-21H00	GRIP, LH	1	
8	57500-25D00	LEVER ASSY, CLUTCH	1	
9	57431-45C01	BOLT, PIVOT	1	
10	57441-45C00	ADJUSTER WIRE	1	
11	57442-45C00	NUT, LOCK	1	
12	57560-05A00	SWITCH, CLUTCH	1	
13	57621-40F00	LEVER, CLUTCH	1	
14	01547-0620B	BOLT	1	
15	02122-0320A	SCREW	1	
16	08319-2106B	NUT	1	
17	57661-33E00	COVER, CLUTCH LEVER	1	

0000000000_0000_0000

FIG.474A


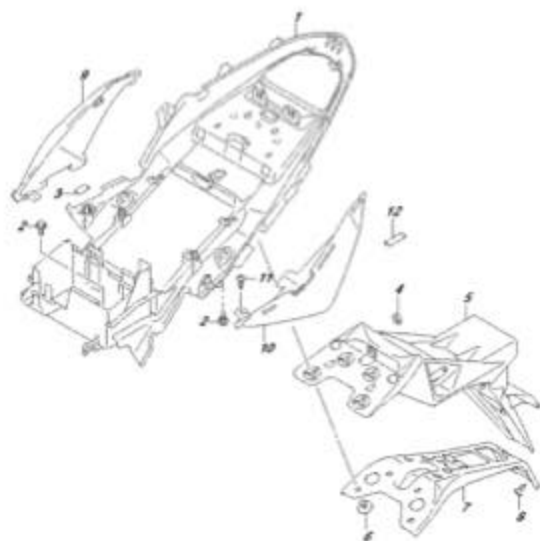


FIG.474A (1-E-12) REAR FENDER

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	63111-06J00	FENDER, REAR FRONT	1	
2	09111-06107	BOLT (6X12)	3	
3	44612-13600	CUSHION	4	CUT AS REQUIRED
4	09160-06077	WASHER (6.5X20X1.2)	2	
5	63113-06J00	FENDER, REAR REAR	1	
6	09116-06166	BOLT (6X16)	4	
7	63131-06J00	BRACKET, REAR FENDER REAR	1	
8	03541-0616A	SCREW	2	
9	63171-06J00	COVER, REAR FENDER RH	1	
10	63181-06J00	COVER, REAR FENDER LH	1	
11	03541-0516A	SCREW	4	
12	94443-06G00	TAPE, REAR FENDER	2	



FIG.496A

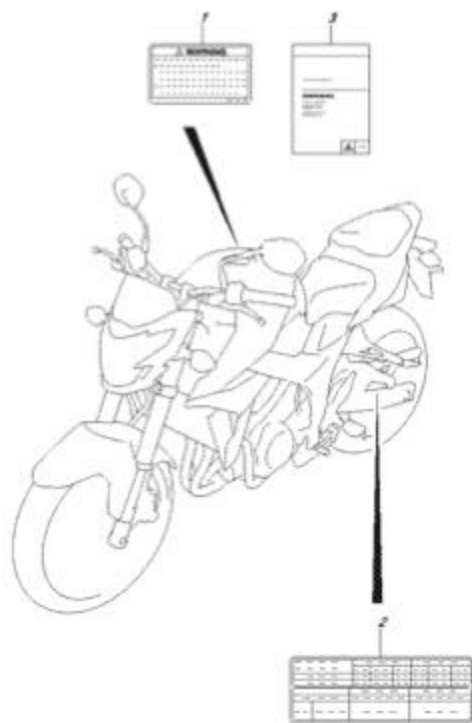


CONTINENTAL ETC. 496A
LABELS

FIG.496A (1-E-13) LABEL

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1-1	68319-49J00	LABEL, WARNING (ENGLISH)	1	
1-2	68319-49J50	LABEL, WARNING (SPANISH)	1	
1-3	68319-49J00	LABEL, WARNING (KOREAN)	1	
2-1	68332-08J00	LABEL, TIRE INFORMATION (ENGLISH)	1	
2-2	68332-08J00	LABEL, TIRE INFORMATION (SPANISH)	1	
2-3	68332-08J90	LABEL, TIRE INFORMATION (KOREAN)	1	
3-1	99011-08J64-01A	MANUAL, OWNER'S (ENGLISH)	1	
3-2	99011-08J64-029	MANUAL, OWNER'S (SPANISH)	1	
3-3	99011-08J64-068	MANUAL, OWNER'S (KOREAN)	1	

QSR750AL5_E99

FIG.505A

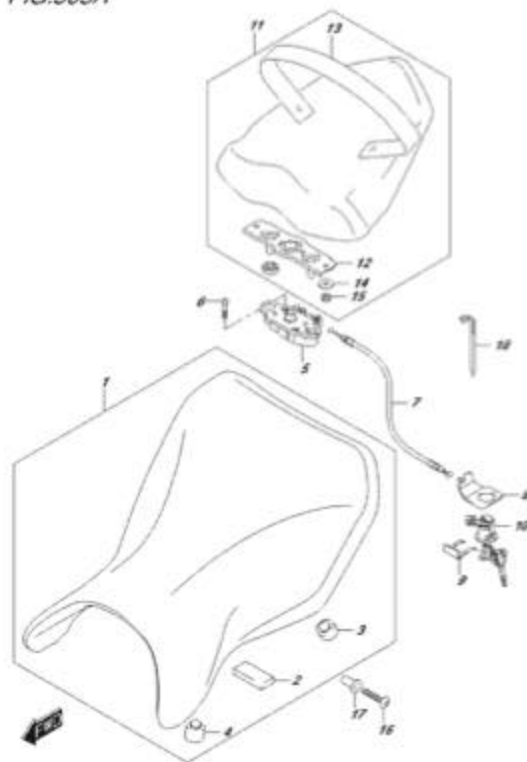


00000000_0000_0000
SEAT

FIG.505A (1-E-14) SEAT

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	45100-06J00-DW2	SEAT ASSY (BLACK)	1	
2	45149-37H00	CUSHION	1	
3	09321-10011	CUSHION	4	
4	09321-10034	CUSHION	2	
5	45220-47H00	BRACKET, SEAT SUPPORT	1	
6	02122-0630A	SCREW	2	
7	45280-06J00	CABLE, SEAT LOCK	1	
8	45288-14F00	GUIDE, SEAT LOCK CABLE	1	
9	45289-11F00	PLATE, SEAT LOCK ASSY	1	
10	95700-14F00	LOCK ASSY, SEAT	1	
11	45300-06J01-P3H	SEAT ASSY, PILLION (BLACK)	1	
12	45290-47H01	STRIKER, SEAT LOCK	1	
13	45380-06J00	BAND, PILLION SEAT GRIP	1	
14	09160-06088	WASHER (8.5X26X1.6)	2	
15	08316-1006A	NUT	2	
16	09139-09065-XC0	SCREW (8X30)	2	
17	09180-06320	SPACER (8.5X5X19.4)	2	
18	09407-11401	CLAMP (L.55)	1	

00000000_0000_0000

FIG.521A

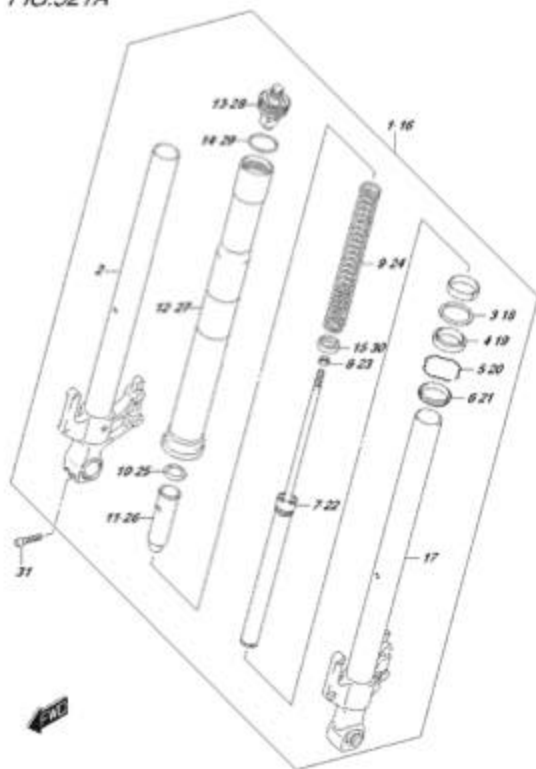


000750AL5_E99_0714
FRONT FORK DAMPER

FIG.521A (1-E-15) FRONT FORK DAMPER

REF NO	PART NO	DESCRIPTION	QTY	REMARKS
1	51103-08J00	DAMPER ASSY, FRONT FORK RH	1	
2	51110-08J00	TUBE, INNER RH	1	
3	51158-05A00	WASHER	1	
4	51153-10G50	OIL SEAL	1	
5	51156-49440	RING, OIL SEAL STOPPER	1	
6	51173-14F00	SEAL, DUST	1	
7	51146-08J00	CYLINDER	1	
8	51352-13A60	NUT, ROD	1	
9	51171-08J00	SPRING	1	
10	51158-40F30	GUIDE, SPRING	1	
11	51176-40F30	SPACER, SPRING	1	
12	51130-08J00	TUBE, OUTER	1	
13	51351-08J00	CAP	1	
14	51117-39G20	O RING	1	
15	51178-08J00	SEAT, SPRING	1	
16	51104-08J00	DAMPER ASSY, FRONT FORK LH	1	
17	51120-08J00	TUBE, INNER LH	1	
18	51158-05A00	WASHER	1	
19	51153-10G50	OIL SEAL	1	
20	51156-49440	RING, OIL SEAL STOPPER	1	
21	51173-14F00	SEAL, DUST	1	
22	51146-08J00	CYLINDER	1	
23	51352-13A60	NUT, ROD	1	
24	51171-08J00	SPRING	1	
25	51158-40F30	GUIDE, SPRING	1	
26	51176-40F30	SPACER, SPRING	1	
27	51130-08J00	TUBE, OUTER	1	
28	51351-08J00	CAP	1	
29	51117-39G20	O RING	1	
30	51178-08J00	SEAT, SPRING	1	
31	51166-40H20	BOLT	4	

000750AL5_E99

FIG.524A

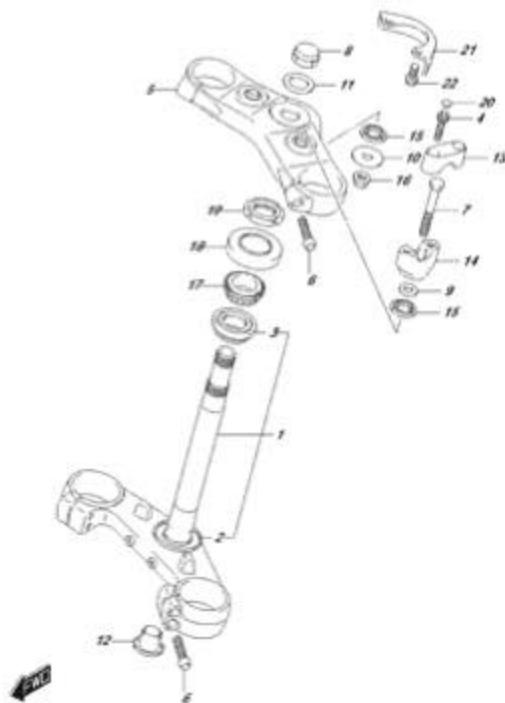


000750AL5_E99_0004
STEERING STEM

FIG.524A (1-F-2) STEERING STEM

REF NO	PART NO	DESCRIPTION	QTY	REMARKS
1	51410-08J00-291	BRACKET, UNDER (BLACK)	1	
2	51644-12C00	SEAL, STEERING LOWER	1	
3	09265-30020	BEARING (30X55X17)	1	
4	51147-17H00	BOLT	4	
5	51311-08J00-291	BRACKET, UPPER (BLACK)	1	
6	51166-40H20	BOLT (RX#)	4	
7	51321-17H10	BOLT	2	
8	51353-24B00	NUT, CAP	1	
9	51354-17H00	WASHER	2	
10	51355-16G00	WASHER	2	
11	51356-10D03	WASHER	1	
12	51482-26F00	CAP	1	
13	56211-08J00-291	HOLDER, HANDLE (BLACK)	2	
14	56221-08J00-291	HOLDER, HANDLE (BLACK)	2	
15	56245-08J00	RUBBER, HANDLE HOLDER	4	
16	08319-3110A	NUT	2	
17	09265-25036	BEARING (25X47X15)	1	
18	51643-40S02	SEAL, STEERING UPPER DUST	1	
19	51631-31F00	NUT, STEERING STEM	1	
20	09250-06011	CAP (OD:11)	4	
21	51911-08J01	PLATE, STEERING LOCK	1	
22	09103-08351	BOLT (RX16)	2	

000750AL5_E99

FIG.530A

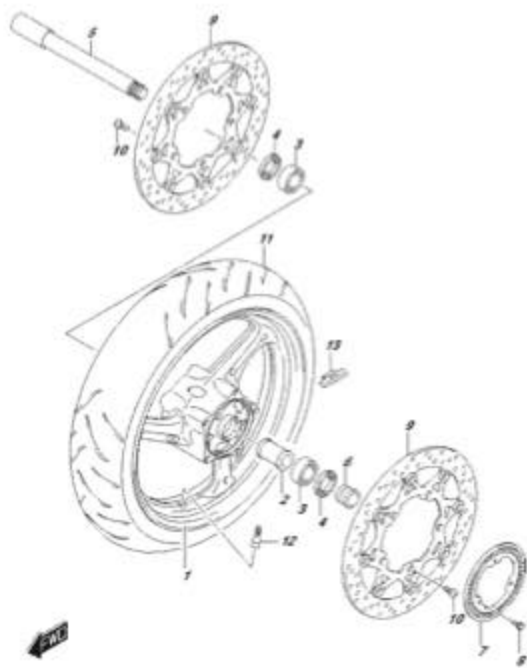


000700AL5_EPR_0004
FRONT WHEEL

FIG.530A (1-F-3) FRONT WHEEL

REF NO	PART NO	DESCRIPTION	QTY	REMARKS
1	54111-44G10-019	WHEEL, FRONT (17MXMT3.50) (BLACK)	1	
2	54731-44G00	SPACER, FRONT WHEEL BEARING	1	
3	09262-22035	BEARING (22X44X12)	2	
4	09263-28016	OIL SEAL (28X44X7.5)	2	
5	54711-44G00	AXLE, FRONT	1	
6	54751-44G00	SPACER, FRONT AXLE	1	
7	54162-27G00	RING, SPEED SENSOR FRONT	1	
8	07130-0512A	BOLT	3	
9	59210-44G11	DISC, FRONT BRAKE	2	
10	09106-08160	BOLT (BX21)	10	
11	55110-08J00	TIRE, FRONT (120/70D17MC 58W)	1	
12	43130-24A00	VALVE ASSY, WHEEL RIM (TR412)	1	
13-1	55411-22H00	BALANCER, WHEEL NO.1	AR 10G	
13-2	55412-22H00	BALANCER, WHEEL NO.2	AR 20G	
13-3	55413-22H00	BALANCER, WHEEL NO.3	AR 30G	

000750AL5_EPR

FIG.533A

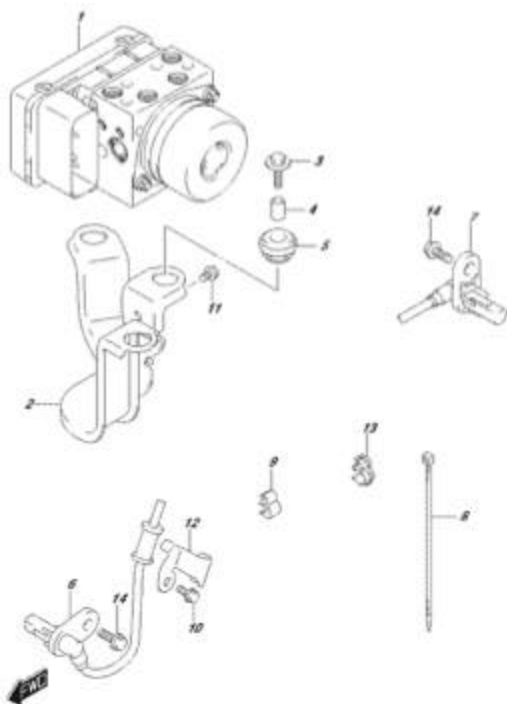


007020AL5_E99_004
HYDRAULIC UNIT

FIG.533A (1-F-4) HYDRAULIC UNIT

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	55610-08J01	UNIT ASSY, HYDRAULIC ABS	1	
2	55660-08J00	HOLDER, HYDRAULIC UNIT	1	
3	09116-06150	BOLT (EX25)	3	
4	55662-10G00	SPACER, HYDRAULIC UNIT	3	
5	55663-10G10	RUBBER, HYDRAULIC UNIT	3	
6	55710-08J00	SENSOR, FRONT WHEEL ABS	1	
7	65710-08J00	SENSOR, REAR WHEEL ABS	1	
8	09407-14407	CLAMP (L145)	3	
9	09408-00266	CLAMP	6	
10	01547-0612A	BOLT	1	
11	01547-0610A	BOLT	2	
12	55731-08J00	CLAMP, SENSOR LEAD FRONT NO.1	1	
13	09408-00242	CLAMP	1	
14	01550-0616A	BOLT	2	

00750AL5_E99

FIG.535A

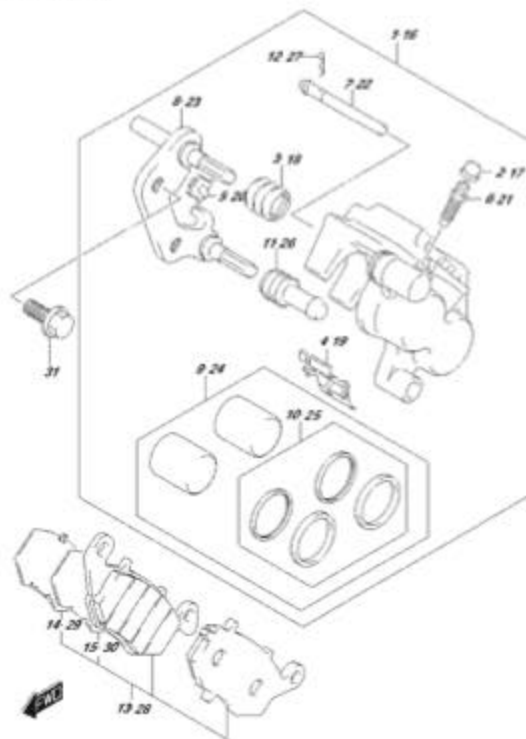


DISASSEMBLY AND REASSEMBLY
FRONT CALIPER

FIG.535A (1-F-5) FRONT CALIPER

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	59100-33D0-999	CALIPER ASSY. FRONT RH	1	
2	55156-66310	CAP. BLEEDER PLUG	1	
3	59112-44B00	BOOT, AXLE	1	
4	59115-33D00	SPRING, PAD RH	1	
5	59116-33D00	GUIDE, PAD	1	
6	59121-18410	BLEEDER	1	
7	59141-44B01	PIN, PAD	1	
8	59150-33D01	CARRIER, CALIPER RH	1	
9	59300-01820	PISTON SET	1	
10	59100-04851	SEAL SET, PISTON	1	
11	59313-36500	INSULATOR, AXLE	1	
12	59142-45000	CLIP, PAD PIN	1	
13	59103-33810	PAD & SHIM SET, RH	1	
14	59172-33D00	SHIM, PAD NO.2	1	
15	59172-01D40	INSULATOR NO.2	1	
16	59300-33D0-999	CALIPER ASSY. FRONT LH	1	
17	55156-66310	CAP. BLEEDER PLUG	1	
18	59112-44B00	BOOT, AXLE	1	
19	59315-33D00	SPRING, PAD LH	1	
20	59116-33D00	GUIDE, PAD	1	
21	59121-18410	BLEEDER	1	
22	59141-44B01	PIN, PAD	1	
23	59350-33D01	CARRIER, CALIPER LH	1	
24	59300-01820	PISTON SET	1	
25	59100-04851	SEAL SET, PISTON	1	
26	59313-36500	INSULATOR, AXLE	1	
27	59142-45000	CLIP, PAD PIN	1	
28	59303-33810	PAD & SHIM SET, LH	1	
29	59372-33D00	SHIM, PAD NO.2	1	
30	59172-01D40	INSULATOR NO.2	1	
31	01550-1025A	BOLT	4	

GSR750AL5_E99

FIG.536A

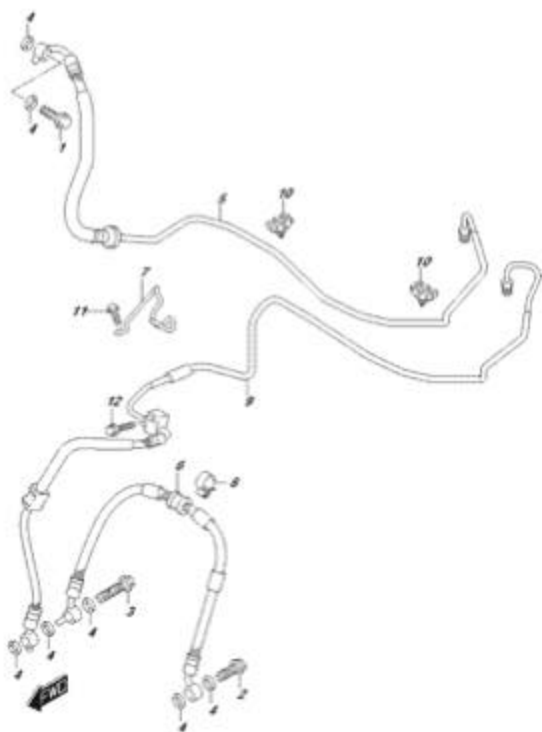


000700AL5_E99_0004
FRONT BRAKE HOSE

FIG.536A (1-F-6) FRONT BRAKE HOSE

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	09360-10062	UNION	1	
2	09360-10062	UNION	1	
3	09360-10064	UNION	1	
4	09161-10009	WASHER (10X15X1.5)	7	
5	59200-08J00	HOSE ASSY, FRONT BRAKE NO.1	1	
6	59240-08J10	HOSE, FRONT BRAKE NO.2	1	
7	59251-08J00	CLAMP, FRONT BRAKE HOSE	1	
8	09403-16412	CLAMP	1	
9	59400-08J00	HOSE ASSY, FR BRAKE NO.2	1	
10	09403-07334	CLAMP	2	
11	01547-0616A	BOLT	1	
12	01547-0620A	BOLT	1	

000750AL5_E99

FIG.537A

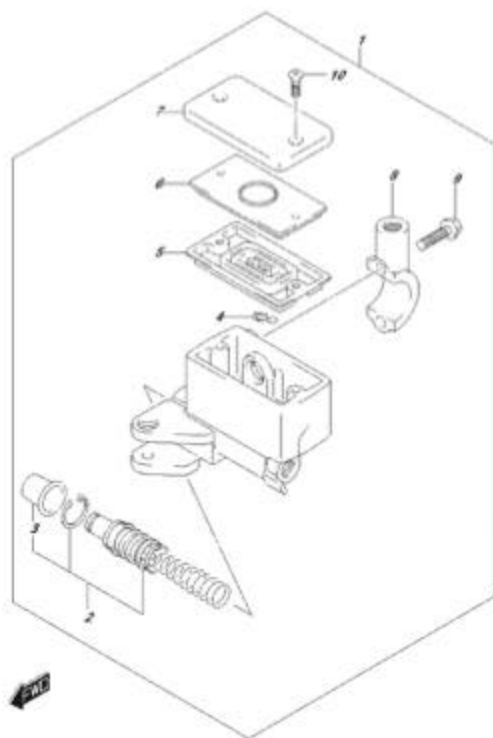

QSR750AL5_E99_001A
FRONT MASTER CYLINDER

FIG.537A (1-F-7) FRONT MASTER CYLINDER

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	59600-10C30	CYLINDER ASSY. FRONT MASTER	1	
2	59600-45870	PISTON & CUP SET	1	
3	59666-44300	BOOT	1	
4	59664-32F00	PROTECTOR	1	
5	59667-49460	DIAPHRAGM	1	
6	59668-41C00	PLATE, DIAPHRAGM	1	
7	59669-10C00	CAP	1	
8	59671-32F00	HOLDER	1	
9	59675-02FA0	BOLT (6X22)	2	
10	60689-49300	SCREW, RESERVOIR CAP	2	

QSR750AL5_E99

FIG.541A

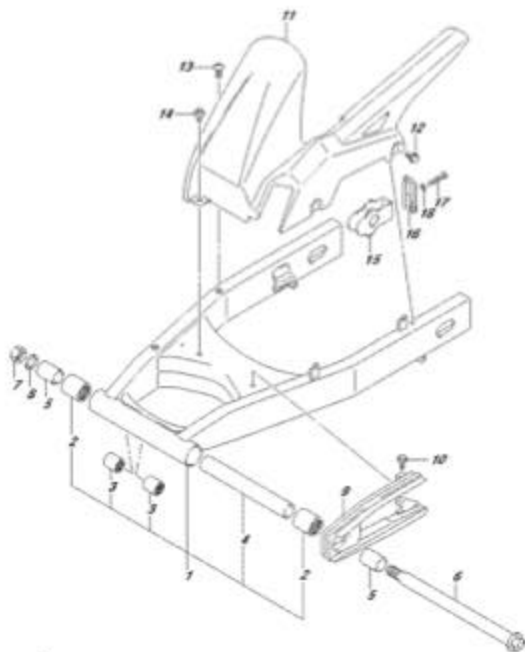


FIG.541A (1-F-8) REAR SWINGINGARM

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	61000-08J00-YAP	SWINGING ARM ASSY, REAR (BLACK)	1	
2	09263-25059	BEARING (25X33X35)	2	
3	09263-17037	BEARING (17X24X25)	2	
4	61262-17C00	SPACER, PIVOT CENTER	1	
5	61251-21E00	SPACER, PIVOT	2	
6	61211-31E00	SHAFT, PIVOT	1	
7	09159-18007	NUT	1	
8	09160-18030	WASHER (18.5X28X2.5)	1	
9	61273-08J00	BUFFER, CHAIN TOUCH DEFENSE	1	
10	09111-06072	BOLT (EX17.8)	2	
11	61310-08J00	CASE, CHAIN	1	
12	09111-06107	BOLT (EX12)	2	
13	02142-0616A	SCREW	1	
14	09409-08308-SES	CLIP (BLACK)	1	
15	61410-08J10	ADJUSTER, CHAIN	2	
16	61421-08J00	PLATE, CHAIN ADJUSTER GUIDE	2	
17	09106-08119	BOLT (EX50)	2	
18	09164-08015	WASHER	2	

FIG.543A


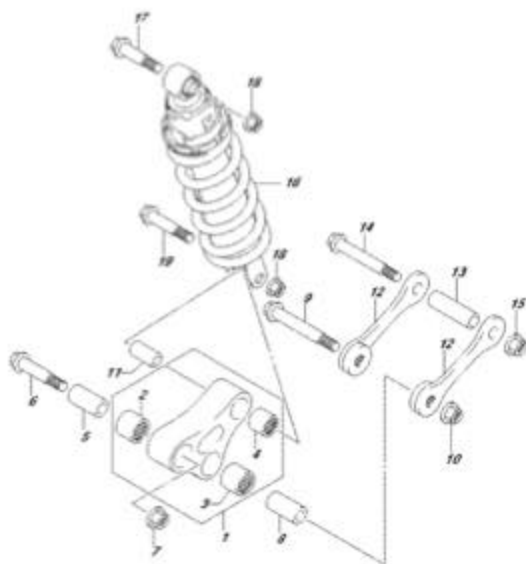


FIG.543A (1-F-9) REAR CUSHION LEVER

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	62900-08840	LEVER SET, REAR CUSHION	1	
2	09263-20074	BEARING (20X27X32)	1	FRONT
3	09263-20074	BEARING (20X27X32)	1	CENTER
4	09263-17046	BEARING (17X24X32)	1	REAR
5	62317-44800	SPACER, FRONT	1	
6	62658-42A02	BOLT, FRONT	1	
7	09159-12056	NUT	1	
8	62317-44800	SPACER, CENTER	1	
9	62658-37F10	BOLT, CENTER	1	
10	09159-12056	NUT	1	
11	62317-47H00	SPACER, REAR	1	
12	62640-08J00	ROD, REAR CUSHION	2	
13	62646-08J00	SPACER, ROD	1	
14	62658-37F10	BOLT, ROD	1	
15	09159-12056	NUT	1	
16	62100-08JA0-17U	ABSORBER ASSY, REAR SHOCK (GRAY)	1	
17	09103-10213	BOLT (10XS2)	1	UPPER
18	09159-10115	NUT	2	
19	09103-10428	BOLT (10XS8)	1	LOWER

FIG.550A

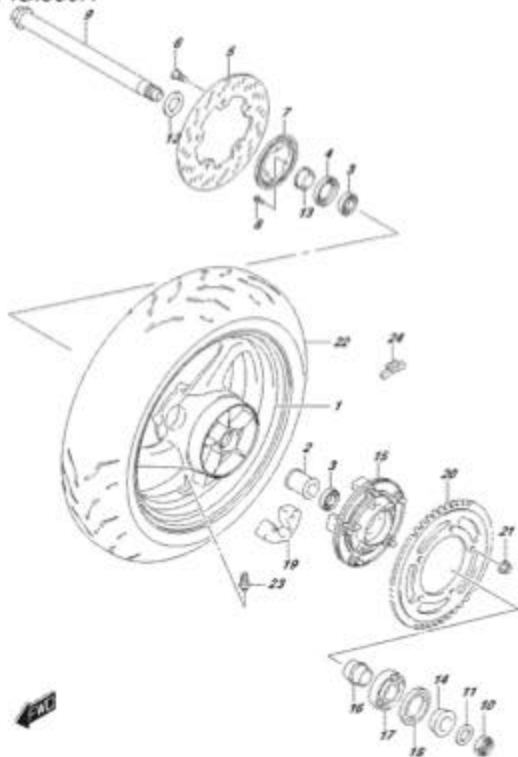


00000000_000_0000
REAR WHEEL

FIG.550A (1-F-10) REAR WHEEL

REF NO	PART NO	DESCRIPTION	QTY	REMARKS
1	64111-44G10-019	WHEEL, REAR (17M/CXMT5.5)	1	
2	64731-44G00	(BLACK)	1	
3	09262-25061	SPACER, REAR WHEEL BEARING	1	
4	09284-37001	BEARING (25X52X15)	2	
5	09211-38G00	OIL SEAL (37X52X8)	1	
6	09106-08160	DISC, REAR BRAKE	1	
7	09106-08160	BOLT (8X21)	5	
8	54162-27G00	RING, SPEED SENSOR REAR	1	
9	07130-0512A	BOLT	3	
10	64711-08J00	AXLE, REAR	1	
11	09159-22007	NUT	1	
12	09160-22086	WASHER (22X46X3)	1	LH
13	09160-25062	WASHER (25.5X46X3)	1	RH
14	64741-44G00	SPACER, REAR AXLE RH	1	
15	64751-08J00	SPACER, REAR AXLE LH	1	
16	64610-35F30	DRUM, REAR SPROCKET	1	
17	64733-44G00	RETAINER, REAR SPROCKET DRUM	1	
18	09262-32022	BEARING (32X65X17)	1	
19	09285-39001	OIL SEAL (36X65X7)	1	
20	64651-35F30	ABSORBER, REAR HUB SHOCK	5	
21	64511-35F10	SPROCKET, REAR (VNT-42)	1	
22	08319-3110A	NUT	5	
23	65110-08J00	TIRE, REAR (180/55ZR17MC 73W)	1	
24	43130-24A00	VALVE ASSY, WHEEL RIM (TR412)	1	
24-1	55411-22H00	BALANCER, WHEEL NO.1	AR	10G
24-2	55412-22H00	BALANCER, WHEEL NO.2	AR	20G
24-3	55413-22H00	BALANCER, WHEEL NO.3	AR	30G

00000000_000_0000

FIG.555A

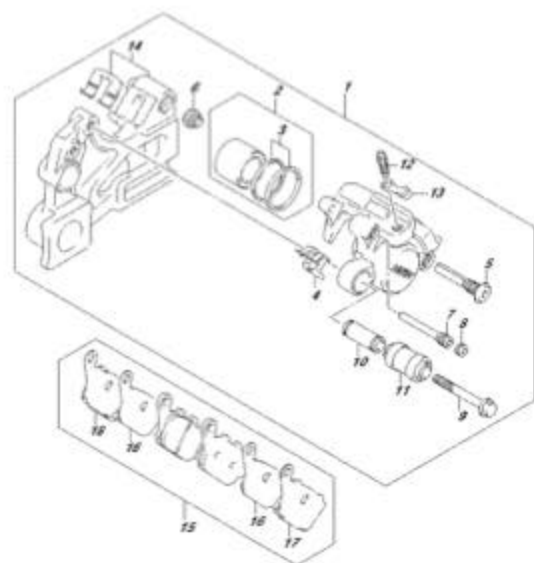


007050AL5_E99_0004
REAR CALIPER

FIG.555A (1-F-11) REAR CALIPER

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	69100-06J10-999	CALIPER ASSY, REAR	1	
2	69100-04810	PISTON SET	1	
3	69100-04820	SEAL SET, PISTON	1	
4	69115-04F00	SPRING, PAD	1	
5	59305-36E00	PIN, BOLT	1	
6	59303-14500	BOOT	1	
7	69141-40F00	PIN, PAD	1	
8	59146-06J00	PIN, PLUG	1	
9	69182-04F00	BOLT	1	
10	69185-04F00	SLEEVE	1	
11	69186-04F00	BOOT, SLEEVE	1	
12	59121-01A00	BLEEDER	1	
13	59122-46H00	CAP, BLEEDER	1	
14	69150-06J10	BRACKET	1	
15	69100-08850	PAD & RETAINER SET	1	
16	69132-06J00	INSULATOR	2	
17	69133-06G00	RETAINER	1	
18	69134-06G00	RETAINER	1	

007050AL5_E99

FIG.558A

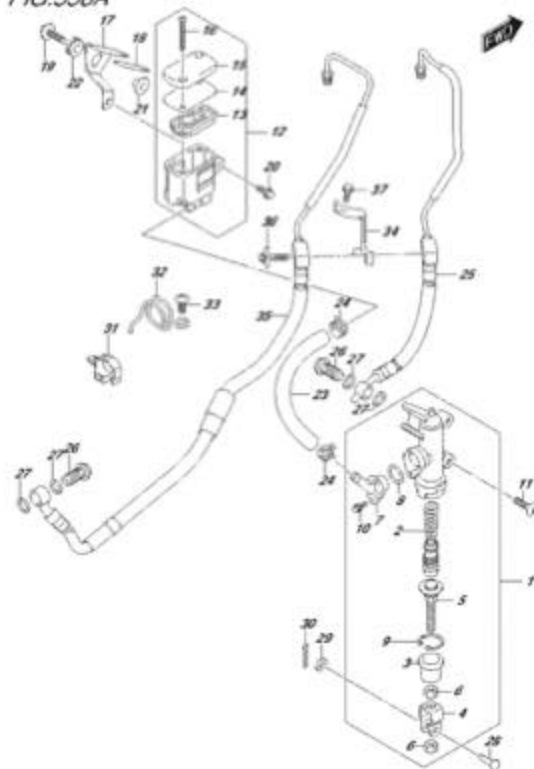


007050AL5_E99
REAR MASTER CYLINDER

FIG.558A (1-F-12) REAR MASTER CYLINDER

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	69600-08J00	CYLINDER ASSY, REAR MASTER	1	
2	69600-34810	PISTON/CAP SET	1	
3	69691-00A00	BOOT	1	
4	69692-44H00	YOK	1	
5	69670-27A30	ROD, PUSH	1	
6	69693-05A00	NUT	2	
7	69672-08J10	CONNECTOR	1	
8	69686-34200	O RING	1	
9	69665-47H00	CIRCLIP	1	
10	02112-7412A	SCREW	1	
11	09139-06026	SCREW (EX20)	2	
12	69740-01H10	TANK ASSY, REAR RESERVOIR	1	
13	69667-01H00	DIAPHRAGM	1	
14	69668-01H00	PLATE, DIAPHRAGM	1	
15	69669-01H00	CAP	1	
16	69669-01H00	SCREW	2	
17	69750-08J00	BRACKET, REAR RESERVOIR TANK	1	
18	69752-08J00	CUSHION, BRACKET NO.2	1	
19	09116-06202	BOLT (EX20)	1	
20	01547-0612A	BOLT	1	
21	09180-06325	SPACER (8.2X8.4X0.9)	1	
22	09320-08066	CUSHION	1	
23	69731-08J00	HOSE, REAR RESERVOIR TANK	1	
24	09401-12404	CLIP	2	
25	69200-08J00	HOSE, ASSY REAR BRAKE NO.1	1	
26	09360-10062	UNION	2	
27	09161-10009	WASHER (10X15X1.5)	4	
28	09200-06068	PIN (5X18.2)	1	
29	08322-0106A	WASHER	1	
30	04111-2015A	COTTER PIN	1	
31	09403-17306	CLAMP	1	
32	61196-08J00	GUIDE, REAR BRAKE HOSE	1	
33	02142-0618A	SCREW	1	
34	69260-08J00	CLAMP, REAR BRAKE HOSE	1	

09750AL5_E99

FIG.558A

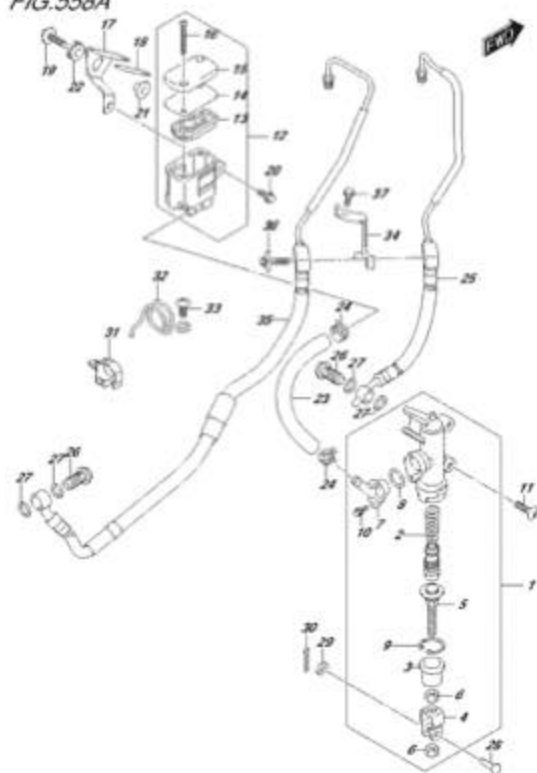


QSR750AL5_E99_558A
REAR MASTER CYLINDER

FIG.558A (1-F-13) REAR MASTER CYLINDER

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
35	69400-06J00	HOSE ASSY, REAR BRAKE NO.2	1	
36	09116-06195	BOLT (EX35)	1	
37	01550-0612A	BOLT	1	

QSR750AL5_E99

FIG.901A

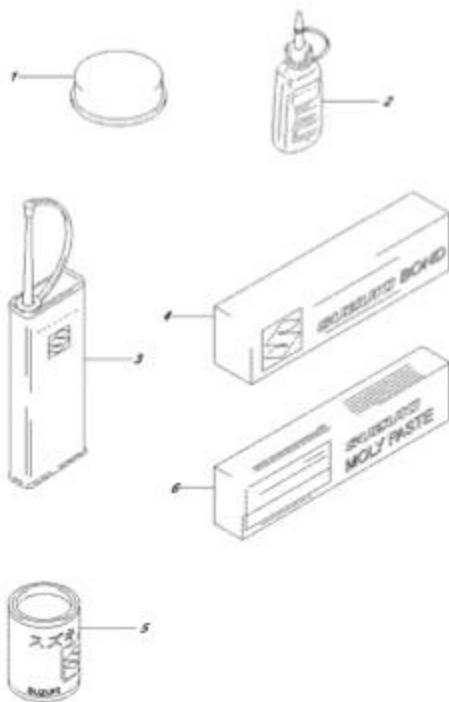


OPTIONAL
OPTIONAL

FIG.901A (1-F-14) OPTIONAL

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	99000-25110	SUZUKI PBC GREASE	1	20G
2-1	99000-32020	THREAD LOCK SUPER (133B)	1	50G
2-2	99000-32030	THREAD LOCK SUPER (1303B)	1	50G
2-3	99000-32050	THREAD LOCK SUPER (1342)	1	50G
2-4	99000-32100	THREAD LOCK SUPER (1305)	1	50G
2-5	99000-32130	THREAD LOCK SUPER (1306)	1	50G
3	99000-32040	THREAD LOCK CEMENT	1	200G
4	99000-31140	SUZUKI BOND (1207B)	1	100G
5	99000-25030	SUZUKI SUPER GREASE	1	150G
6	99000-25140	SUZUKI MOLY PASTE	1	50G

QSR750AL5_E99

FIG.912A

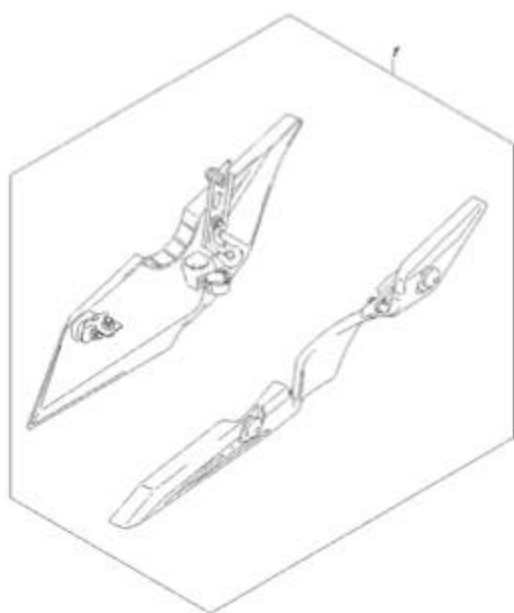

00000000_00000000
UNDER COWLING SET (OPTIONAL)

FIG.912A (1-F-15) UNDER COWLING SET (OPTIONAL)


REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1-1	94400-08810-YKV	COWLING SET, UNDER (BLACK)	1	FOR YKV
1-2	94400-08810-YWW	COWLING SET, UNDER (WHITE)	1	FOR AJX

00000000_00000000

FIG.914A

FIG.914A (1-G-2) METER VISOR SET (OPTIONAL)

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	51900-08810	VISOR SET, METER	1	
2	44574-16G00	STAY, FUEL TANK	1	

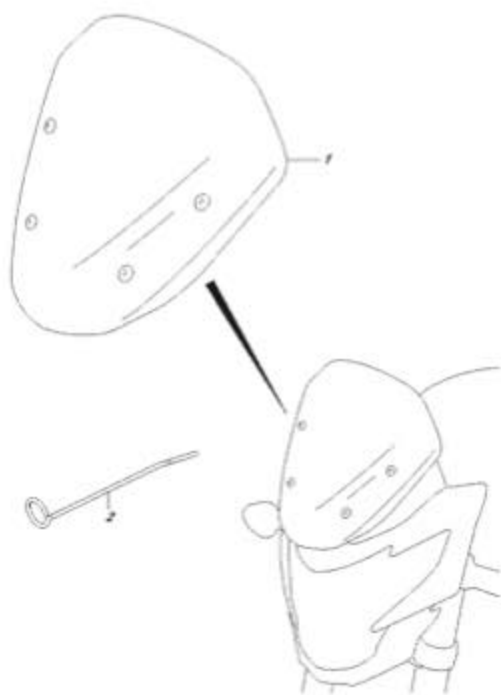

QSR750AL5_E92_914A
METER VISOR SET (OPTIONAL)

QSR750AL5_E99

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
10000		12151-09284	122A-2	12892-05C00-150	126A-12-7
			122A-7	12892-05C00-155	126A-12-8
		12151-10300	122A-11	12892-05C00-160	126A-12-9
			122A-1	12892-05C00-165	126A-12-10
		12160-08300	122A-2	12892-05C00-170	126A-12-11
		12163-36F00	122A-4-1	12892-05C00-175	126A-12-12
	103A-1	12164-36F00-0A0	122A-4-2	12892-05C00-180	126A-12-13
	103A-4	12164-36F00-0B0	122A-4-3	12892-05C00-185	126A-12-14
	103A-7	12164-36F00-0C0	122A-4-4	12892-05C00-190	126A-12-15
	101A-2	12164-36F00-0D0	122A-19-1	12892-05C00-195	126A-12-16
	103A-5	12228-17E00-0A0	122A-7-1	12892-05C00-200	126A-12-17
11171-35F10	102A-1		122A-7-2	12892-05C00-205	126A-12-18
11173-35F00	101A-3	12228-17E00-0B0	122A-7-3	12892-05C00-210	126A-12-19
	102A-2		122A-19-3	12892-05C00-215	126A-12-20
11178-35E00	101A-4	12228-17E00-0C0	122A-7-4	12892-05C00-220	126A-12-21
	102A-3		122A-19-5	12892-05C00-225	126A-12-22
11179-08300	102A-7	12228-17E00-0D0	122A-19-6	12892-05C00-230	126A-12-23
11182-35F10	101A-5		122A-19-7	12892-05C00-235	126A-12-24
	102A-4		122A-19-8	12892-05C00-240	126A-12-25
11191-27E00	102A-6		122A-19-9	12892-05C00-245	126A-12-26
11269-18001	163A-21	12228-17E00-0E0	122A-19-10	12892-05C00-250	126A-12-27
11276-08300	163A-22		122A-19-11	12892-05C00-255	126A-12-28
11277-08300	163A-23	12228-17E00-0F0	122A-19-12	12892-05C00-260	126A-12-29
11281-44G00	116A-25		122A-19-13	12892-05C00-265	126A-12-30
11300-06810	108A-1	12228-36F00-0A0	122A-8-1	13170-08300	103A-16
11318-35F00	108A-20	12228-36F00-0B0	122A-8-2	13170-25C01	155A-6
11319-33E50	108A-2	12228-36F00-0C0	122A-8-3	13258-48T00	140A-2
11345-44G10	112A-1	12228-36F00-0D0	122A-8-4	13289-33E00	140A-3
11342-41G10	112A-3	12600-40B1	122A-9	13295-29G00	140A-4
11351-18G20	112A-27	12611-40F00	122A-1	13405-08J11	140A-1
11351-08300	112A-33	12612-40F00	122A-6	13473-08J00	142A-1
11375-44G00	108A-31	12710-08J00	122A-1	13473-29G00	142A-2
11381-35F10	112A-12	12720-08J00	122A-2	13575-29G00	140A-5
11382-33E10	112A-20	12731-08J00	122A-13	13580-14J00	140A-6
11390-35F00	108A-22	12760-36F01	127A-1	13580-29G00	140A-7
11401-0831	101A-1	12771-30C00	127A-2	13601-29G00	142A-3
11402-40F10	101A-6	12782-36F10	127A-3	13602-29G00	142A-4
	112A-5	12800-05B30	126A-13	13605-02F00	140A-8
11483-18G00	101A-7	12811-08J00	127A-4	13605-37H00	140A-9
	112A-28	12812-26B02	127A-5	13606-47A00	140A-10
11481-33E02	101A-8	12812-31G00	127A-6	13606-14G10	155A-18
	112A-13	12830-37H00	127A-7	13650-49B00	103A-21
11492-33E00	101A-9	12837-02H00	101A-10	13655-14G10	155A-19
	112A-21		127A-8	13679-37H00	140A-11
11511-08300	116A-1	12891-08J00	126A-3	13681-39F00-0B0	142A-5
11512-44G00	116A-9	12892-05C00-120	126A-12-1	13683-08J00	142A-6
11571-25D00	112A-10	12892-05C00-125	126A-12-2	13683-08J10	142A-7
11571-33E10	112A-2	12892-05C00-130	126A-12-3	13685-02F00	142A-8
12000-30B10	120A-5	12892-05C00-135	126A-12-4	13687-08J00	155A-23
12111-08300-0F0	120A-9	12892-05C00-140	126A-12-5	13688-08J00	140A-12
12140-08300	120A-10	12892-05C00-145	126A-12-6	13688-08J10	140A-13

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
13700-08J02	155A-1	16510-07J00	178A-7	21200-35B30	201A-1
13740-08J00	155A-4	16520-44G00	116A-10	21410-39F20	201A-4
13746-08J00	155A-5	16531-06B01	108A-17	21413-08J00	201A-6
13756-44G00	155A-3	16900-29G00	178A-1	21414-29F00	201A-7
13780-44G00	155A-2	17490-35F30	180A-1	21441-31E00	201A-8
13789-08J00	155A-10	17418-33A00	180A-7	21441-31E00	201A-8
13789-08J00	155A-11	17432-07G00	180A-11	21442-31E21	201A-10
13850-08J00	155A-13	17435-33A00	180A-8	21451-31E00	201A-11
13859-41B10	155A-8	17461-44G00	180A-6	21451-31E10	201A-12
13891-08J00	155A-7	17470-02F10	180A-4	21462-39F00	201A-13
14100-08J00	163A-1	17491-17E01	180A-2	21471-31E20	201A-14
14181-46E00	101A-11	17568-05F00	187A-12	21472-39F00	201A-15
	163A-2	17601-35F00	187A-6	21482-40F00	201A-5
14250-21H00	163A-4	17670-76G00	187A-7	23110-27A00	201A-20
14260-08J00	163A-5	17715-08J00	185A-1	23111-39F00	201A-21
14310-08J00	163A-12	17711-08J00	185A-13	23121-31E00	201A-22
14459-08J00	163A-13	17712-40F00	185A-14	23200-39F01	201A-28
14770-08J00	163A-24	17730-08J00	185A-15	24120-35F20	206A-1
14771-42F31	163A-14	17740-08J10	185A-5	24131-39F01	206A-18
14780-08J00	163A-27	17750-08J00	185A-6	24221-39F00	206A-2
15100-08J00	172A-1	17771-08J00	185A-8	24231-39F01	206A-3
15111-27G00	172A-2	17890-08J00	185A-12	24251-35F21	206A-4
15112-05H00	172A-3	17891-08J00	187A-1	24252-39F00	206A-5
15113-05H00	172A-4	17892-08J10	187A-2	24261-35F02	206A-6
15113-35F00	172A-5	17893-35F10	187A-3	24262-39F10	206A-7
15114-14J00	172A-6	17894-08J00	187A-16	24311-35F20	206A-19
15115-08J00	172A-7	17895-08J00	187A-17	24321-39F11	206A-20
15116-10F00	172A-8	17896-08J00	187A-9	24322-35F00	206A-21
15119-08J00	172A-9	17897-33E00	187A-10	24331-39F10	206A-22
15161-08J00	172A-10	17910-08J00	187A-19	24332-35F00	206A-23
15201-39F00	172A-15	17912-08J00	187A-21		206A-24
15420-05H00	172A-11	17914-08J00	187A-22	24333-02F00	206A-25
15583-18H00	172A-12	17931-02F00	187A-20	24341-39F10	206A-26
15610-14J00	172A-13	17981-08J00	187A-24	24361-35F10	206A-27
15625-29G00	155A-17	17981-10F00	187A-26	24361-39F10	206A-28
	155A-22	18117-14J01	140A-14	25211-39F11	212A-1
15630-29G10	155A-16	18213-18H10	163A-29	25231-35F11	212A-2
	155A-21	18450-35F11	189A-1	25310-39F00	212A-6
15710-14J00	142A-9	18461-08J00	189A-5	25312-42F01	212A-8
15717-08B00	142A-10	18471-08J00	189A-6	25320-39F00	212A-13
15721-08J00	142A-11	18510-25G31	189A-2	25355-05G00	212A-14
15722-14J00	142A-12	18531-35F20	189A-3	25361-13C30	212A-9
15810-16H01	172A-17	18711-08J00	189A-4	25411-26D01	212A-3
16221-35F01	116A-18			25411-39F00	212A-4
16331-35F00	116A-19			25451-35F00	212A-5
16400-39F00	116A-15			25510-08J00	212A-17
16440-24F00	116A-13			25512-09G10	212A-18
16461-08J00	178A-4			25520-09G10	212A-27
16471-08J00	178A-5			25525-12B00	212A-29
16491-39F00	116A-16			25526-47G00	212A-28

20000

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
25600-08J00	212A-31	34150-08J10	330A-2	40000	
25617-08F10	212A-30	34189-08J00	330A-6		
25622-20C00	212A-33	34810-08J10	172A-14		
25671-35F00	212A-32	34861-38G01	330A-9		
27315-20A20	212A-19	34890-36F00	330A-10		
27315-38F01	206A-41	35100-08J00-229	333A-1		41100-08J10-YAP
27395-26G40-112	206A-42		333B-1		41184-08J01
27420-06G40	206A-43	35125-17A00	333A-2		42310-08J00
	206A-44		333B-2		43111-08J00
			334A-1		43130-24A00
30000		35601-08J01	334A-5		530A-12
		35603-08J01	334A-6		530A-20
		35604-08J01	334A-11		415A-11
		35604-08J01	334A-15		415A-1
		35612-08J01	334A-2		415A-12
			334A-16		415A-2
	301A-1	35629-31F40	334A-9		415A-4
	301A-2		334A-19		415A-3
	301A-3	35632-08J01	334A-6		407A-10
	112A-4		334A-12		415A-7
31155-08J00	301A-5	35710-21H00	338A-1	50000	415A-2
31264-38F10	301A-4	35725-08J00	338A-2		401A-3
31290-38F10	301A-5	35725-08J10	338A-3		415A-17
31401-23G20	304A-2	35810-16G11	338A-13		415A-18
31402-08J00	304A-1	35812-16G01	338A-15		415A-19
31895-26G00	312A-1	35913-16G00	339A-16		415A-25
31961-47E20	312A-3	35917-16G00	339A-14		415A-20
32190-02F10	306A-1	35950-14A11	333B-8		420A-9
32191-02F00	306A-2	35970-07F01	339A-22		420A-2
32371-33E00	304A-3	36118-08J00	333A-3		420A-1
32900-47H00	312A-5		333B-3		420A-2
32920-08J70	312A-11	36610-08J25	350A-1		420A-6
33110-08J00	306A-3	36618-03A19	350A-10		420A-6
33115-32E00	306A-4	36654-06J30	350A-2		420A-13
33410-47H00	312A-10	36661-44G00	350A-9		420A-17
33610-14G11	310A-1	37100-44G20	350A-13		401A-5
33624-16G00	310A-7	37101-44G12	350A-12		420A-19
33624-18H10	310A-4	37146-01G00	350A-27		420A-23
33652-16G00	310A-2	37180-44G20	350A-14		420A-24
33652-21G10	445A-20	37187-44G00	350A-15		420A-7
33652-26A10	312A-12	37200-08J10	355A-1		420A-6
33810-08J00	310A-3	37400-44G11	355A-3		420A-16
33820-08J10	310A-6	37730-08J00	212A-39		420A-5
33869-08J00	310A-5	37740-45G00	350A-19		420A-10
33995-27G00	312A-13	37820-32G10	116A-23		420A-6
33979-47H01	312A-14	37822-32G00	116A-24		420A-11
33971-08J00	312A-15	37840-38F00	350A-21		420A-12
33973-48G01	312A-16	38500-16G01	350A-23		420A-18
34111-08J00	330A-4	38610-03F00	334A-22		420A-3
34120-08J20	330A-1	38740-24G00	350A-25		420A-7
34124-36G00	330A-3		350A-26		420A-9

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
44574-16G00	914A-2	51158-05A00	521A-3	55000	550A-24-2
44612-13G00	474A-3		521A-18		530A-13-3
44894-24A00	185A-9	51158-40F30	521A-10		550A-24-3
45100-08J00-QW2	935A-1		521A-25		55810-08J01
45149-37H00	935A-2	51199-40H20	521A-31		533A-2
45220-47H00	935A-5		524A-6		533A-4
45280-08J00	935A-7	51171-08J00	521A-9		55663-10G10
45288-14F00	935A-8		521A-24		55710-08J00
45289-11F00	935A-9	51173-14F00	521A-6		55731-08J00
45290-47H01	935A-12		521A-21		56110-08J10-YMC
45300-08J01-P3H	935A-11	51178-40F30	521A-11		56200-33H70
45380-08J00	935A-13		521A-26		56211-08J00-291
47113-37H00	445A-5	51178-08J00	521A-15		56221-08J00-291
47118-08J00	445A-6		521A-30		56245-08J00
47163-10F40	424A-4	51311-08J00-291	524A-5		56279-33E00
	424A-8	51321-17H10	524A-7		56600-08J00
47310-08J00-AJK	445A-7-1	51351-08J00	521A-13		56600-08J00
47310-08J00-4TX	445A-7-2	51352-13A80	521A-28		57110-21H01
47312-37H00	445A-11		521A-23		57211-21H00
47431-08J00	406A-1	51353-24B00	524A-6		57431-17H02
47511-08J00-291	445A-1	51354-17H00	524A-8		57431-45C01
47531-08J00	447A-1	51355-16G00	524A-10		57441-45C00
47541-08J00	447A-4	51356-10G00	524A-11		57442-45C00
47611-08J00-291	445A-2	51410-08J00-291	524A-1		57460-14J01
47711-08J00	445A-17	51482-26F00	524A-12		57465-17G00
47811-08J00	445A-18	51631-31F00	524A-19		57500-25G00
		51643-40G00	524A-18		57560-05A00
		51644-12C00	524A-2		57621-40F00
		51800-08H01	914A-1		57661-33E00
		51811-08J00	451A-6		58200-08J00
		51822-08J00	451A-3		58300-08J00
		51823-08J00	451A-4		58300-08J10
		51831-08J00-P02	451A-1		59100-04B51
		51831-21D00	451A-11		535A-25
51103-08J00	521A-1	51850-08J00	451A-10		59100-33GJ0-299
51104-08J00	521A-16	51861-21D00	424A-10		59103-33H10
51110-08J00	521A-2	51911-08J01	524A-21		59112-44B00
51117-39G20	521A-14	54111-44G10-019	530A-1		535A-18
	521A-29	54162-27G00	530A-7		59115-33D00
51120-08J00	521A-17		560A-7		59116-33D00
51130-08J00	521A-12	54711-44G00	530A-5		535A-30
	521A-27	54731-44G00	530A-2		59121-01A00
51146-08J00	521A-22	54751-44G00	530A-6		59121-18A10
51147-17H00	524A-4	55119-08J00	530A-11		535A-21
51153-10G50	521A-4	55156-06J01	535A-2		59122-44H00
	521A-19		535A-17		59141-44B01
51156-49A40	521A-5	59411-32H00	530A-13-1		535A-22
	521A-25	59412-22H00	530A-13-2		59146-08J00
					59150-33D01

PART NO.	FIG. NO.-REF. NO.	PART NO.	FIG. NO.-REF. NO.	PART NO.	FIG. NO.-REF. NO.
59172-33DM	535A-14	52649-08J00	543A-13	59250-08J00	558A-34
59200-08J00	535A-5	52656-37F10	543A-9	59400-08J00	558A-35
59210-44G11	530A-9		543A-14	59900-08J00	558A-1
59240-08J10	535A-6	52658-42A02	543A-6	59900-34B10	558A-2
59251-08J00	535A-7	53111-08J00	474A-1	59955-47H00	558A-9
59300-01B00	530A-9	53113-08J00	474A-5	59957-01H00	558A-13
	535A-24	53131-08J00	474A-7	59958-01H00	558A-14
59300-32D-999	535A-16	53171-08J00	474A-9	59959-01H00	558A-15
59303-14500	555A-6	53181-08J00	474A-19	59970-27A30	558A-5
59303-32B10	535A-28	54111-44G10-019	555A-1	59972-08J10	558A-7
59305-34E00	555A-5	54511-35F10	555A-20	59986-34Z00	558A-6
59313-35E00	535A-11	54610-35F30	555A-15	59989-01H00	558A-16
	535A-26	54651-35F30	555A-19	59990-42000	537A-10
59315-33D00	535A-19	54711-08J00	555A-9	59991-05A00	558A-3
59350-33D01	535A-23	54731-44G00	555A-2	59992-44H00	558A-4
59372-33DM	535A-29	54733-44G00	555A-16	59993-05A00	558A-6
59400-08J00	535A-9	54741-44G00	555A-13	59731-08J00	558A-23
59900-10G00	537A-1	54751-08J00	555A-14	59740-01H10	558A-12
59900-45B70	537A-2	55110-08J00	555A-22	59750-08J00	558A-17
59964-32F00	537A-4	55710-08J00	533A-7	59752-08J00	558A-19
59965-44Z00	537A-3	56111-47H00	447A-7		
59967-48A60	537A-5	56161-08J00-AHS	445A-8-1		
59968-41C00	537A-6	56171-08J00-AHS	445A-9-1		
59969-10G00	537A-7	56171-28H00-YUS	445A-10-1		
59971-32F00	537A-8	56281-47H00	424A-15		
59975-02FA0	537A-9	56319-50J00	456A-1-1	54490-08B10-PKV	912A-1-1
		56319-49J00	456A-1-2	54490-08B10-YWV	912A-1-2
		56319-49J00	456A-1-3	54422-06G00	445A-3
		56332-08J00	456A-2-2	54443-06G00	445A-12
		56332-08J00	456A-2-3		474A-12
		56332-08J00	456A-2-1	54475-38C00	185A-10
		56100-04B10	555A-2	56700-14F00	505A-10
		56100-04B20	555A-3	56900-25000	901A-5
		56100-08B50	555A-15	56900-25110	901A-1
		56100-08J10-229	555A-1	56900-25140	901A-6
61000-08J00-YAP	541A-1	56115-04F00	555A-4	56900-31140	901A-4
61196-08J00	558A-32	56132-08J00	555A-16	56900-32020	901A-2-1
61211-31E00	541A-6	56133-09G00	555A-17	56900-32030	901A-2-2
61251-21E00	541A-5	56134-09G00	555A-18	56900-32040	901A-3
61273-08J00	541A-9	56141-40F00	555A-7	56900-32050	901A-2-3
61282-17C00	541A-4	56142-45G00	535A-12	56900-32100	901A-2-4
61310-08J00	541A-11		535A-27	56900-32130	901A-2-5
61410-08J10	541A-15	56150-08J10	555A-14	56900-49A01	120A-14
61421-08J00	541A-16	56172-01D42	535A-15	59011-08J64-01A	498A-3-1
62100-08J00-17U	543A-16		535A-30	59011-08J64-029	498A-3-2
62317-44B00	543A-5	56182-04F00	555A-4	59011-08J64-069	498A-3-3
	543A-6	56185-04F00	555A-19		
62317-47H00	543A-11	56186-04F00	555A-11		
62900-08A00	543A-1	56200-08J00	558A-25		
62940-08J00	543A-12	56211-38G00	555A-5		

PART NO.	FIG. NO.-REF. NO.	PART NO.	FIG. NO.-REF. NO.	PART NO.	FIG. NO.-REF. NO.
	00000	02122-0320A	467A-15	06310-0006A	212A-37
		02122-0610B	103A-17	06310-1005A	334A-10
		02122-0630A	505A-6		334A-20
		02142-0525A	415A-5		339A-23
		02142-0530A	415A-6	06316-1096A	163A-11
01547-0516A	163A-10	02142-0612A	339A-10		312A-8
01547-0615A	433A-11	02142-0616A	541A-13		555A-15
01547-0612A	433A-7		558A-33	06319-2106A	467A-4
		02142-0640A	452A-4	06319-2106B	467A-16
		02142-0616A	312A-19	06319-3115A	467A-3
01547-0616A	336A-11	03211-0414B	334A-4		524A-16
01547-0625A	116A-9		334A-8		555A-21
	116A-17		334A-14	06322-0106A	558A-29
	187A-8		334A-18	06331-31109	116A-22
	187A-11	03211-0416A	339A-18	06331-3112A	212A-38
	186A-9	03511-0516A	155A-20	06331-3114A	212A-26
	212A-36	03541-0416A	330A-8	06331-3118A	467A-8
01547-0620B	467A-14	03541-0516A	339A-11	06332-1106A	415A-10
01547-0625A	116A-2		339A-21		415A-25
01547-0635A	106A-10		447A-14	06361-3906A	301A-8
01547-0635A	106A-32		451A-8	06100-09099	180A-8
01547-0645A	106A-5		474A-11	06103-06212	112A-15
	196A-8	03541-0520A	155A-12		112A-25
	196A-11	03541-2520B	339A-12		301A-7
01547-0995A	106A-12	03541-0616A	474A-6	06103-06213	112A-8
01547-0995A	112A-36	04111-2015A	558A-30		112A-30
01547-0670A	106A-13	04211-09129	112A-35	06103-06214	112A-16
01547-0995A	112A-37	04211-09149	112A-14		112A-26
01550-0510A	330A-18		112A-24	06103-06215	112A-9
01550-0612A	185A-7	04211-09189	112A-6	06103-06216	112A-22
	420A-15	04211-11169	103A-6	06103-06222	103A-8
	558A-37	04221-04089	120A-3	06103-06224	112A-31
	116A-11	212A-7		06103-06266	193A-2
01550-0616A	201A-24	06111-0700A	415A-24	06103-06351	524A-22
01550-0625A	350A-22	07120-0612A	330A-11	06103-06352	163A-15
01550-0635A	180A-13	07120-0612A	172A-16	06103-09312	106A-7
01550-0650A	312A-18	07120-0650A	103A-10	06103-10137	196A-34
01550-0612A	350A-24	07120-0655A	420A-17	06103-10189	122A-13
01550-0616A	533A-14	07120-0665A	106A-9	06103-10213	543A-17
01550-1025A	535A-31	07130-0512A	530A-8	06103-10225	193A-20
01560-0625A	420A-4		550A-6	06103-10426	543A-19
02112-0515A	355A-5	07130-0612A	390A-6	06103-10458	196A-33
	395A-9	07130-0625A	127A-9	06103-12095	394A-4
02112-0525B	355A-4	07130-0625A	304A-7	06106-09317	420A-3
02112-0530B	355A-2	07130-0625B	330A-12	06106-09323	212A-41
02112-0545B	355A-5	08211-06141	212A-16	06106-09373	326A-7
02112-0616A	180A-6	08211-10285	122A-11	06106-09375	196A-24
02112-7412A	558A-19	08211-20403	122A-12	06106-09399	178A-3

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09106-07009	102A-5	09159-20034	206A-45	09168-16009	103A-19
09106-08119	541A-17	09159-22037	550A-10	09168-06071	330A-6
09106-08139	108A-3	09159-24019	201A-16	09168-06283	445A-14
09106-08147	415A-13	09160-04026	330A-7	09168-06285	330A-7
09106-08160	530A-10	09160-05037	350A-17	09168-06290	185A-3
	550A-6	09160-05051	330A-6	09168-06320	505A-17
09106-08166	163A-3		330A-19	09168-06325	312A-6
09106-08186	415A-21	09160-06077	474A-4		550A-21
09111-06041	212A-15	09160-06088	505A-14	09160-06345	312A-17
09111-06072	541A-10	09160-08043	332B-10	09160-06152	163A-6
09111-06086	167A-23	09160-08142	163A-17		163A-18
09111-06107	474A-2	09160-12011	212A-35	09161-10158	116A-20
	541A-12	09160-14016	212A-20	09161-12167	122A-4
09111-10069	407A-2	09160-16045	201A-25	09161-14167	212A-25
09116-08130	195A-15	09160-18022	407A-7	09161-20251	205A-38
09116-08150	530A-3	09160-18036	541A-8	09161-22223	206A-39
09116-08168	474A-6	09160-22088	550A-11	09161-25223	201A-19
09116-08182	312A-8	09160-25039	206A-44	09161-27014	206A-9
09116-08196	550A-36	09160-25056	201A-17	09206-06088	550A-28
09116-08202	550A-19	09160-26073	201A-2	09206-06087	103A-3
09116-08122	185A-2	09160-29082	550A-12	09206-10016	102A-6
09116-08152-AD6	163A-6	09160-27038	206A-40	09206-06019	415A-6
09116-08109	330B-9	09161-10038	550A-4	09206-08020	415A-22
09116-08100	350A-16		550A-27	09247-14036	116A-4
09125-25042	462A-10	09161-12015	401A-4	09248-10010	108A-27
09128-06013	312A-4	09161-13094	415A-14		116A-6
09132-03008	330A-5	09161-17052	415A-15	09248-16012	103A-18
09136-06105	445A-13	09164-09036	180A-10	09248-16013	108A-26
09136-06147	212A-10	09164-09015	541A-18	09250-06011	520A-20
09139-06029	550A-11	09164-12021	122A-6	09250-10003	112A-34
09139-06065-XC2	505A-16		122A-8	09250-30021	112A-18
09139-06078	163A-25	09164-24038	201A-18	09261-04009	116A-21
09139-06122	163A-28	09167-27033	206A-8	09261-06003	206A-17
09139-06126	333A-6	09168-06023	103A-9		206A-37
	333B-6		106A-4	09262-22035	530A-3
09139-06131	460A-4		106A-14	09262-25006	212A-11
09139-06146	460A-3		112A-7	09262-25061	550A-3
09139-06172	420A-11		112A-17	09262-28025	206A-29
09139-06190	447A-10		112A-23	09262-32022	550A-17
09139-06191	420A-13		112A-32	09263-12023	122A-3
09140-06025	212A-34		116A-3	09263-14027	212A-21
09148-25047	330A-4	09168-06025	180A-3	09263-15003	201A-26
09159-06100	163A-7	09168-06028	187A-13	09263-17037	541A-3
09159-10115	108A-38	09168-08016	106A-15	09263-17046	543A-2
	543A-16		106A-16	09263-20074	543A-2
09159-10123	108A-36	09168-10032	106A-28		543A-3
09159-12066	543A-7		116A-7	09263-20067	206A-10
	543A-10	09168-12017	103A-22		206A-30
	543A-15	09168-14032	116A-5	09263-25018	212A-12
09159-18007	541A-7	09168-16032	106A-25	09263-25029	541A-2

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09263-26035	122A-19		530A-2	09408-00242	533A-13
09263-26036	201A-3		550A-26	09408-00266	533A-2
09265-25038	524A-17	09380-10064	530A-3	09409-08314-EPK	424A-16
09265-30020	524A-3	09382-09011	187A-14		445A-16
09267-25013	206A-51	09387-04007	420A-26	09409-08322-EPK	185A-11
09280-04004	103A-12	09388-27004	206A-15	09409-07333	445A-19
	106A-23	09388-27006	206A-13	09409-08326-SES	541A-14
09280-08012	106A-29		206A-14	09440-09033	415A-23
09280-13034	116A-14		206A-33	09440-17036	212A-23
	116A-28		206A-34	09443-09012	350A-23
	112A-11		206A-36	09443-09051	201A-23
09280-17093	116A-12	09381-18001	120A-12	09443-13032	407A-9
09280-19008	106A-21	09390-58001	206A-16	09443-14058	407A-4
09280-20002	212A-40	09390-70001	206A-36	09443-19011	407A-5
09280-33004	112A-19	09401-08411	187A-25	09444-20001	212A-24
09280-40016	103A-15	09401-10409	187A-19		415A-8
09280-63003	406A-2	09401-12404	550A-24	09471-12045	334A-3
09280-64003	178A-2	09401-12414	187A-16		334A-7
09283-08010	201A-27	09401-14101	185A-9		334A-13
09283-14005	212A-22	09401-15101	155A-14		334A-17
09283-28016	530A-4		155A-24	09471-12185	333A-4
09283-36008	206A-31	09401-16407	155A-25		333B-4
09284-37001	550A-4	09401-17201	189A-7	09471-12215	333A-5
09285-20006	206A-12	09401-17401	189A-8		333B-5
09285-36001	550A-18	09402-22512	178A-6		330A-17
09289-04003	126A-11	09402-35001	187A-4	09481-10501	350A-3
09290-22008	206A-32	09402-38512	187A-5	09481-15001	350A-4
09291-09045	415A-18	09403-07304	530A-10	09481-30101	312A-2
09320-08016	445A-15	09403-11321	462A-11	09482-00555	103A-13-3
09320-08028	447A-11	09403-16412	530A-8	09482-00556	103A-13-4
	451A-9	09403-17306	550A-31	09482-02557	103A-13-1
09320-08096	312A-7	09403-18307	420A-22	09482-00558	103A-13-2
	550A-22	09404-06429	180A-12	09482-02559	103A-13-5
09320-08071	420A-14		187A-27	09482-00560	103A-13-6
09320-09009	330A-8		304A-5	09493-28012	106A-30
09320-09016	445A-4		330A-13	09493-80025	103A-11
	447A-12	09404-06433	350A-11	09600-21056	406A-4
	460A-2		178A-8	09622-00003	406A-5
09320-09501	333A-7		420A-20		
	333B-7	09407-05406	420A-21		
09320-10051	185A-4	09407-11401	505A-18		
09320-12048	185A-19	09407-11402	334A-21		
09320-12077	185A-9	09407-14403	350A-6		
09321-06028	330A-2		350A-7		
09321-10011	550A-3	09407-14407	330A-20		
09321-10016	185A-28		350A-5		
09321-10034	550A-4		350A-6		
09329-18001	447A-13		533A-8		
09352-08023-400	420A-25	09407-18402	350A-7		
09360-10052	530A-1	09407-19401	350A-8		

SUZUKI GSR750AL5 PARTS CATALOGUE

SUZUKI MOTOR CORPORATION All rights reserved

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of Suzuki Motor Corporation.

SUZUKI MOTOR CORPORATION
Technical Readiness Group, Quality Administration Department
300 Takatsuka, Minami, Hamamatsu, Japan

Reprint Prohibited

SUZUKI MOTOR CORPORATION

PRINTED IN JAPAN

9900B-30975-000
