

SUZUKI
PARTS CATALOGUE

GSX-S1000FAL6

(JS1DG114)

GSX-S1000F ABS

E08



Way of Life!

2015-7

1ST EDITION

GSX-S1000FAL6



AV4

GSX-S1000FAL6



PGZ

GSX-S1000FAL6



YSF

PREFACE

When it becomes necessary to replace parts on SUZUKI MOTORCYCLES, always use SUZUKI GENUINE PARTS which have passed a strict inspection which guarantees quality and performance.

This parts catalogue covers the list of all service parts for SUZUKI GSX-S1000FAL6.

INSTRUCTIONS FOR QUOTING THE CATALOGUE

1. DIMENSIONS

Dimensions of the parts in this catalogue are indicated in unit millimeters.

2. ABBREVIATIONS

Abbreviations used in this catalogue are as follows:

AR	: As required	NT	: Number of teeth
ASSY	: Assembly	OPT	: Optional
E. NO.	: Engine number	OS	: Over size
F. NO.	: Frame number	STD	: Standard
D	: Diameter of material	T	: Thickness
ID	: Inside diameter	US	: Under size
OD	: Outside diameter	W	: Width
L	: Length		
LH	: Left hand side		
RH	: Right hand side		
—100045	: Up to F. NO. 100045		
100045—	: From F. NO. 100045		
12 x 34 x 5.5	Figures in the description column		
	show the dimensions of parts.		
ID OD T (or R.L.)			

—12345-56781 (Parts No.) : indicates that the parts number was changed to 12345-56781 and the new parts are interchangeable with the former ones but the former ones are not interchangeable with new ones.

—12345-56781 (Parts No.) : indicates that the former and new parts are interchangeable with each other and both are usable.

3. INNER PARTS OF ASSEMBLY

Part name with a dot (.) in front as shown in the description column indicates the component of the assembly also available individually.

4. MODIFICATION NOTICE

A parts bulletin will be sent to you on all occasions when changes in parts occur, including interchangeable modifications between new parts and old ones.

5. NOTE

5-1. There are some different parts from those of production models among spare parts for the administrative reasons and common use of them with other models.

5-2. In respect of rubber hoses and vinyl tubes, please be sure to use them by cutting off according to the length mentioned on parts catalogue or what is actually required on the vehicle.

5-3. Note that the drawings on the illustration page are for ready reference of spare parts number, not to be used as an assembly manual. When assembling, use "SUZUKI SERVICE MANUAL".

6. SPECIFICATION CODE

This catalogue contains the parts for the model designed for the following spec. :
spec. code : E06.

7. SERIAL FRAME NUMBER

GSX-S1000FAL6 : JS1D9114460100001—

MILLIMETER → INCH CONVERSION CHART


	0	1	2	3	4	5	6	7	8	9
00	.000	.009	.018	.027	.036	.045	.054	.063	.072	.081
10	.090	.100	.109	.118	.127	.136	.145	.154	.163	.172
20	.181	.190	.199	.208	.217	.226	.235	.244	.253	.262
30	.271	.280	.289	.298	.307	.315	.324	.333	.342	.351
40	.360	.369	.378	.387	.396	.405	.414	.423	.432	.441
50	.450	.459	.468	.477	.486	.495	.504	.513	.522	.531
60	.540	.549	.558	.567	.576	.585	.594	.603	.612	.621
70	.630	.639	.648	.657	.666	.675	.684	.693	.702	.711
80	.720	.729	.738	.747	.756	.765	.774	.783	.792	.801
90	.810	.819	.828	.837	.846	.855	.864	.873	.882	.891


How to read


	0	1	2	3	4
00	...	...	...	...	...
10	...	...	...	...	...
20	...	...	...	0.906	...
30	...	...	...	...	...



 23 millimeters equal 0.906 inch


Contents are subject to change without notice or obligation.

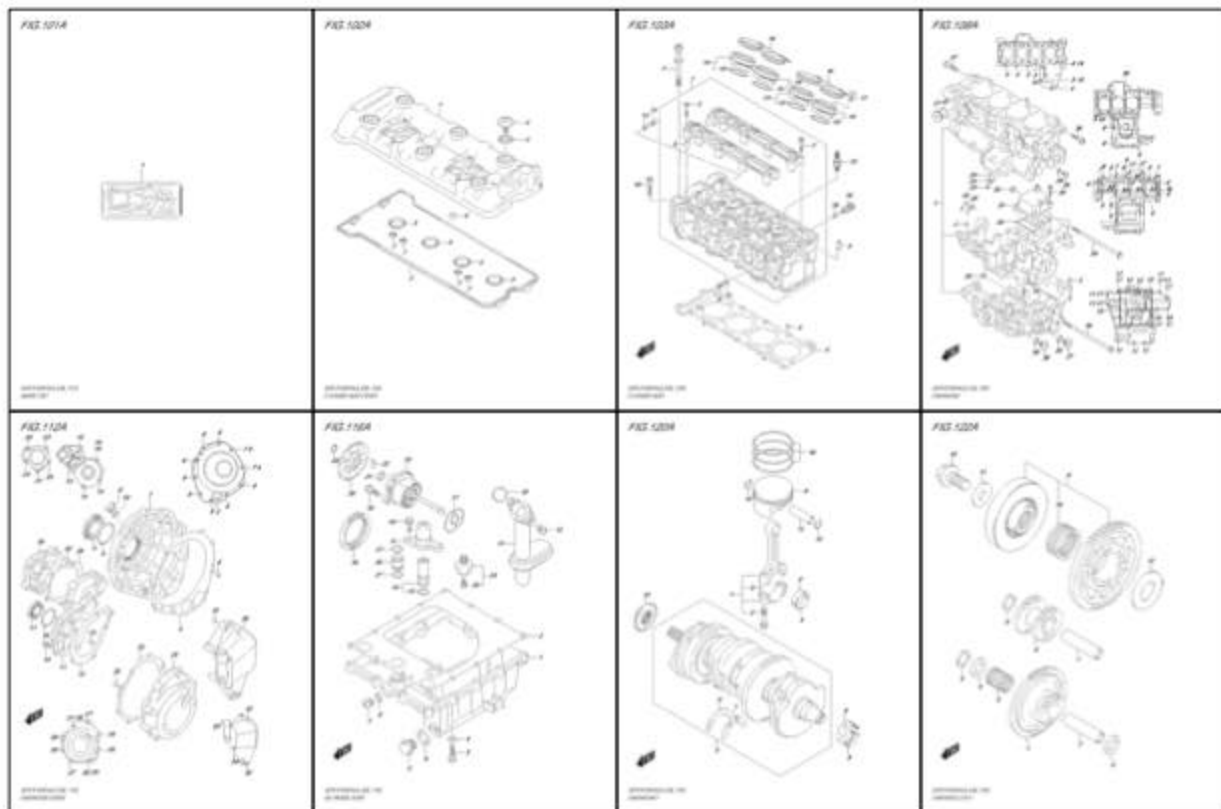


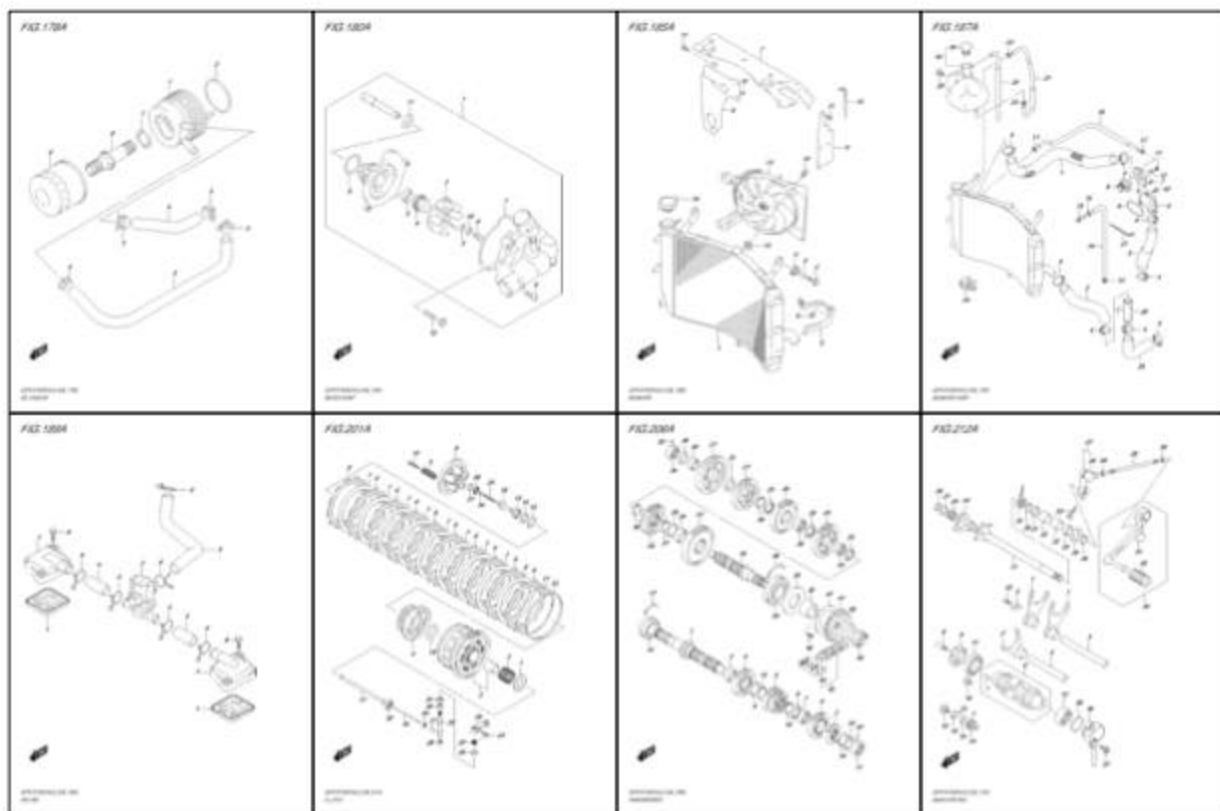

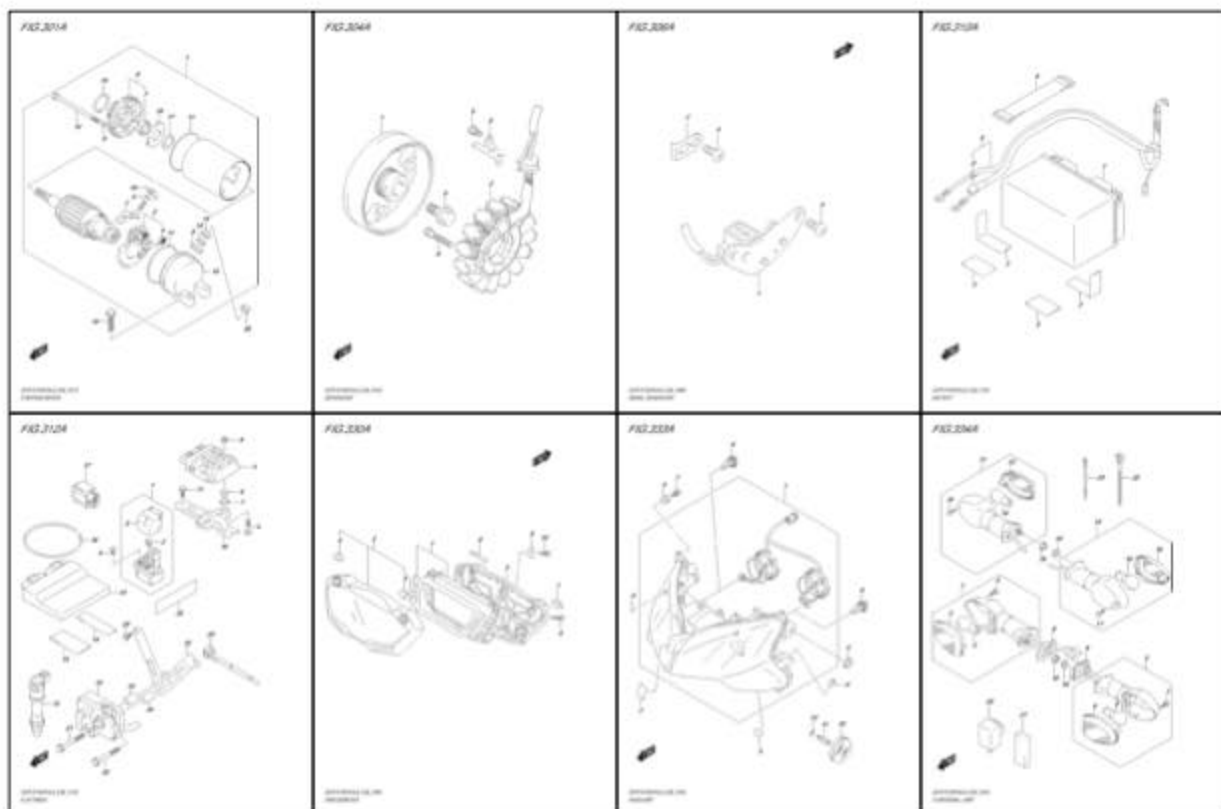

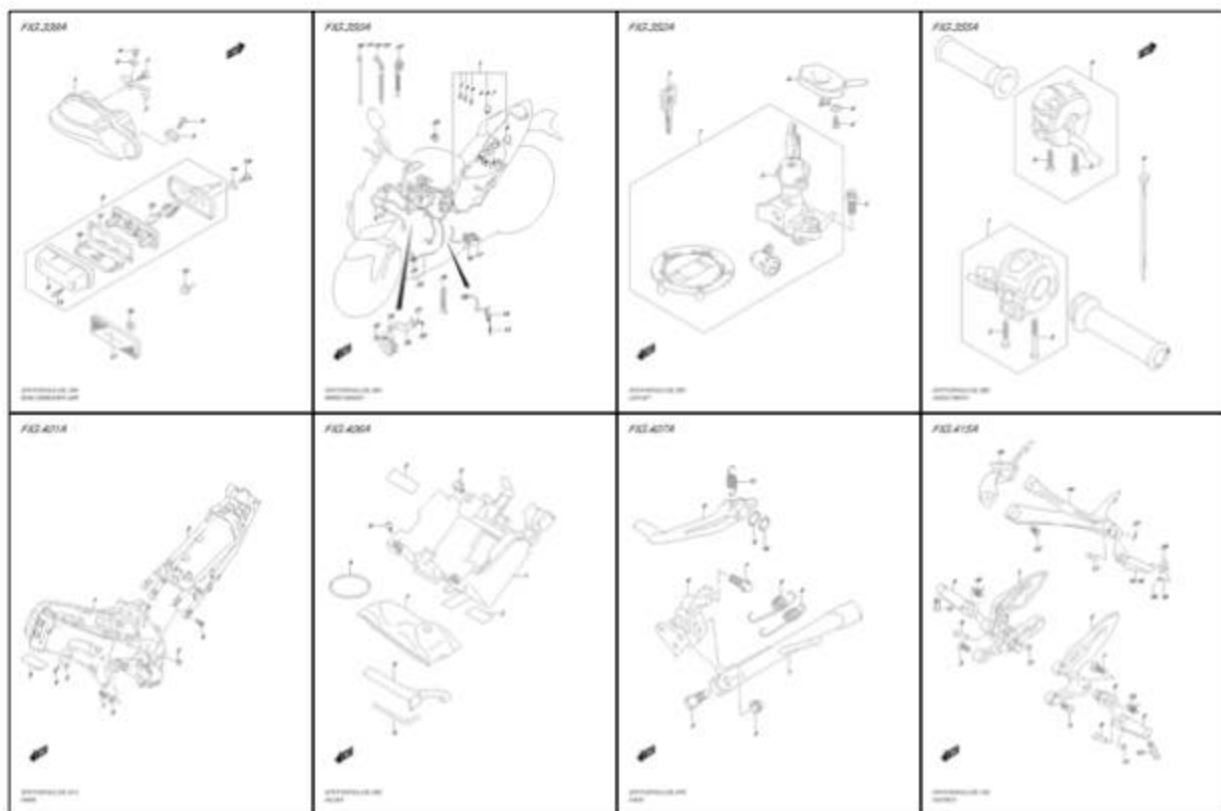

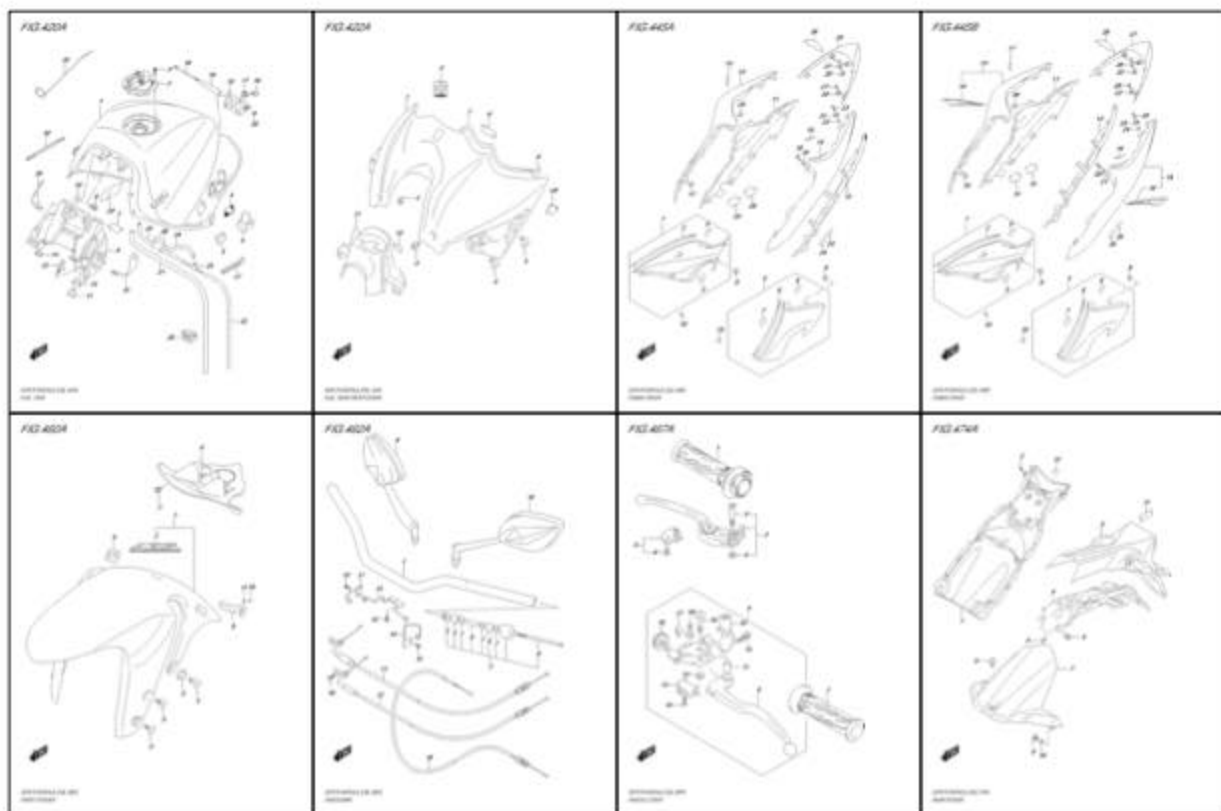

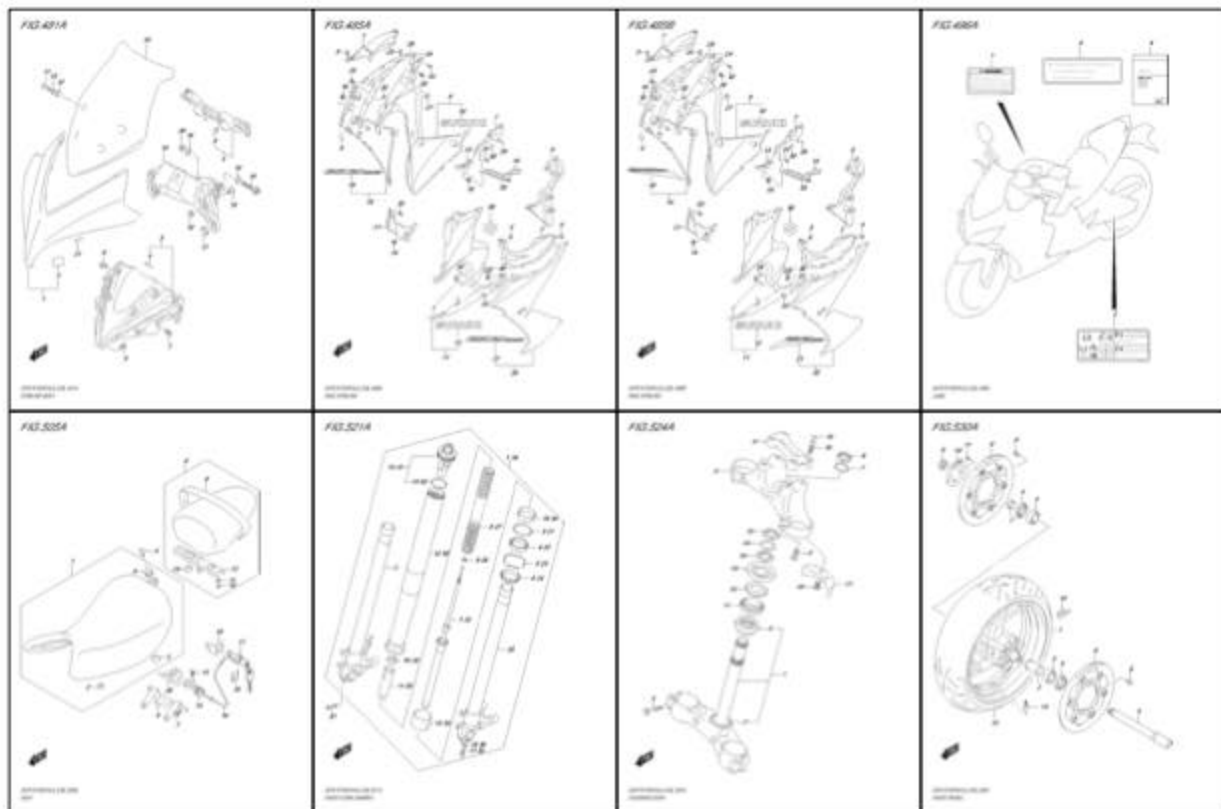

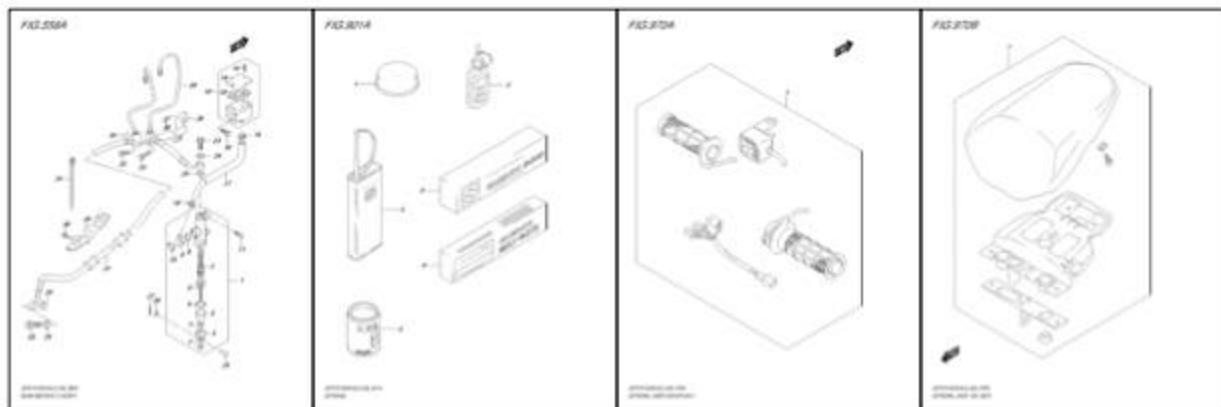


FIG.101A

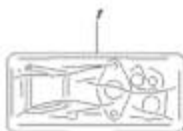


FIG.101A (1-B-2) GASKET SET

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	11401-04830	GASKET SET	1	OPT
2	11141-21H00	GASKET, CYLINDER HEAD	1	NOT ILLUSTRATED
3	11173-35F00	GASKET, CYL HEAD COVER NO.1	1	NOT ILLUSTRATED
4	11178-33E00	GASKET, CYL HEAD COVER NO.2	4	NOT ILLUSTRATED
5	11182-35F10	GASKET, 2ND AIR PASSAGE	4	NOT ILLUSTRATED
6	11191-27E00	WASHER, CYL HEAD COVER	6	NOT ILLUSTRATED
7	11482-40F10	GASKET, CLUTCH COVER	1	NOT ILLUSTRATED
8	11483-18G00	GASKET, MAGNETO COVER	1	NOT ILLUSTRATED
9	11484-35F00	GASKET, BREATHER COVER	1	NOT ILLUSTRATED
10	11489-21H00	GASKET, OIL PAN	1	NOT ILLUSTRATED
11	11491-33E02	GASKET, STARTER CLUTCH COVER	1	NOT ILLUSTRATED
12	11492-04K00	GASKET, STARTER IDLE GEAR CAP	1	NOT ILLUSTRATED
13	12837-24F10	GASKET, TENSIONER ADJUSTER	1	NOT ILLUSTRATED
14	14181-04K00	GASKET, EXHAUST PIPE	4	NOT ILLUSTRATED

FIG. 102A




GSX-31000FAL6_E08_102A
CYLINDER HEAD COVER

FIG. 102A (1-B-3) CYLINDER HEAD COVER

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	11171-04K00	COVER, CYLINDER HEAD	1	
2	11173-35F00	GASKET, HEAD COVER NO.1	1	
3	11178-33E00	GASKET, HEAD COVER NO.2	4	
4	09106-07009	BOLT (7X17.5)	6	
5	11191-27E00	WASHER	6	
6	09206-10016	PIN (8.2X18X13)	4	
7	11182-35F10	GASKET, 2ND AIR PASSAGE	4	

GSX-31000FAL6_E08

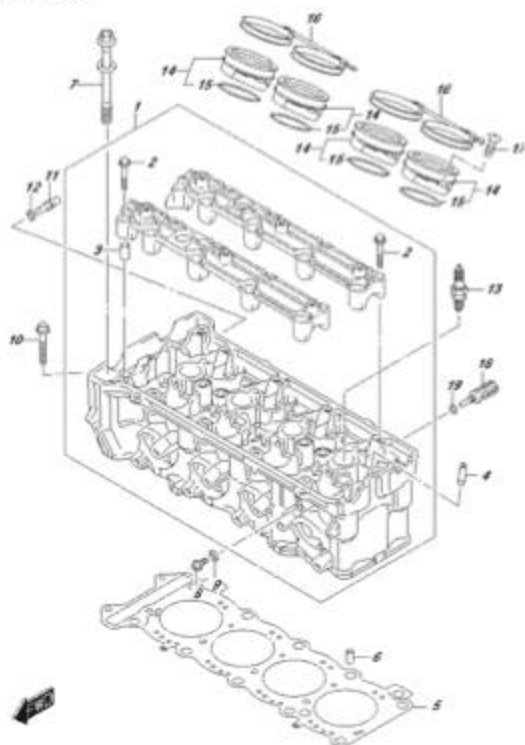FIG. 103A




GSX-S1000FALE_E08_103A
CYLINDER HEAD

FIG. 103A (1-B-4) CYLINDER HEAD

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	11100-21H50	HEAD ASSY, CYLINDER	1	
2	09103-06266	BOLT (8X4)	20	
3	09206-08007	PIN (8.2X8X16)	4	
4	11115-29G70	GUIDE, VALVE (OS 0.3)	16	OPT
5	11141-21H00	GASKET, CYLINDER HEAD	1	
6	04211-11169	PIN	2	
7	11117-30G00	BOLT, CYLINDER HEAD (L-106)	10	
8	01550-0612A	BOLT	1	
9	09168-06023	GASKET (5.6X13X1.2)	1	
10	07120-0650A	BOLT	2	
11	09493-80005	JET (R)	1	
12	09280-04004	O RING (D:1.2/D:4)	1	
13-1	09482-00557	SPARK PLUG (JUZ7D)	4	DENSO
13-2	09482-00558	SPARK PLUG (CR8EA-9)	4	NGK
13-3	09482-00555	SPARK PLUG (JUZ4D)	4	OPT
13-4	09482-00556	SPARK PLUG (CR8EA-9)	4	DENSO
13-5	09482-00559	SPARK PLUG (JUZ1D)	4	OPT
13-6	09482-00560	SPARK PLUG (CR10EA-9)	4	DENSO
14	13101-47H00	PIPE ASSY, INTAKE	4	OPT
15	09280-48010	O RING (D:2.4/D:47.2)	4	NGK
16	13170-15H10	CLAMP, INTAKE PIPE	2	
17	02122-0616B	SCREW	8	
18	13650-48X00	SENSOR, WATER TEMPERATURE	1	
19	09168-12017	GASKET (12X17X1)	1	

GSX-S1000FALE_E08

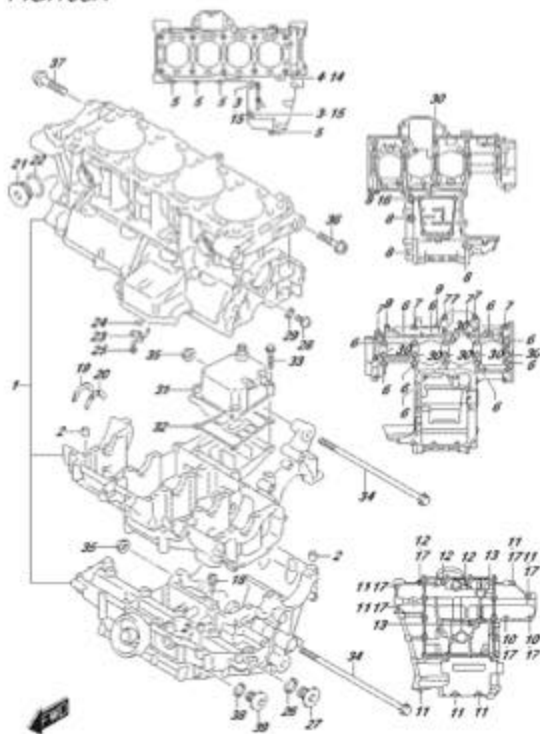FIG. 108A




Q3X-31000FAL6_E08
CRANKCASE

FIG. 108A (1-B-5) CRANKCASE

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	11301-04840	CRANKCASE SET	1	
2	11319-33E50	PIN	6	
3	09106-08139	BOLT (8X12)	2	
4	01547-0680A	BOLT	1	
5	01547-0640A	BOLT	4	
6	09103-09012	BOLT (8X8)	10	
7	09103-08339	BOLT (8X5)	7	
8	07120-0605A	BOLT	4	
9	01547-0640A	BOLT	2	
10	01547-0630A	BOLT	2	
11	01547-0640A	BOLT	7	
12	01547-0660A	BOLT	3	
13	01547-0670A	BOLT	2	
14	09168-06023	GASKET (5.8X13X1.2)	1	
15	09168-08016	GASKET (8.2X14X1)	2	
16	09168-08016	GASKET (8.2X14X1)	1	
17	09168-06023	GASKET (5.8X13X1.2)	7	
18	09493-28012	JET, 140	1	
19	12228-48800-0E0	BEARING, THRUST RH (GREEN)	1	
20-1	12228-48800-0B0	BEARING, THRUST LH (BROWN)	1	
20-2	12228-48800-0C0	BEARING, THRUST LH (RED)	1	
20-3	12228-48800-0D0	BEARING, THRUST LH (YELLOW)	1	
20-4	12228-48800-0E0	BEARING, THRUST LH (GREEN)	1	
20-5	12228-48800-0F0	BEARING, THRUST LH (BLUE)	1	
20-6	12228-48800-0G0	BEARING, THRUST LH (ORANGE)	1	
20-7	12228-48800-0H0	BEARING, THRUST LH (BLACK)	1	
21	11318-35F00	PLUG, WATER JACKET	3	
22	09280-20002	O RING (D:3.1, D:19.4)	3	
23	11390-21H00	JET, PISTON COOLING	4	
24	09280-04004	O RING (D:1.2, D:4)	4	
25	09106-06075	BOLT (8X12)	4	
26	09168-16002	GASKET (10X22X2)	4	
27	09248-16013	PLUG	4	
28	09248-10010	PLUG (10X10)	1	

Q3X-31000FAL6_E08

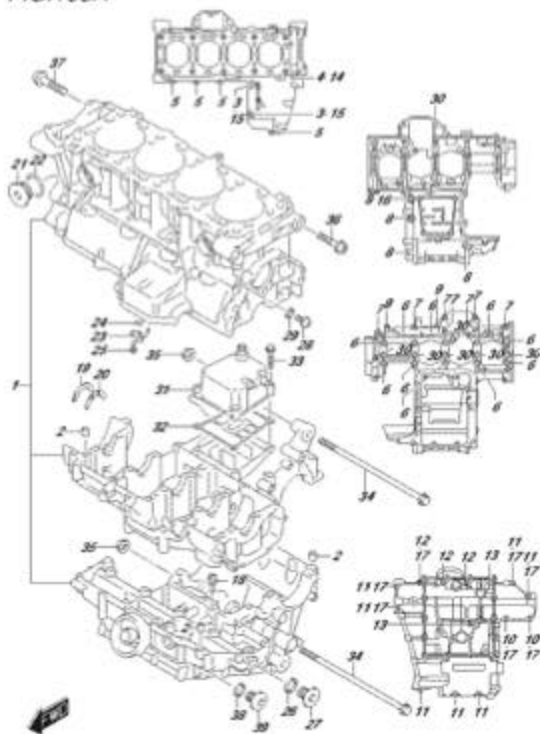FIG. 108A




Q3X-31000FAL6_E08
CRANKCASE

FIG. 108A (1-B-6) CRANKCASE

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
29	09168-10002	GASKET (10X14X3.6)	1	
30	09280-08012	O-RING (D:1.9/D:7.8)	7	
31	11370-04K00	COVER, BREATHER	1	
32	11484-35F00	GASKET, BREATHER COVER	1	
33	01547-0630A	BOLT	4	
34	09103-10205	BOLT (10X225)	2	
35	09159-10115	NUT	2	
36	09106-10069	BOLT (10X45)	2	
37	09106-10070	BOLT (10X55)	2	
38	09168-14002	GASKET (13.6X18.8X4.8)	2	
39	09248-14005	PLUG (14X12)	2	

Q3X-31000FAL6_E08

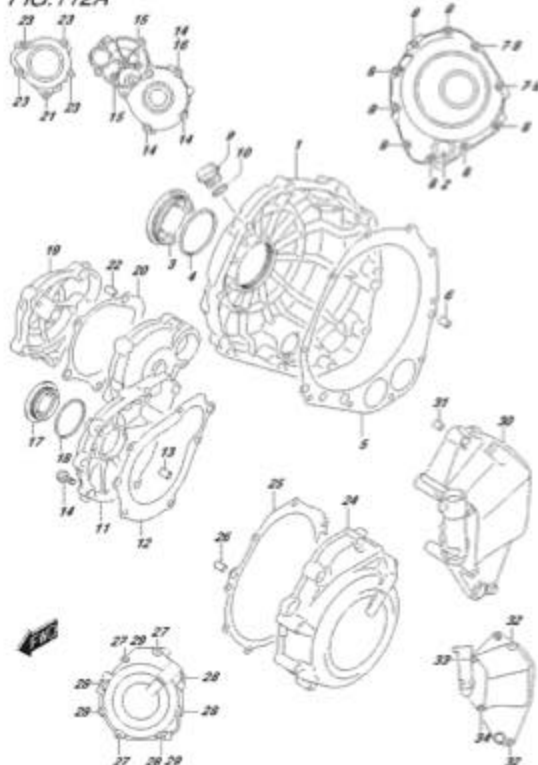FIG. 112A




Q3X-31000FAL6_E08
CRANKCASE COVER

FIG. 112A (1-B-7) CRANKCASE COVER

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	11340-04K00	COVER, CLUTCH	1	
2	11971-33210	LENS, OIL LEVEL	1	
3	11342-41G10	CAP, CLUTCH RELEASE ADJUST	1	
4	31156-17E00	O RING	1	
5	11482-40F10	GASKET, CLUTCH COVER	1	
6	04211-09189	PIN	2	
7	09168-06023	GASKET (5.6X13X1.2)	2	
8	09103-06213	BOLT (EX30)	10	
9	11971-25D00	PLUG, ENGINE OIL FILTER	1	
10	09280-17003	O RING (D3.1/D:16.8)	1	
11	11351-04K00	COVER, STARTER CLUTCH	1	
12	11491-33E02	GASKET	1	
13	04211-09149	PIN	2	
14	09103-06212	BOLT (EX25)	3	
15	09103-06214	BOLT (EX35)	2	
16	09168-06023	GASKET (5.6X13X1.2)	1	
17	09259-36021	PLUG	1	
18	09280-33004	O RING (D3.1/D:32.7)	1	
19	11382-04K00	CAP, STARTER IDLE GEAR	1	
20	11492-04K00	GASKET	1	
21	09103-06261	BOLT (EX90)	1	
22	04211-09149	PIN	2	
23	09103-06214	BOLT (EX35)	4	
24	11351-04K00	COVER, MAGNETO	1	
25	11483-18G00	GASKET, MAGNETO COVER	1	
26	04211-09149	PIN	2	
27	09103-06213	BOLT (EX30)	3	
28	09103-06215	BOLT (EX40)	5	
29	09168-06023	GASKET (5.6X13X1.2)	2	
30	11351-04K00	COVER, ENGINE SPROCKET	1	
31	04211-09129	PIN	2	
32	09103-06216	BOLT (EX55)	2	
33	09103-06227	BOLT (EX95)	1	
34	09103-06263	BOLT (EX90)	1	

Q3X-31000FAL6_E08

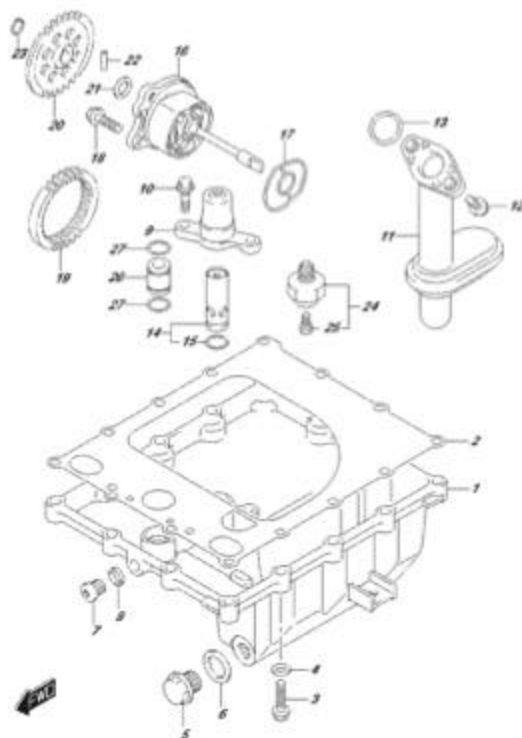FIG. 116A




Q3X-31000FAL6_F08_116A
OIL PAN/OIL PUMP

FIG. 116A (1-B-8) OIL PAN/OIL PUMP

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	11511-21H01	PAN, OIL	1	
2	11489-21H00	GASKET, OIL PAN	1	
3	01547-0625A	BOLT	14	
4	09168-06023	GASKET (5.8X13X1.2)	2	
5	09247-14036	PLUG (14X20)	1	OIL DRAIN
6	09168-14002	GASKET (13.8X18.8X4.8)	1	
7	09248-10010	PLUG (10X10)	1	
8	09168-10002	GASKET (10X14X3.8)	1	
9	11512-44G00	CAP, OIL RELIEF VALVE	1	
10	01547-0620A	BOLT	2	
11	16520-04K00	STRAINER, ENGINE OIL	1	
12	01550-0620A	BOLT	2	
13	09280-19008	O-RING (D:2.82/D:20.3)	1	
14	16440-24F00	VALVE ASSY, OIL RELIEF	1	
15	09280-13004	O-RING (D:1.9/D:13)	1	
16	16400-21H00	PUMP ASSY, ENGINE OIL	1	
17	16491-35F00	O-RING	1	
18	01547-0620A	BOLT	3	
19	16321-35F01	GEAR, OIL PUMP DRIVE (NT:30)	1	
20	16331-35F00	GEAR, OIL PUMP DRIVEN (NT:35)	1	
21	09181-10158	SHIM (10X18X0.5)	1	
22	09261-04009	PIN (4X15.8)	1	
23	08331-31109	CIRCLIP	1	
24	37820-33D10	SWITCH, OIL PRESSURE	1	
25	37822-33D00	BOLT	1	
26	11281-44G00	PIPE, OIL GALLERY	1	
27	09280-13004	O-RING (D:1.9/D:13)	2	

Q3X-31000FAL6_F08

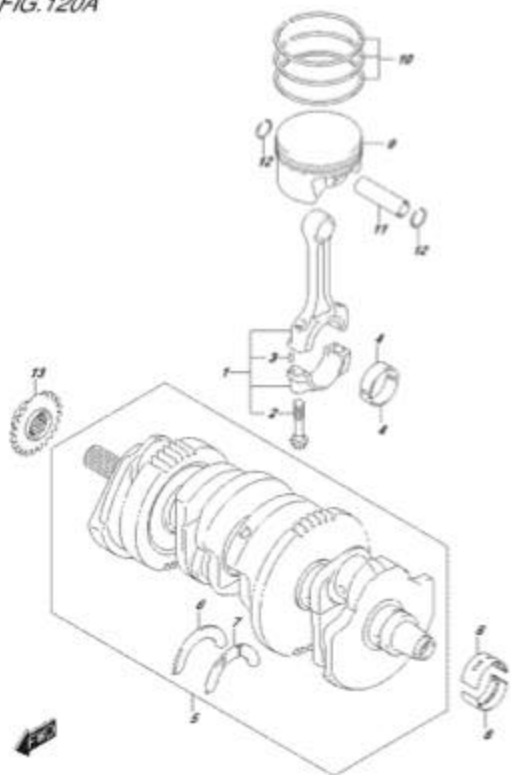FIG. 120A




Q3X-31000FAL6_E08
CRANKSHAFT

FIG. 120A (1-B-9) CRANKSHAFT

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	12160-04K00	ROD ASSY, CONNECTING	4	
2	12163-24F10	BOLT	8	
3	04221-04089	PIN	8	
4-1	12164-47H10-0A0	BEARING, CRANK PIN (GREEN)	8	
4-2	12164-47H10-0B0	BEARING, CRANK PIN (BLACK)	8	
4-3	12164-47H10-0C0	BEARING, CRANK PIN (BROWN)	8	
4-4	12164-47H10-0D0	BEARING, CRANK PIN (YELLOW)	8	
5	12000-48850	CRANKSHAFT SET	1	
6	12228-48B00-0E0	BEARING, THRUST RH (GREEN)	1	
7-1	12228-48B00-0B0	BEARING, THRUST LH (BROWN)	1	
7-2	12228-48B00-0C0	BEARING, THRUST LH (RED)	1	
7-3	12228-48B00-0D0	BEARING, THRUST LH (YELLOW)	1	
7-4	12228-48B00-0E0	BEARING, THRUST LH (GREEN)	1	
7-5	12228-48B00-0F0	BEARING, THRUST LH (BLUE)	1	
7-6	12228-48B00-0G0	BEARING, THRUST LH (ORANGE)	1	
7-7	12228-48B00-0H0	BEARING, THRUST LH (BLACK)	1	
8-1	12229-04K00-0A0	BEARING, CRANKSHAFT (GREEN)	10	
8-2	12229-04K00-0B0	BEARING, CRANKSHAFT (BLACK)	10	
8-3	12229-04K00-0C0	BEARING, CRANKSHAFT (BROWN)	10	
8-4	12229-04K00-0D0	BEARING, CRANKSHAFT (YELLOW)	10	
8-5	12229-04K00-0E0	BEARING, CRANKSHAFT (BLUE)	10	
9	12111-04K00-0F0	PISTON	4	
10	12140-04K00	RING SET, PISTON	4	
11	12151-04K00	PNL, PISTON	4	
12	09381-16001	SNAP RING	8	
13	12731-29G00	SPROCKET, CAM CHAIN (NT-17)	1	

Q3X-31000FAL6_E08

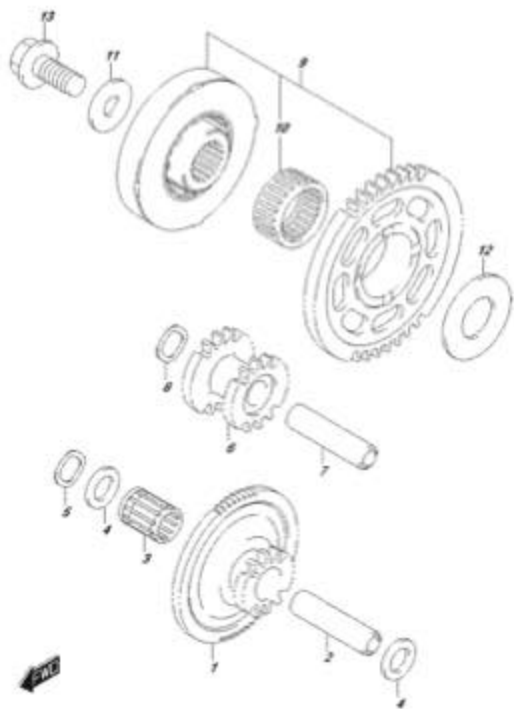FIG. 122A



Q3X-31000FAL6_E08
STARTER CLUTCH

FIG. 122A (1-B-10) STARTER CLUTCH

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	12611-04K00	GEAR, STARTER IDLE NO.1 (NT-1575)	1	
2	09206-12006	PIN (8X12X45.5)	1	
3	09263-12022	BEARING (12X16X20)	1	
4	09181-12167	SHIM (12X26X1)	2	
5	09164-12021	WASHER	1	
6	12612-04K00	GEAR, STARTER IDLE NO.2 (NT-1517)	1	
7	09206-12006	PIN (8X12X45.5)	1	
8	09164-12021	WASHER	1	
9	12600-40831	CLUTCH SET, STARTER (NT-44)	1	
10	09263-26035	BEARING (26X31X16)	1	
11	08211-10285	WASHER	1	
12	08211-20403	WASHER	1	
13	09103-10189	BOLT (10X23)	1	

Q3X-31000FAL6_E08

FIG.124A


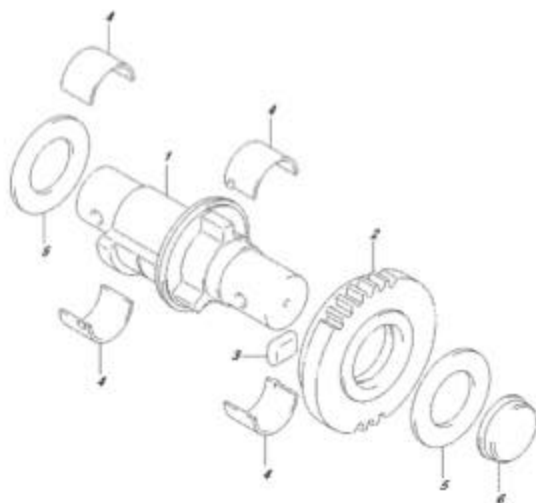


FIG.124A (1-B-11) CRANK BALANCER

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	12654-04K00	BALANCER, CRANK	1	
2	12666-40F00	GEAR, CRANK BALANCER (NT-30)	1	
3	12666-40F00	DAMPER, CRANK BALANCER GEAR	6	
4-1	12229-40F50-0A0	BEARING, CRANK BALANCER (GREEN)	4	
4-2	12229-40F50-0B0	BEARING, CRANK BALANCER (BLACK)	4	
4-3	12229-40F50-0C0	BEARING, CRANK BALANCER (BROWN)	4	
5	09181-23002	SHIM (23X40X2)	2	
6	09241-26004	PLUG	1	

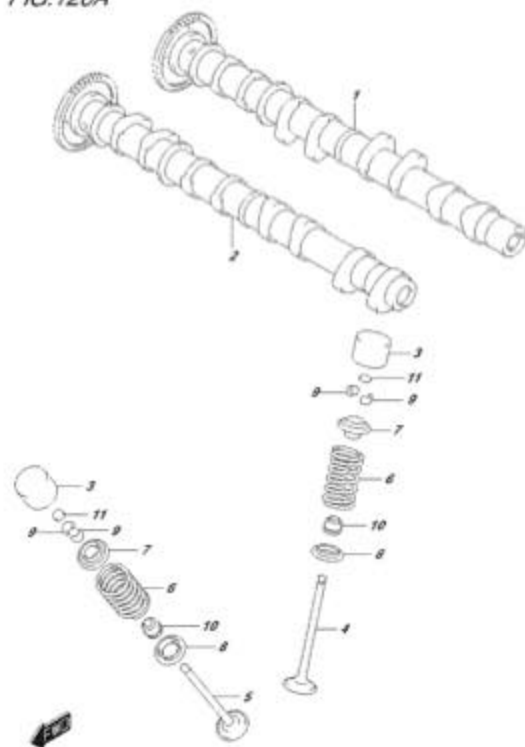FIG. 126A




Q3X-31000FAL6_E08
CAMSHAFT/VALVE

FIG. 126A (1-B-12) CAMSHAFT/VALVE

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	12710-04K00	CAMSHAFT, INTAKE	1	
2	12720-04K00	CAMSHAFT, EXHAUST	1	
3	12891-47H00	TAPPET	16	
4	12911-04K00	VALVE, INTAKE	8	
5	12912-04K00	VALVE, EXHAUST	8	
6	12921-04K00	SPRING, VALVE	16	
7	12931-04K00	RETAINER, VALVE SPRING	16	
8	12933-29G00	SEAT, VALVE SPRING	16	
9	12932-32C00	COTTER, VALVE	32	
10	09289-04002	OIL SEAL (4.5X10X8)	16	
11-1	12892-05C00-120	SHIM, TAPPET (T:1.20)	16	
11-2	12892-05C00-125	SHIM, TAPPET (T:1.25)	16	
11-3	12892-05C00-130	SHIM, TAPPET (T:1.30)	16	
11-4	12892-05C00-135	SHIM, TAPPET (T:1.35)	16	
11-5	12892-05C00-140	SHIM, TAPPET (T:1.40)	16	
11-6	12892-05C00-145	SHIM, TAPPET (T:1.45)	16	
11-7	12892-05C00-150	SHIM, TAPPET (T:1.50)	16	
11-8	12892-05C00-155	SHIM, TAPPET (T:1.55)	16	
11-9	12892-05C00-160	SHIM, TAPPET (T:1.60)	16	
11-10	12892-05C00-165	SHIM, TAPPET (T:1.65)	16	
11-11	12892-05C00-170	SHIM, TAPPET (T:1.70)	16	
11-12	12892-05C00-175	SHIM, TAPPET (T:1.75)	16	
11-13	12892-05C00-180	SHIM, TAPPET (T:1.80)	16	
11-14	12892-05C00-185	SHIM, TAPPET (T:1.85)	16	
11-15	12892-05C00-190	SHIM, TAPPET (T:1.90)	16	
11-16	12892-05C00-195	SHIM, TAPPET (T:1.95)	16	
11-17	12892-05C00-200	SHIM, TAPPET (T:2.00)	16	
11-18	12892-05C00-205	SHIM, TAPPET (T:2.05)	16	
11-19	12892-05C00-210	SHIM, TAPPET (T:2.10)	16	
11-20	12892-05C00-215	SHIM, TAPPET (T:2.15)	16	
11-21	12892-05C00-220	SHIM, TAPPET (T:2.20)	16	

Q3X-31000FAL6_E08

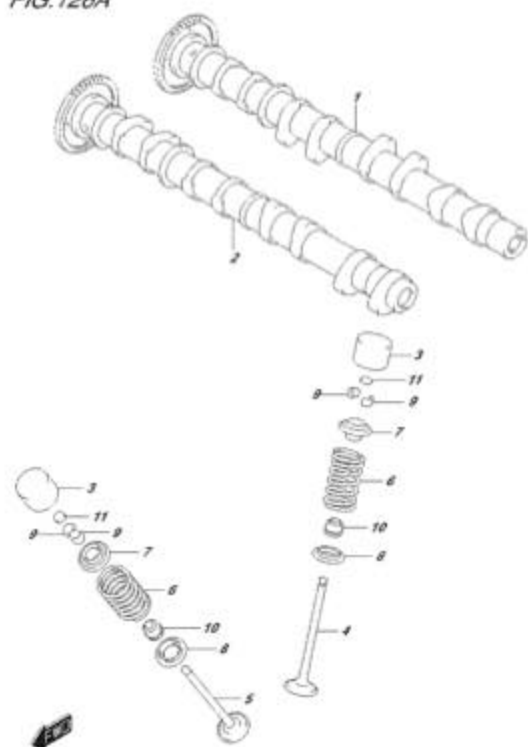FIG.126A



Q3X-31000FAL6_E08
CAMSHAFT/VALVE

FIG.126A (1-B-13) CAMSHAFT/VALVE

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
12	12800-05830	SHIM SET, TAPPET T:1.25, 1.25, 2.95, 3.00 (PCS EACH) & CASE	1	OPT NOT ILLUSTRATED
13	99000-89491	CASE, TAPPET SHIM	1	OPT NOT ILLUSTRATED

Q3X-31000FAL6_E08

FIG.127A

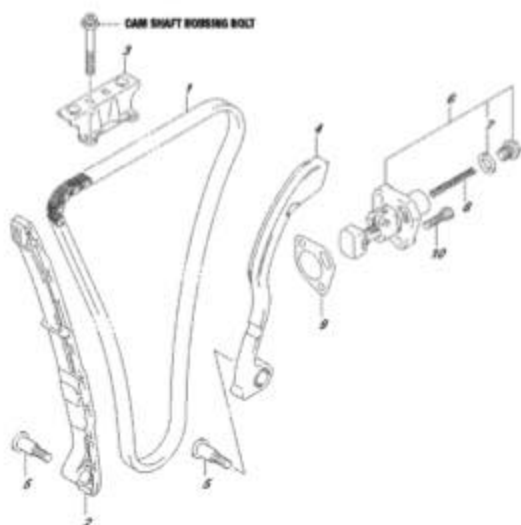


FIG.127A (1-B-14) CAM CHAIN

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	12760-04K00	CHAIN, CAM SHAFT DRIVE	1	
2	12771-21H00	GUIDE, CAM CHAIN NO.1	1	
3	12762-35F10	GUIDE, CAM CHAIN NO.2	1	
4	12811-21H00	TENSIONER, CAM CHAIN	1	
5	12812-31G00	BOLT, CAM CHAIN TENSIONER	2	
6	12830-41G11	ADJUSTER ASSY, TENSIONER	1	
7	12837-24F10	GASKET	1	
8	12831-41G00	SPRING	1	
9	12837-18Q00	GASKET, ADJUSTER	1	
10	07130-0625A	BOLT	2	

FIG.140A


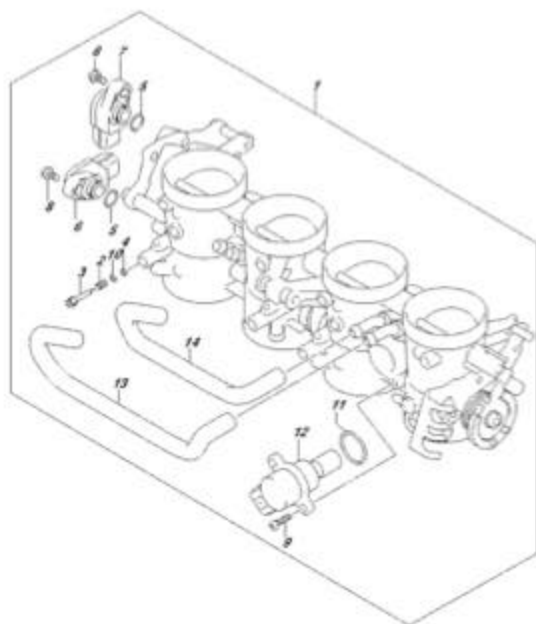


FIG.140A (1-B-15) THROTTLE BODY

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	13405-04K00	BODY ASSY, THROTTLE	1	
2	13268-46700	SPRING	4	
3	13269-33E00	SCREW	4	
4	13295-29900	O RING	4	
5	13579-29G20	O RING	2	
6	13580-14J00	SENSOR	1	
7	13580-29C00	SENSOR ASSY	1	
8	13605-02F00	SCREW	2	
9	13602-05A40	SCREW	2	
10	13606-47A00	WASHER	4	
11	13679-37H00	O RING	1	
12	18117-14J01	MOTOR ASSY	1	
13	13698-06J00	HOSE	1	
14	13698-06J10	HOSE	1	

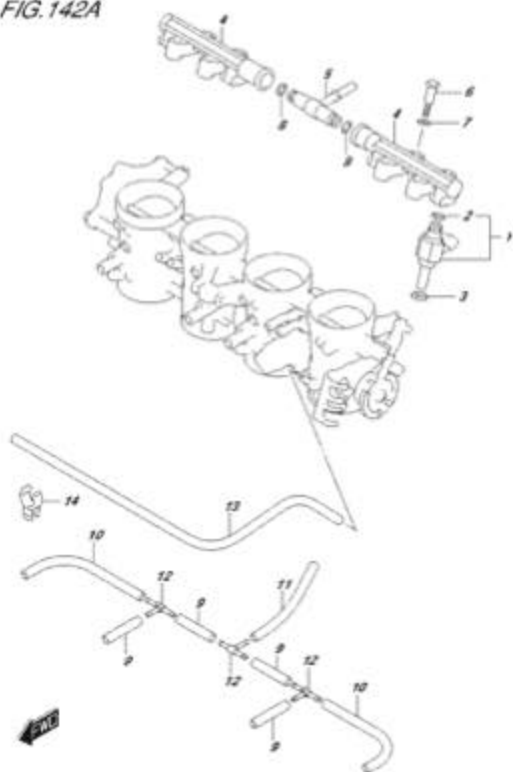FIG.142A




Q3X-31000FAL6_E08
THROTTLE BODY HOSE/JOINT

FIG.142A (1-C-2) THROTTLE BODY HOSE/JOINT

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	15710-04K00	INJECTOR ASSY	4	
2	15717-58B00	O RING	4	
3	15722-14J00	RNG, SEAL	4	
4	13473-08J00	PIPE, DELIVERY	2	
5	13473-04K00	NIPPLE ASSY	1	
6	13001-29G00	SCREW	4	
7	13602-29G00	PACKING	4	
8	15721-06J00	O RING	2	
9	13681-39F00-035	HOSE (7.4X3.2X35)	4	
10	13681-39F00-100	HOSE (7.4X3.2X100)	2	
11	09355-30705-600	HOSE (3X7X600)	1	L:600->135
12	13685-02FA0	NIPPLE	3	
13	13683-04K00	HOSE (7.4X3.2X300)	1	
14	09408-00309	CLAMP	1	

Q3X-31000FAL6_E08

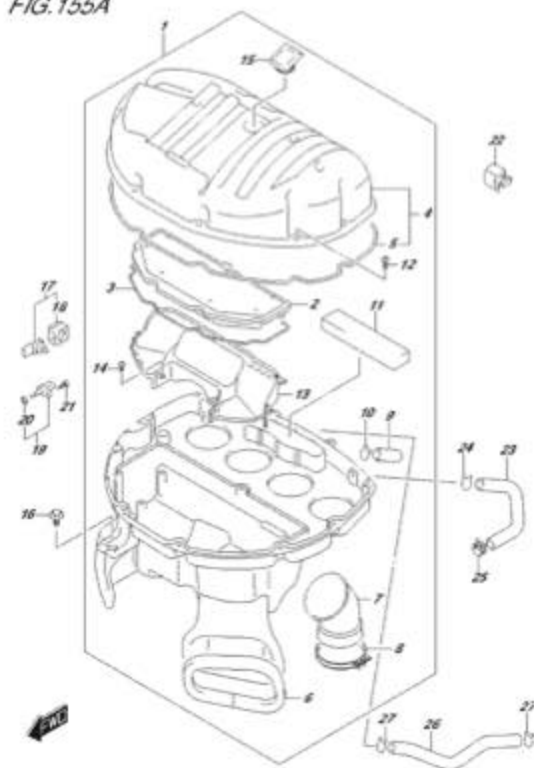FIG.155A




Q3X-31000FAL6_E08
AIR CLEANER

FIG.155A (1-C-3) AIR CLEANER

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	13700-04K00	CLEANER ASSY, AIR	1	
2	13780-47H10	FILTER ASSY	1	
3	13756-47H00	GASKET, CASE	1	
4	13740-04K00	CAP, AIR CLEANER	1	
5	13746-01H00	GASKET, CAP	1	
6	13736-04K00	CUSHION, DUCT	2	
7	13881-04K00	TUBE, OUTLET	4	
8	13627-40H01	CLAMP, INTAKE PIPE	4	
9	13878-09F00	PLUG, DRAIN	1	
10	09401-14101	CLIP	1	
11	13788-04K00	FILTER, BREATHER	1	
12	03541-0520A	SCREW	11	
13	13723-04K00	SEPARATOR, AIR CLEANER	1	
14	03541-0412A	SCREW	6	
15	13744-04K00	PLUG	1	
16	09111-08089	BOLT (BX16)	1	
17	15630-29G40	SENSOR, BOOST	1	
18	15625-29G40	COVER	1	
19	13650-41F10	SENSOR, AIR TEMPERATURE	1	
20	13655-41F10	O RING	1	
21	03511-0516A	SCREW	1	
22	18590-32Q00	SENSOR, AIR PRESSURE	1	
23	13697-04K00	HOSE, ISC VALVE	1	
24	09401-15101	CLIP	1	
25	09401-16407	CLIP	1	
26	13853-04K00	HOSE, BREATHER	1	
27	09401-14101	CLIP	2	

Q3X-31000FAL6_E08

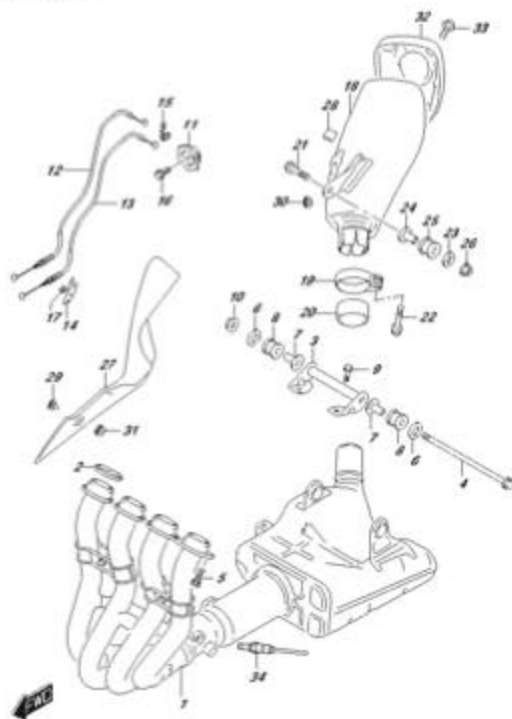FIG. 163A




Q3X-31000FAL6_F06_004
AC PFLER

FIG. 163A (1-C-4) MUFFLER

REF NO	PART NO	DESCRIPTION	QTY	REMARKS
1	14100-04K00	EXHAUST	1	
2	14181-04K00	GASKET, EXHAUST PPE	4	
3	14770-04K00	BRACKET, EXH SPRT	1	
4	09103-08464	BOLT (BX200)	1	
5	09106-08178	BOLT (BX20)	8	
6	09160-08503	WASHER (8.5X30X2.3)	2	
7	09180-08152	SPACER (8.6X12X4.2)	2	
8	09320-12077	CUSHION	2	
9	09135-08207	BOLT (BX16)	2	
10	08316-1008A	NUT	1	
11	11269-18G01	PULLEY, CONTROLLER	1	
12	11276-04K00	CABLE, EXH VALVE NO.1	1	
13	11277-04K00	CABLE, EXH VALVE NO.2	1	
14	14250-21H00	BRACKET, EXHAUST VALVE CABLE	1	
15	14252-14J00	GUIDE, EXHAUST VALVE CABLE	1	
16	01547-0516A	BOLT	1	
17	08316-1006A	NUT	1	
18	14310-04K00-H01	BODY, MUFFLER	1	
19	14459-21H30	CLAMP, MUFFLER CONNECTOR	1	
20	14771-42F40	CONNECTOR, JT	1	
21	09106-08164	BOLT (BX45)	1	
22	09106-08197	BOLT (BX35)	1	
23	09160-08503	WASHER (8.5X30X2.3)	1	
24	09180-08152	SPACER (8.6X12X4.2)	1	
25	09320-12048	CUSHION	1	
26	08316-1008A	NUT	1	
27	14780-04K00	COVER, MUFFLER FRONT	1	
28	14795-10FA0	GROMMET	1	
29	09139-06124	SCREW (BX12)	1	
30	09320-04009	BUSH	1	
31	09320-08066	CUSHION	1	
32	14791-04K00	COVER, MUFFLER REAR	1	
33	09106-08078	BOLT (BX15)	3	
34	18213-04K00	SENSOR, OXYGEN	1	

Q3X-31000FAL6_F06

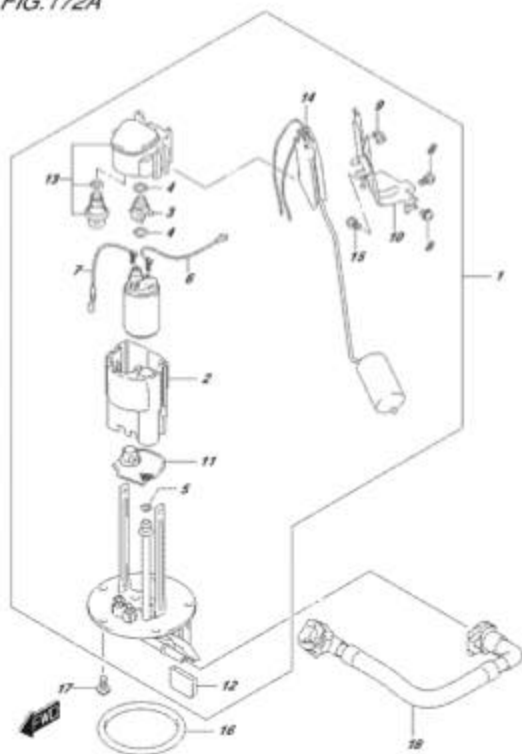FIG.172A



Q3X-31000FAL6_E08
FUEL PUMP

FIG.172A (1-C-5) FUEL PUMP

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	15100-04K00	PUMP ASSY, FUEL	1	
2	15111-27Q00	CUP, RESERVOIR	1	
3	15112-05H00	JOINT	1	
4	15113-05H00	O RING	2	
5	15113-35F00	O RING	1	
6	15114-14J00	WIRE, EARTH	1	
7	15115-06J00	WIRE, LEAD	1	
8	15116-10F00	SCREW	2	
9	15119-06J00	SADDLE, EDGE	1	
10	15181-04K00	BRACKET, GAUGE	1	
11	15420-31J00	STRAINER	1	
12	15583-18H00	CAP, STAY	1	
13	15610-14J00	REGULATOR	1	
14	34810-04K00	GAUGE ASSY, FUEL LEVEL	1	
15	15116-31J00	SCREW	1	
16	15201-35F00	O RING	1	
17	07120-0612A	BOLT	5	
18	15810-04K00	HOSE, FUEL	1	

Q3X-31000FAL6_E08

FIG.178A


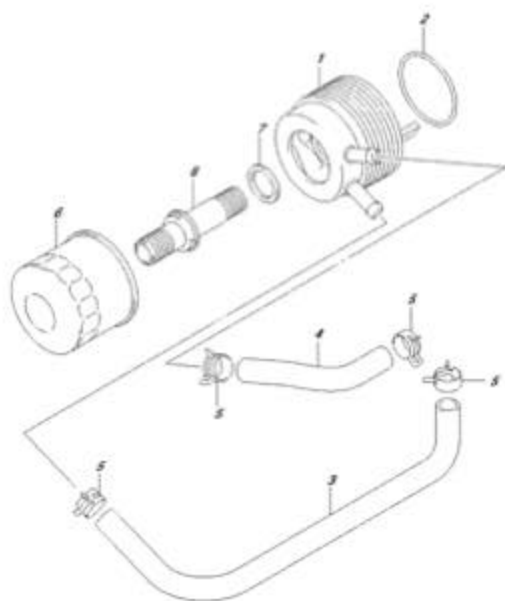


FIG.178A (1-C-6) OIL COOLER

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	16600-04K00	COOLER ASSY, OIL	1	
2	09280-80005	O RING (D2.4/D 80.5)	1	
3	16461-04K00	HOSE, OIL COOLER WATER INLET	1	
4	16471-04K00	HOSE, OIL COOLER WATER OUTLET	1	
5	09401-16407	CLIP	4	
6	16510-07J00	FILTER ASSY, ENGINE OIL	1	
7	09181-21002	SHIM (21X31X0.8)	1	
8	16591-04K00	BOLT, OIL COOLER UNION	1	

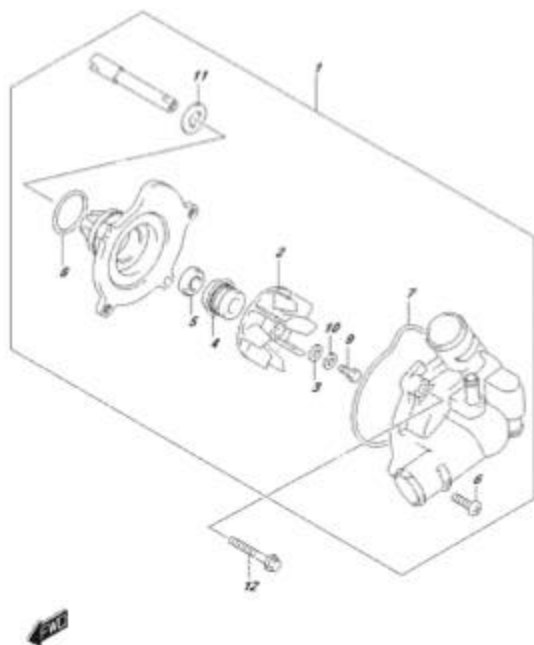FIG.180A




Q3X-31000FAL6_E08
WATER PUMP

FIG.180A (1-C-7) WATER PUMP

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	17400-04K00	PUMP ASSY, WATER	1	
2	17491-17E01	IMPELLER	1	
3	09168-06025	GASKET (8X15X2.2)	1	
4	17470-02F10	SEAL, MECHANICAL	1	
5	17461-48G20	OIL SEAL	1	
6	02112-0616A	SCREW	2	
7	17418-33400	O RING	1	
8	17435-33400	O RING	1	
9	09100-06099	BOLT (6X13)	1	
10	09164-06006	WASHER	1	
11	17432-07G20	WASHER	1	
12	01547-0635A	BOLT	2	

Q3X-31000FAL6_E08

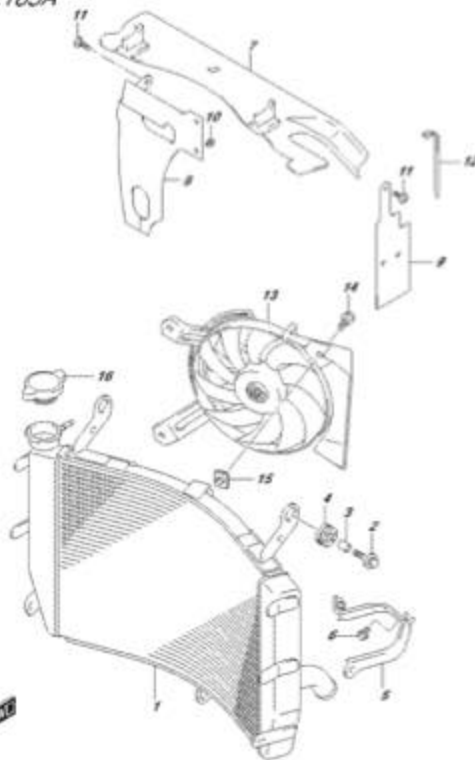FIG.185A




Q3X-31000FAL6_E08
RADIATOR

FIG.185A (1-C-8) RADIATOR

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	17710-04K10	RADIATOR ASSY, WATER	1	
2	09118-09097	BOLT (EX25)	3	
3	09180-06290	SPACER (8.5X10X12)	3	
4	09320-10051	CUSHION	3	
5	17760-04K00	BRACKET, RADIATOR LOWER	1	
6	01550-0612A	BOLT	1	
7	17771-04K00	SHIELD, HEAT	1	
8	17772-04K00	SHIELD, HEAT RH	1	
9	17773-04K00	SHIELD, HEAT LH	1	
10	09409-05314-5PK	CLIP (BLACK)	2	
11	09409-06315	CLIP	2	
12	09407-19401	CLAMP (L-186)	1	
13	17800-04K00	FAN ASSY, RADIATOR	1	
14	17711-14G00	BOLT	3	
15	17802-14F00	NUT, FAN ASSY	1	
16	17730-14G00	CAP, RADIATOR	1	

Q3X-31000FAL6_E08

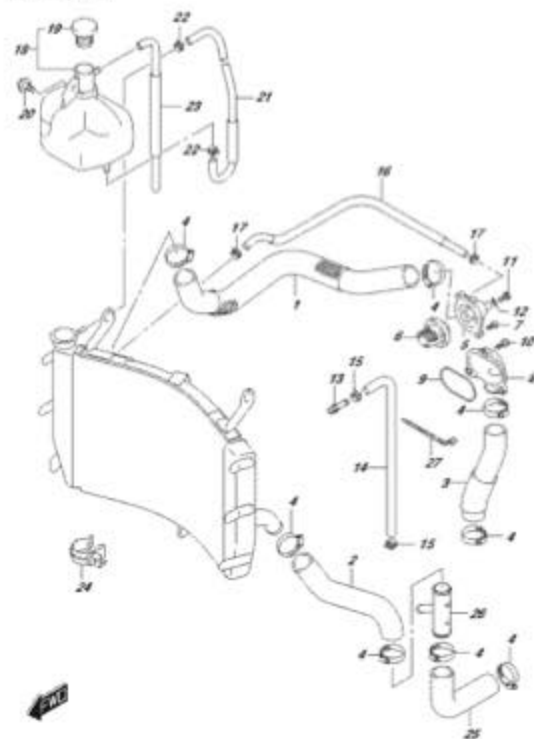FIG.187A



Q31X-31000FAL6_E08
RADIATOR HOSE

FIG.187A (1-C-9) RADIATOR HOSE

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	17851-04K00	HOSE, RADIATOR INLET	1	
2	17852-04K00	HOSE, RADIATOR OUTLET	1	
3	17853-40F10	HOSE, CYLINDER INLET	1	
4	09402-35501	CLAMP	8	
5	17661-35F00	COVER, THERMOSTAT	1	
6	17670-06G60	THERMOSTAT, WATER	1	
7	01547-0620A	BOLT	2	
8	17661-33E20	CONNECTOR, CYLINDER JOINT	1	
9	17863-33E00	O RING	1	
10	01547-0620A	BOLT	3	
11	17568-50F00	BOLT, THERMOSTAT COVER AIR	1	
12	09168-06026	GASKET (8.4X11.5X0.8)	1	
13	09362-09011	UNION	1	
14	17854-04K00	HOSE, WATER BYPASS	1	
15	09401-12414	CLIP	2	
16	17857-04K00	HOSE, WATER AIR BLEED	1	
17	09401-10409	CLIP	2	
18	17910-04K00	TANK ASSY, RESERVOIR	1	
19	17931-31J00	CAP	1	
20	09111-08085	BOLT (EX12)	1	
21	17851-04K00	HOSE, RESERVOIR TANK INLET	1	
22	09401-08411	CLIP	2	
23	17852-04K00	HOSE, RESERVOIR TANK OVER FLOW	1	
24	09408-00321	CLAMP	1	
25	17855-04K00	HOSE, RADIATOR OUTLET NO.2	1	
26	17881-04K00	PIPE, WATER HOSE JOINT	1	
27	09407-18402	CLAMP (L-165)	1	

Q31X-31000FAL6_E08

FIG.189A

FIG.189A (1-C-10) 2ND AIR

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	18450-35F11	VALVE ASSY, 2ND AIR REED	2	
2	18510-29G70	VALVE ASSY, AIR CUT	1	
3	18711-04K00	HOSE, 2ND AIR CLEANER	1	
4	18461-04K00	HOSE, 2ND AIR VALVE, RH	1	
5	18471-04K00	HOSE, 2ND AIR VALVE, LH	1	
6	09401-17Z01	CLIP	6	
7	18531-35F30	COVER, 2ND AIR REED VALVE	2	
8	09103-06Z01	BOLT (EX20)	4	


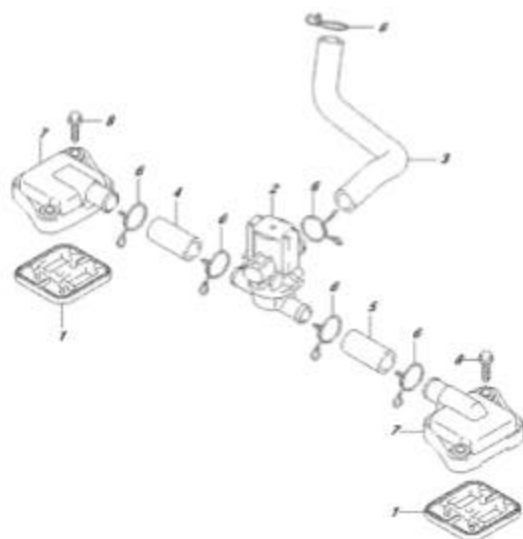


FIG.201A

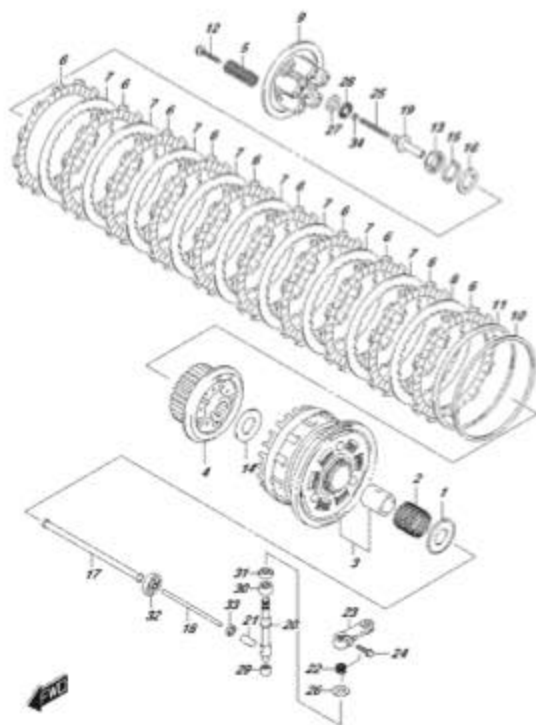


Q3X-31000FAL6_E08_2014
CLUTCH

FIG.201A (1-C-11) CLUTCH

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	09160-25073	WASHER (25X5X2.4)	1	
2	09263-35017	BEARING (35X41X35.8)	1	
3	21200-40880	GEAR ASSY, PRIMARY DRIVEN (NT.73)	1	
4	21410-40F01	HUB, CLUTCH SLEEVE	1	
5	21413-04K00	SPRING, CLUTCH	5	
6	21441-40F20	PLATE, CLUTCH DRIVE (T.2.8)	10	
7	21451-40F00	PLATE, CLUTCH DRIVEN NO.1 (T.2.3)	8	
8	21451-40F30	PLATE, CLUTCH DRIVEN NO.4 (T.2.3)	1	
9	21462-40F00	DISC, CLUTCH PRESSURE	1	
10	21471-40F00	SEAT, WAVE WASHER	1	
11	21472-40F00	WASHER, CLUTCH PLATE WAVE	1	
12	21412-04K00	BOLT, CLUTCH SPRING	5	
13	09159-24010	NUT	1	
14	09160-25056	WASHER (25X5(X2.5))	1	
15	09164-24008	WASHER	1	
16	09181-25223	SHIM (25X38X1)	1	
17	23110-38B00	ROD, CLUTCH PUSH RH	1	
18	23111-05A01	ROD, CLUTCH PUSH, LH	1	
19	23121-41G00	PIECE, CLUTCH PUSH	1	
20	23122-41G00	CAMSHAFT, CLUTCH RELEASE	1	
21	23123-41G00	CAP, CLUTCH PUSH ROD	1	
22	23125-41G00	SPRING, CLUTCH RELEASE RETURN	1	
23	23271-41G00	ARM, CLUTCH RELEASE	1	
24	09103-06223	BOLT (EX20)	1	
25	09134-08015	SCREW (EX73)	1	

Q3X-31000FAL6_E08

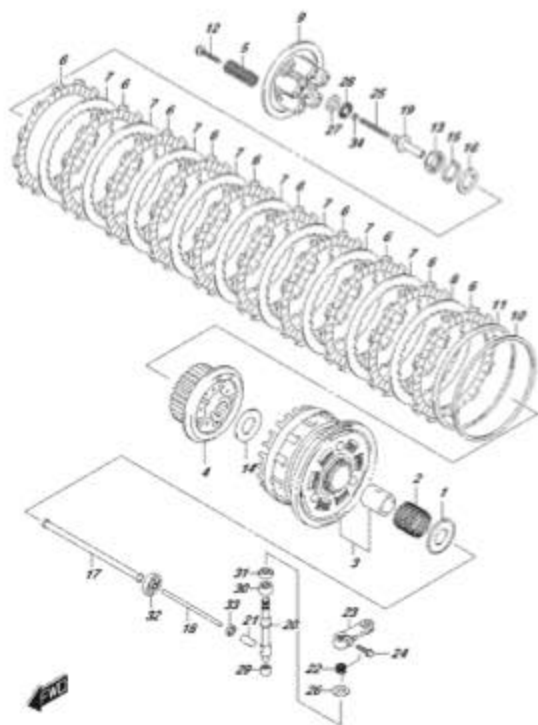FIG.201A



Q3X-31000FAL6_E08_201A
CLUTCH

FIG.201A (1-C-12) CLUTCH

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
26	09160-10020	WASHER (10.5X24X1)	1	
27	09160-15045	WASHER (15.5X28X1)	1	
28	09263-15003	BEARING (15X28X2)	1	
29	09263-10014	BEARING (10X14X10)	1	
30	09263-12027	BEARING (12X18X12)	1	
31	09282-10012	OIL SEAL (10X20X6)	1	
32	09283-06010	OIL SEAL (6X34X10.5)	1	
33	09285-10004	OIL SEAL (10X17X3)	1	
34	08310-0006A	NUT	1	

Q3X-31000FAL6_E08

FIG.206A


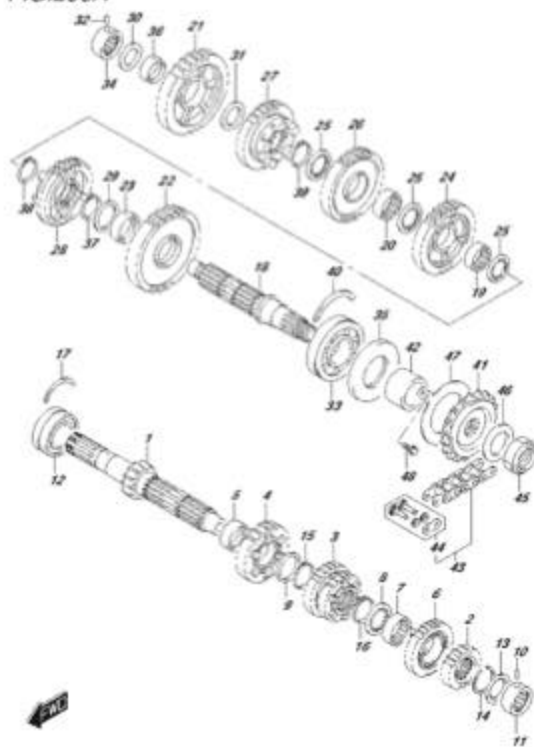


FIG.206A (1-C-13) TRANSMISSION

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	24120-40F30	SHAFT, CNTR (NT.16)	1	
2	24221-40F30	GEAR, 2ND DRIVE (NT.19)	1	
3	24231-40F40	GEAR, 3RD & 4TH DRIVE (NT.21&24)	1	
4	24251-40F40	GEAR, 5TH DRIVE (NT.25)	1	
5	24252-35F00	BUSH, 5TH DRIVE GEAR	1	
6	24251-40F30	GEAR, 6TH DRIVE (NT.36)	1	
7	24252-35F10	BUSH, 6TH DRIVE GEAR	1	
8	09167-27003	LOCK WASHER	1	
9	09181-27014	SHIM (27X36X2.5)	1	
10	09261-06003	PIN (6X10)	1	
11	09263-20087	BEARING (20X34X13.5)	1	
12	09267-25013	BEARING (25X52X20.6)	1	RH
13	09285-20006	OIL SEAL (26X31.2X2.7)	1	
14	09380-27004	CIRCLIP	1	
15	09380-27006	CIRCLIP	1	
16	09380-27006	CIRCLIP	1	
17	09390-58001	C RING	1	
18	24131-40F10	SHAFT, DRIVE	1	
19	24332-46H00	BUSH, 3RD DRIVEN GEAR	1	
20	24332-46H00	BUSH, 4TH DRIVEN GEAR	1	
21	24311-40F30	GEAR, 1ST DRIVEN (NT.41)	1	
22	24321-40F40	GEAR, 2ND DRIVEN (NT.39)	1	
23	24322-02F01	BUSH, 2ND DRIVEN GEAR	1	
24	24331-40F30	GEAR, 3RD DRIVEN (NT.36)	1	
25	24333-02F00	WASHER, 3RD & 4TH DRIVEN GEAR	3	
26	24341-40F20	GEAR, 4TH DRIVEN (NT.36)	1	
27	24351-40F40	GEAR, 5TH DRIVEN (NT.34)	1	
28	24361-40F30	GEAR, 6TH DRIVEN (NT.33)	1	
29	09160-27008	WASHER (27X36X1)	1	
30	09181-20251	SHIM (20X34X1)	1	

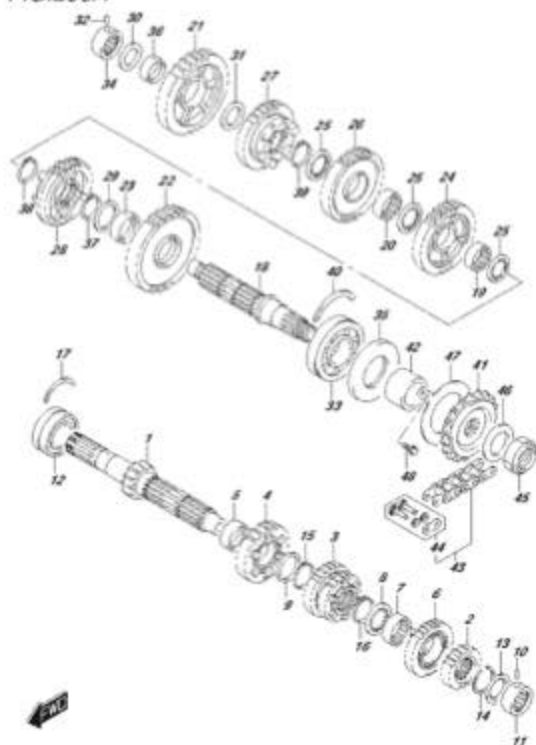FIG.206A




Q3X-31000FAL6_E08
TRANSMISSION

FIG.206A (1-C-14) TRANSMISSION

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
31	09181-22223	SHIM (22X34X1)	1	
32	09261-09003	PIN (EX10)	1	
33	09262-28025	BEARING (26X79X18)	1	LH
34	09263-20087	BEARING (20X34X13.5)	1	RH
35	09263-36006	OIL SEAL (34.8X71X6)	1	
36	09263-22068	BEARING (22X28X11)	1	
37	09380-27006	CIRCLIP	1	
38	09380-27006	CIRCLIP	1	
39	09380-27006	CIRCLIP	1	
40	09390-70001	C RING	1	
41	27510-20A40	SPROCKET, ENGINE (NT-17)	1	
42	27531-04K00	SPACER, ENGINE SPROCKET	1	
43	27600-33E50-116	CHAIN ASSY, DRIVE (RK525GSH)	1	
44	27620-33E50	JOINT SET, DRIVE CHAIN	1	
45	09159-20004	NUT	1	
46	09160-25066	WASHER (25X30X2.5)	1	
47	24751-04K00	RETAINER, DRIVE SHAFT OIL SEAL	1	
48	09103-06236	BOLT (EX12)	2	

Q3X-31000FAL6_E08

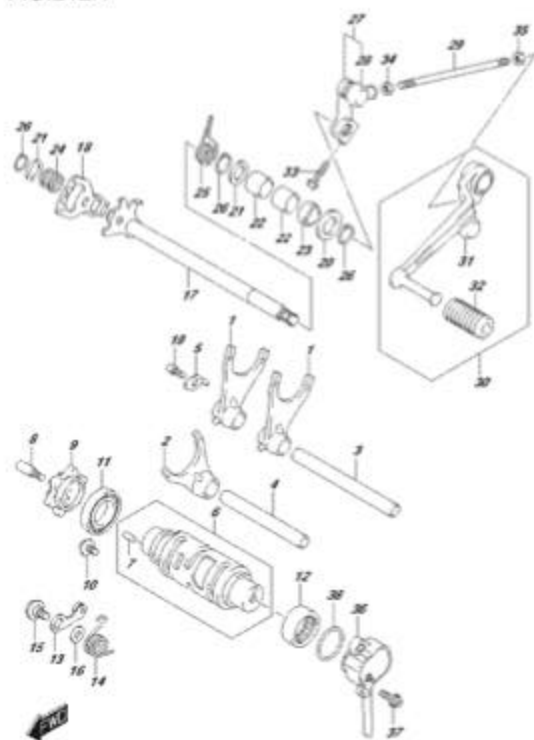FIG.212A




Q3X-31000FAL6_E08
(GEAR SHIFTING)

FIG.212A (1-C-15) GEAR SHIFTING

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	25211-35F11	FORK, GEAR SHIFT NO.1	2	
2	25231-35F11	FORK, GEAR SHIFT NO.3	1	
3	25411-24F00	SHAFT, GEAR SHIFT FORK NO.1	1	
4	25411-26D01	SHAFT, GEAR SHIFT FORK NO.2	1	
5	25451-35F00	RETAINER, GEAR SHIFT FORK	1	
6	25310-40F00	CAM, GEAR SHIFT	1	
7	04221-04089	Pin	1	
8	25312-42F01	BOLT, GEAR SHIFT CAM PLATE	1	
9	25381-13E00	PLATE, GEAR SHIFT CAM	1	
10	09136-05147	SCREW (8X12)	2	
11	09262-25006	BEARING (25X47X30)	1	
12	09263-25018	BEARING (25X32X12)	1	LH
13	25350-35F00	STOPPER, SHIFT CAM	1	
14	25355-17G00	SPRING, GEAR SHIFT CAM	1	
15	09111-06041	BOLT (8X14.3)	1	
16	08211-06141	WASHER	1	
17	25510-40F00	SHAFT, GEAR SHIFT	1	
18	25512-06G10	PLATE, GEAR SHIFT CAM DRIVE	1	
19	25671-35F00	STOPPER, GEAR SHIFT ARM	1	
20	09160-14016	WASHER (14X25X0.5)	1	LH
21	09181-14167	SHIM (14X22X1)	2	
22	09263-14027	BEARING (14X20X12)	2	
23	09263-14006	OIL SEAL (14X22X6)	1	
24	09440-17009	SPRING	1	
25	09444-20003	SPRING	1	
26	08331-3114A	CIRCLIP	3	
27	25520-04K00	ARM, GEAR SHIFT LINK	1	
28	25526-47000	COVER, DUST	1	
29	25525-24F00	ROD, GEAR SHIFT LINK	1	

Q3X-31000FAL6_E08

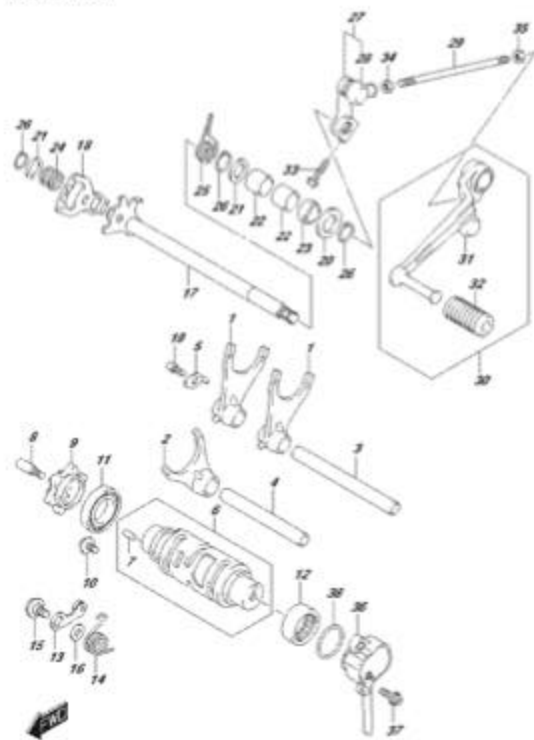FIG.212A



Q3X-31000FAL6_E08
(GEAR SHIFTING)

FIG.212A (1-D-2) GEAR SHIFTING

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
30	25900-04K00	LEVER ASSY, GEAR SHIFT	1	
31	25526-47000	COVER, DUST	1	
32	25652-20C00	RUBBER, GEAR SHIFT PEDAL	1	
33	01547-0520A	BOLT	1	
34	08310-0006A	NUT	1	
35	09140-06025	NUT	1	
36	37730-41C02	SENSOR ASSY, GEAR POSITION	1	
37	09106-05023	BOLT (3X16)	2	
38	09280-29005	O RING (D2.4/D.26.2)	1	

Q3X-31000FAL6_E08

FIG.301A

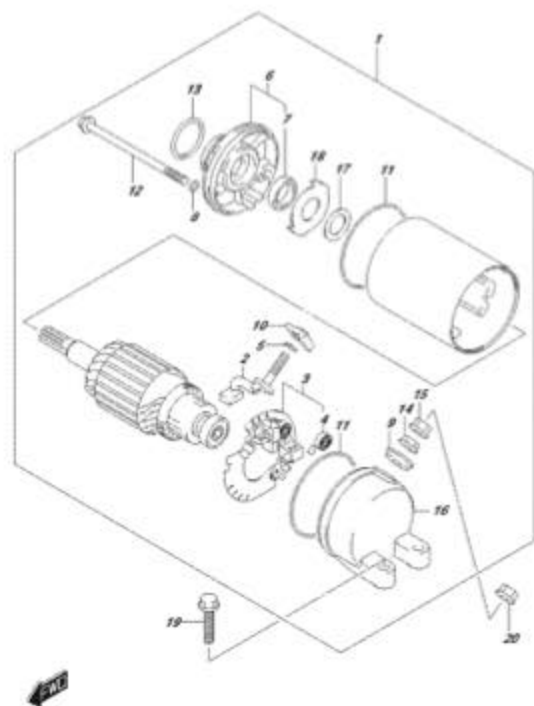


FIG.301A (1-D-3) STARTING MOTOR

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	31100-04K00	MOTOR ASSY, STARTING	1	
2	31130-38300	BRUSH (+)	1	
3	31132-27A01	HOLDING ASSY, BRUSH	1	
4	31135-65010	SPRING	2	
5	31143-38300	O RING	1	
6	31150-04K00	HOUSING ASSY, STARTING	1	
7	31153-49210	SEAL, OIL	1	
8	31156-38300	O RING	2	
9	31172-38300	BUSHING	1	
10	31171-38300	BUSHING	1	
11	31264-44110	O RING	2	
12	31281-88C00	BOLT	2	
13	09280-24003	O RING (D3/D24.5)	1	
14	08310-00067	NUT	1	
15	08361-3506A	NUT	1	
16	31170-04K00	FRAME, STARTER END	1	
17	31361-38300	SHIM	2	
18	31361-43400	WASHER	1	
19	01547-0625A	BOLT	2	
20	08361-3506A	NUT	1	

FIG.304A

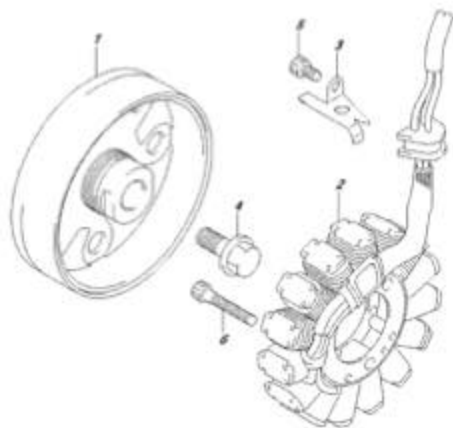


FIG.304A (1-D-4) GENERATOR

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	31402-41G10	ROTOR ASSY	1	
2	31401-41G20	STATOR ASSY	1	
3	32371-33E00	CLAMP, GENERATOR LEAD WIRE	1	
4	09103-12005	BOLT (12X23)	1	
5	07130-0612A	BOLT	1	
6	09106-06122	BOLT (BX30)	3	



FIG.306A



FIG.306A (1-D-5) SIGNAL GENERATOR

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	33110-35F00	STARTER SIGNAL GENERATOR	1	
2	33115-33E00	CLAMP, SIG GENERATOR	1	
3	02112-0510A	SCREW	2	
4	02112-0510A	SCREW	1	

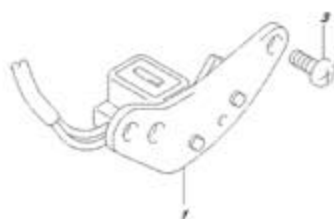


FIG.310A

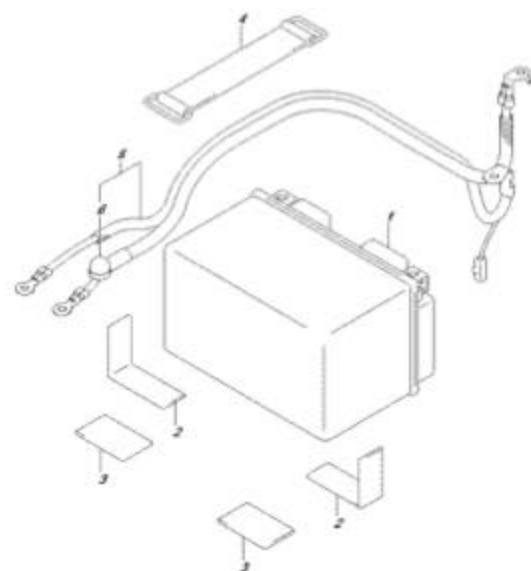


FIG.310A (1-D-6) BATTERY

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	33610-14Q11	BATTERY ASSY (FT12A-BS, 12V,10AH)	1	
2	33652-38A10	PROTECTOR, BATTERY	2	
3	51553-15D40	CUSHION (50X42X2.0)	2	
4	09462-00046	BAND	1	
5	33810-04K00	WIRE, STARTER MOTOR LEAD	1	
6	31861-04K00	CAP, STARTER MOTOR TERMINAL	1	

FIG.312A


GSX-31000FA6_E08
ELECTRICAL

FIG.312A (1-D-7) ELECTRICAL

REF NO	PART NO	DESCRIPTION	QTY	REMARKS
1	31900-38G10	RELAY ASSY, STARTING MOTOR	1	
2	09481-30501	FUSE (30A)	2	
3	31851-38G00	COVER	1	
4	09128-06013	SCREW (5X3)	2	
5	32800-26J00	RECTIFIER ASSY	1	
6	09180-06331	SPACER (8.2X8.4X10.8)	2	
7	09320-06501	CUSHION	2	
8	02162-0635A	BOLT	2	
9	08316-1006A	NUT	2	
10	47431-04K00	BRACKET, ELECTRIC PARTS	1	
11	01550-0612A	BOLT	2	
12	33410-47H00	COIL ASSY, IGNITION	4	
13	32920-04K60	CONTROL UNIT, FI	1	
14	33652-38A10	CUSHION, FI CONTROL UNIT	1	
15	33652-34000	PROTECTOR (30X80X2)	1	
16	09280-85001	O RING (D3.5J D 85)	1	
17	33960-06G10	SENSOR ASSY, FUEL CUT	1	
18	33970-48G00	ACTUATOR, EXHAUST CONTROL	1	
19	47420-04K00	BRACKET, ACTUATOR	1	
20	09180-06345	SPACER (8.2X14.5X26)	2	
21	01550-0650B	BOLT	1	
22	01550-0655A	BOLT	1	
23	09407-14413	CLAMP	1	
24	01547-0612A	BOLT	2	
25	45414-38G00	TAPE	1	

GSX-31000FA6_E08

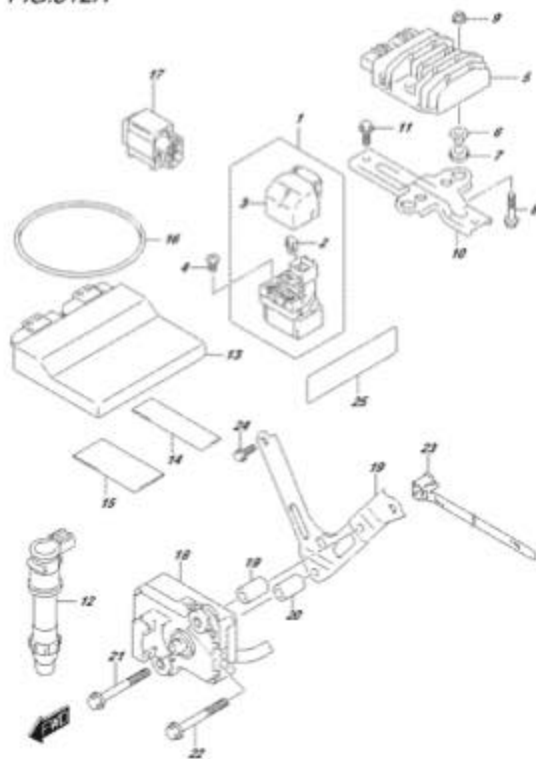FIG.330A


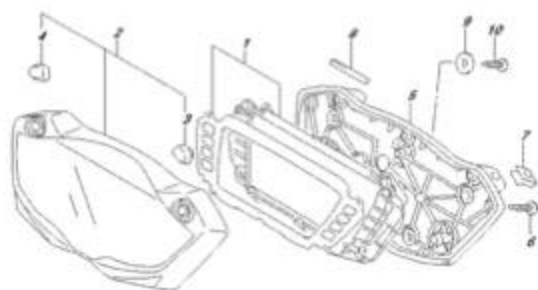


FIG.330A (1-D-8) SPEEDOMETER

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	34120-04K00	SPEEDOMETER	1	
2	34150-04K00	UPPER CASE ASSY	1	
3	34124-04K00	RUBBER, SWITCH RH	1	
4	34124-04K10	RUBBER, SWITCH LH	1	
5	34111-04K00	LOWER CASE ASSY	1	
6	34183-10C00	SCREW	8	
7	09148-05062	NUT	2	
8	34188-04K00	CUSHION, SPEEDOMETER	2	
9	09160-04026	WASHER (4.5X16X1.2)	3	
10	03541-0418A	SCREW	3	

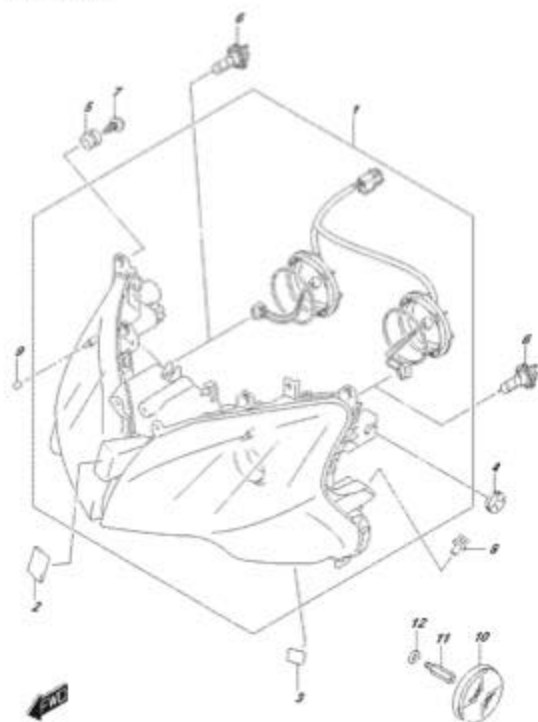FIG.333A




Q30F-31000FAL6_FOR_333A
HEADLAMP

FIG.333A (1-D-9) HEADLAMP

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	35100-04KA0-999	HEADLAMP ASSY	1	
2	44572-02F01	FASTENER	1	
3	44572-37H00	FASTENER, COWLING	2	
4	09320-08028	CUSHION	2	
5	09320-09039	CUSHION	4	
6	09471-12188	BULB (12V, 55W)	2	
7	09136-05062	SCREW (5X15)	6	
8	94479-35F00	CUP, HEAD LAMP	2	
9	44294-43H00	CUSHION, HEAD LAMP COVER	3	
10	35950-14A11	REFLEX REFLECTOR ASSY, FR SIDE	2	
11	09119-06109	BOLT	2	
12	09160-08043	WASHER (8.5X18X1)	2	

Q3X-31000FAL6_E08

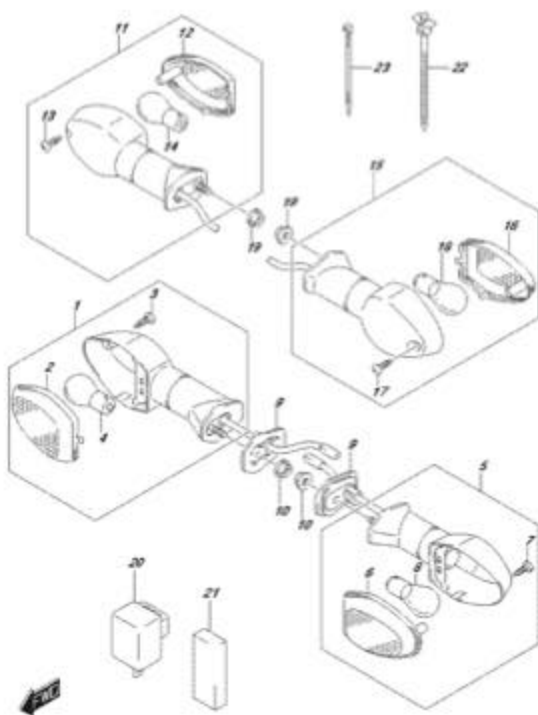FIG.334A



Q3X-31000FAL6_F08_004
TURN SIGNAL LAMP

FIG.334A (1-D-10) TURN SIGNAL LAMP

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	35601-08JA0	LAMP ASSY, FRONT TURN SIGNAL RH	1	
2	35612-08JA0	LENS, RH	1	
3	03211-0414B	SCREW	1	
4	09471-12186	BULB (12V/21W)	1	
5	35602-08JA0	LAMP ASSY, FRONT TURN SIGNAL LH	1	
6	35632-08JA0	LENS, LH	1	
7	03211-0414B	SCREW	1	
8	09471-12186	BULB (12V/21W)	1	
9	35629-18Q00	PLATE, FRONT TURN SIGNAL	2	
10	08316-1005A	NUT	2	
11	35603-08JC0	LAMP ASSY, REAR TURN SIGNAL RH	1	
12	35632-08JA0	LENS, RH	1	
13	03211-0414B	SCREW	1	
14	09471-12186	BULB (12V/21W)	1	
15	35604-08JC0	LAMP ASSY, REAR TURN SIGNAL LH	1	
16	35612-08JA0	LENS, LH	1	
17	03211-0414B	SCREW	1	
18	09471-12186	BULB (12V/21W)	1	
19	08316-1005A	NUT	2	
20	38610-06F10	RELAY ASSY, TURN SIGNAL LAMP	1	
21	36652-04K00	CUSHION	1	
22	09407-14408	CLAMP (L-126)	1	
23	09407-10404	CLAMP (L-106)	1	

Q3X-31000FAL6_F08

FIG.339A


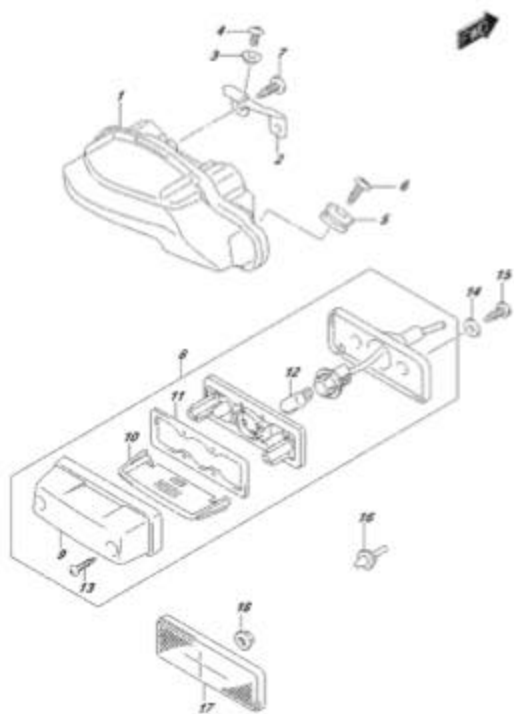


FIG.339A (1-D-11) REAR COMBINATION LAMP

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	35710-04K00	LAMP ASSY, REAR COMBINATION	1	
2	35726-04K00	BRACKET, REAR COMBINATION LAMP	1	
3	09169-06071	WASHER	1	
4	02142-0512A	SCREW	1	
5	09320-10054	CUSHION	2	
6	03541-0516B	SCREW	2	
7	03541-0516A	SCREW	2	
8	35810-16G20	LAMP ASSY, LICENSE	1	
9	35917-16Q00	COVER	1	
10	35912-16Q01	LENS	1	
11	35813-16G20	GASKET	1	
12	09471-12216	BULB (12V5W)	1	
13	03211-04163	SCREW	2	
14	09169-05501	WASHER (3.5X20X1.2)	2	
15	03541-0516A	SCREW	2	
16	09321-06032	CUSHION	1	
17	35970-07F01	REFLECTOR ASSY, REAR	1	
18	08316-1005A	NUT	1	

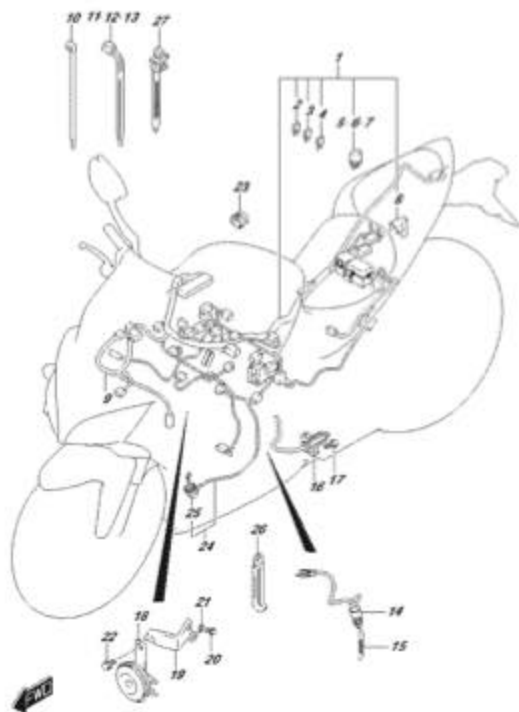FIG.350A



Q3X-31000FAL6_E08
WIRING HARNESS

FIG.350A (1-D-12) WIRING HARNESS

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	36610-04K00	HARNESS, WIRING	1	
2	09481-10504	FUSE (10A)	5	
3	09481-15504	FUSE (15A)	2	
4	09481-20504	FUSE (20A)	1	
5	38860-76F01	RELAY ASSY	1	FOR FUEL PUMP
6	38860-76F01	RELAY ASSY	1	FOR FAN MOTOR
7	38860-76F01	RELAY ASSY	1	FOR SIDE STAND
8	33624-04K00	CAP, BATTERY PLUS TERMINAL	1	
9	36620-04K00	HARNESS, WIRING NO.2	1	
10	09407-14407	CLAMP (L.145)	3	
11	09407-18402	CLAMP (L.165)	3	
12	09407-19401	CLAMP (L.180)	1	
13	09407-14403	CLAMP (L.125)	1	
14	37740-31D00	SWITCH ASSY, STOP LAMP	1	
15	09443-06054	SPRING	1	
16	37840-35F00	SWITCH ASSY, SIDE STAND	1	
17	01550-0620A	BOLT	1	
18	38500-48G20	HORN ASSY	1	
19	38590-04K10	PLATE, HORN	1	
20	01500-0616A	BOLT	2	
21	09160-06109	WASHER	2	
22	07130-0812A	BOLT	1	
	09160-08127	WASHER	1	
23	36654-06J20	CAP. TS	1	
24	36851-44G01	WIRE, OIL PRESSURE SWITCH LEAD	1	
25	36618-31J00	CAP, OIL PRESSURE SWITCH	1	
26	09404-06429	CLAMP (L.45)	3	
27	09407-11402	CLAMP (L.55)	2	

Q3X-31000FAL6_E08

FIG.352A


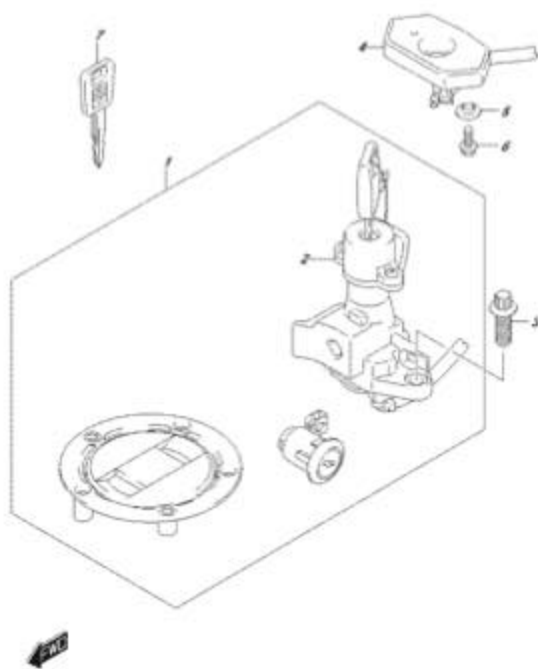


FIG.352A (1-D-13) LOCK SET

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	37101-04810	LOCK SET	1	
2	37100-04K00	LOCK ASSY, STEERING	1	
3	09119-08100	BOLT (RX20)	2	
4	37180-04K00	ANTENNA ASSY, IMMOBILIZER	1	
5	09169-05024	WASHER	2	
6	01547-0512A	BOLT	2	
7	37146-11J00	KEY, BLANK	1	OPT

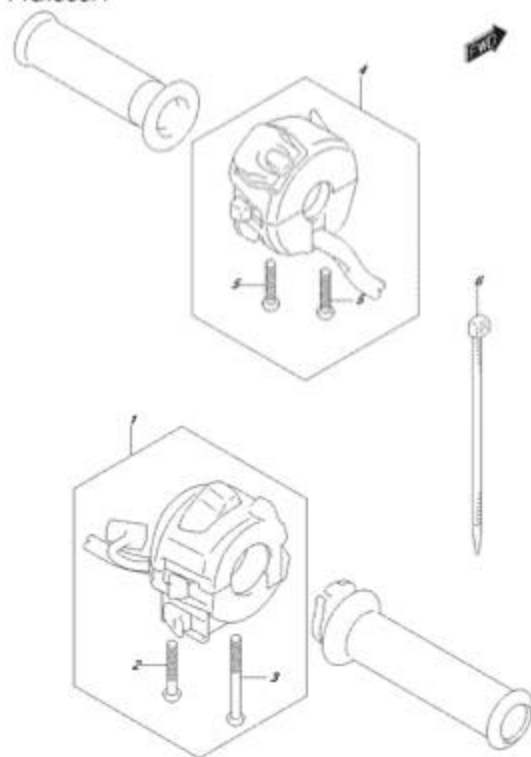FIG.355A



Q35X-31000FAL6_E08
HANDLE SWITCH

FIG.355A (1-D-14) HANDLE SWITCH

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	37200-04K30	SWITCH ASSY, HANDLE RH	1	
2	02112-0530A	SCREW	1	
3	02112-0550B	SCREW	1	
4	37400-04KB0	SWITCH ASSY, HANDLE LH	1	
5	02112-0525B	SCREW	2	
6	09407-14407	CLAMP (L145)	2	

Q3X-31000FAL6_E08

FIG.401A


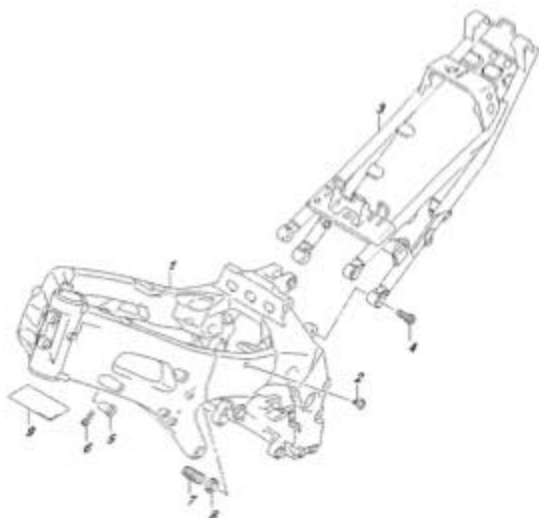


FIG.401A (1-D-15) FRAME

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	41100-04K00-YAP	FRAME (BLACK)	1	
2	43585-01H01	PLUG, TANK RAIL	2	
3	41200-04K00-YAP	RAIL, SEAT (BLACK)	1	
4	07120-1030B	BOLT	4	
5	41911-40F01	SPACER	1	
6	09106-08185	BOLT (RX32)	1	
7	41921-16G00	BOLT, CRANKCASE ADJUST	2	
8	41922-33E20	NUT	2	
9	41139-21H10	CUSHION, FRAME HEAD	1	

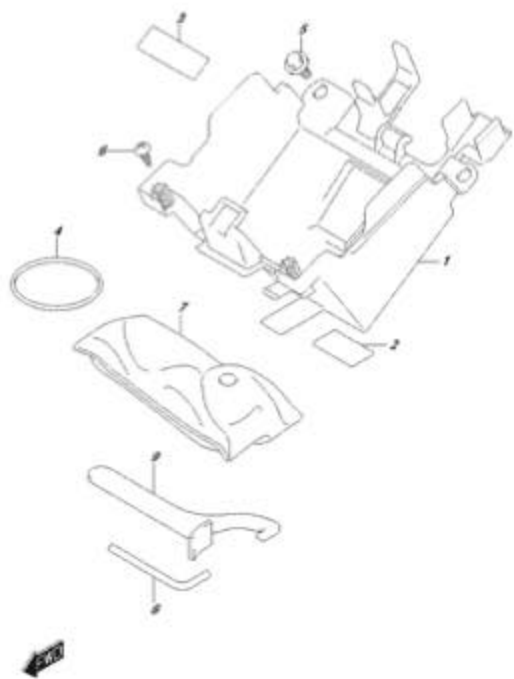FIG.406A



Q3X-31000FAL6_E08
HOLDER

FIG.406A (1-E-2) HOLDER

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	47414-04K00	HOLDER, ELECTRIC PARTS	1	
2	33652-13C00	PROTECTOR, BATTERY (36X40X1.0)	2	
3	92215-39H00	CUSHION, BATTERY BOX	1	
4	09280-57003	O RING (D3.5/D56.5)	1	
5	09111-06072	BOLT (8X17.8)	2	
6	03541-0516A	SCREW	2	
7	09900-21056	TOOL ASSY	1	
8	09816-00059	HEXAGON SPANNER, 5	1	
9	09822-00005	CLAMP, WRENCH	1	

Q3X-31000FAL6_E08

FIG.407A


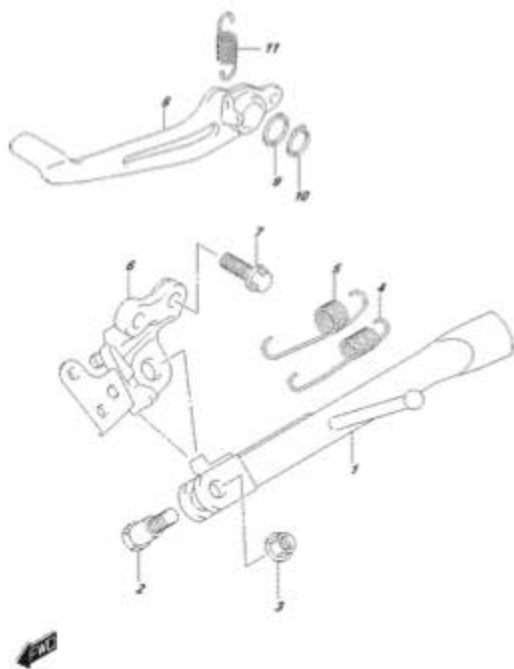


FIG.407A (1-E-3) STAND

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	42310-04K00	STAND, PROP	1	
2	09111-10059	BOLT (10X21)	1	
3	08319-3110A	NUT	1	
4	09443-14058	SPRING	1	INNER
5	09443-19011	SPRING	1	OUTER
6	42330-04K00	BRACKET, PROP STAND	1	
7	09103-10366	BOLT (10X30)	2	
8	43110-04K00	PEDAL, BRAKE	1	
9	09160-18022	WASHER (18X24X1)	1	
10	08331-3118A	CLIP	1	
11	09443-13032	SPRING	1	

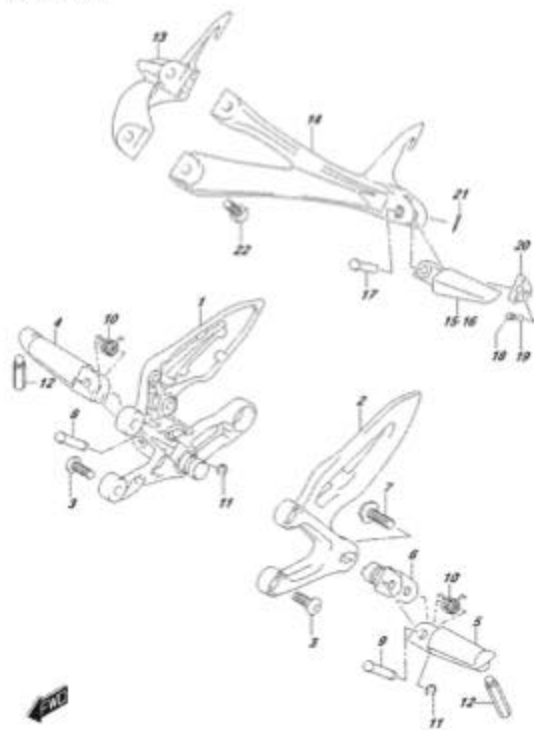FIG.415A




Q3X-31000FAL6_E08
FOOTREST

FIG.415A (1-E-4) FOOTREST

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	43510-04K00	BRACKET, FRONT FOOTREST RH	1	
2	43521-04K00	BRACKET, FRONT FOOTREST LH	1	
3	09106-08181	BOLT (RX23)	4	
4	43516-35F10	BAR, FOOTREST RH	1	
5	43526-35F10	BAR, FOOTREST LH	1	
6	43530-16G20	HOLDER, FOOTREST LH	1	
7	09106-10064	BOLT (16X28)	1	LH
8	09208-08019	PIN	1	RH
9	09208-08018	PIN	1	LH
10	09448-14037	SPRING	2	
11	08332-1106A	E RING	2	
12	43576-48B30	BOLT, BANK SENSOR	2	
13	43611-04K00	BRACKET, PILLION FOOTREST RH	1	
14	43621-04K00	BRACKET, PILLION FOOTREST LH	1	
15	43611-37H00	BAR, PILLION FOOTREST RH	1	
16	43621-37H00	BAR, PILLION FOOTREST LH	1	
17	09200-08002	PIN	2	
18	09440-05003	SPRING	2	
19	06111-07004	BALL	2	
20	43816-01H20	PLATE	2	
21	04111-2015A	COTTER PIN	2	
22	09106-08186	BOLT (RX23)	4	

Q3X-31000FAL6_E08

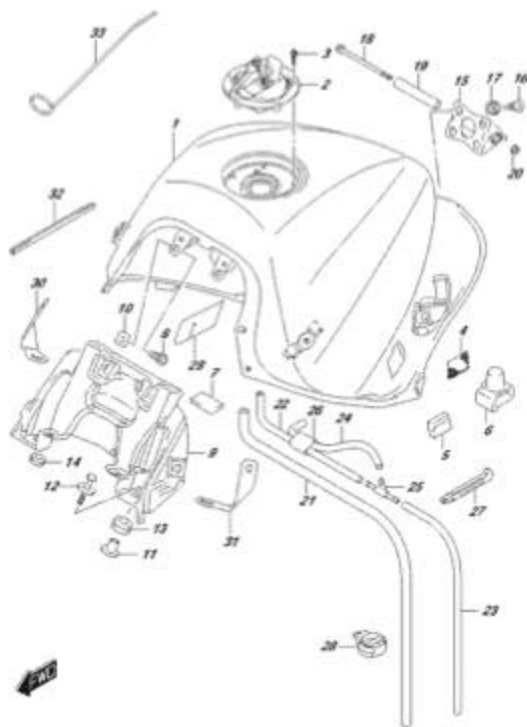FIG. 420A




Q3X-31000FAL6_E08
FUEL TANK

FIG. 420A (1-E-5) FUEL TANK

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1-1	44100-04K10-PGZ	TANK ASSY, FUEL (GRAY)	1	FOR PGZ
1-2	44100-04K10-YBF	TANK ASSY, FUEL (BLUE)	1	FOR YBF
1-3	44100-04K10-YVB	TANK ASSY, FUEL (BLACK)	1	FOR AV4
2	44200-17810	CAP SET, FUEL TANK	1	
3	44244-11J00	BOLT	3	
4	44572-13G00	FASTENER	4	
5	44541-41C00	CUSHION, SIDE	2	
6	44542-04K00	CUSHION, REAR	2	
7	33652-21G10	CUSHION, FUEL TANK INNER	1	
8	44543-04K00	SCREW, BRACKET FRONT	4	
9	44521-04K00	BRACKET, FUEL TANK FRONT	1	
10	44523-47H00	NUT	4	
11	44512-04K00	SPACER, FUEL TANK FRONT	2	
12	09116-06172	BOLT (EX30)	2	
13	09320-10050	CUSHION	2	
14	09320-06504	CUSHION	2	
15	44530-04K00	BRACKET, FUEL TANK REAR	1	
16	09139-06203	SCREW (EX24)	4	
17	09320-06089	CUSHION	4	
18	09103-06060	BOLT (EX100)	1	
19	44561-18G00	SPACER, FUEL TANK REAR	1	
20	09159-06076	NUT	1	

Q3X-31000FAL6_E08

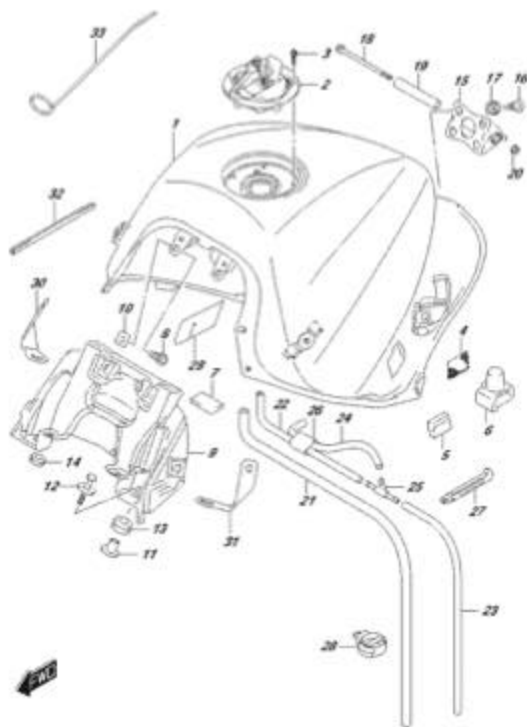FIG.420A



Q30F31000FAL6_E08_420A
FUEL TANK

FIG.420A (1-E-6) FUEL TANK

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
21	44423-04K00	HOSE, DRAIN	1	
22	44424-04K00	HOSE, BREATHER NO.1	1	
23	09352-50823-600	HOSE (5X8.2X893)	1	L:600->530
24	44424-15H10	HOSE, BREATHER NO.3	1	
25	09367-06007	3 WAY	1	
26	09352-12163-600	HOSE (12X16X893)	1	L:600->10
27	09404-06433	CLAMP (L:86)	1	
28	09403-20307	CLAMP	1	
29	44283-06J00	PROTECTOR, FUEL TANK	1	
30	44561-04K00	BRACKET, FUEL TANK FRONT, RH	1	
31	44571-04K00	BRACKET, FUEL TANK FRONT, LH	1	
32	44552-24B00	MOLDING, FUEL TANK, REAR	1	
33	44560-23H00	STAY, FUEL TANK	1	OPT

COLOR : AV4=YVB(BLACK),YYG(RED)

Q3X-31000FAL6_E08

FIG.422A


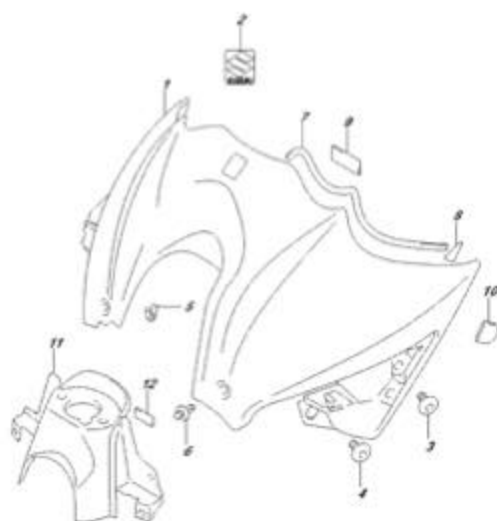


FIG.422A (1-E-7) FUEL TANK FRONT COVER

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1-1	44291-04K00-PGZ	COVER, TANK FRONT (GRAY)	1	FOR PGZ
1-2	44291-04K00-YBF	COVER, TANK FRONT (BLUE)	1	FOR YBF
1-3	44291-04K00-YYG	COVER, TANK FRONT (RED)	1	FOR AV4
2	68281-47HA0	EMBLEM, "S"	1	
3	09106-06117	BOLT (8X12)	2	
4	09139-06200	SCREW (8X12)	2	
5	09409-06326	CLIP	2	
6	09409-06314-SPK	CLIP (BLACK)	2	
7	44292-04K00	CUSHION, TANK COVER UPPER NO.1	2	
8	44293-04K00	CUSHION, TANK COVER UPPER NO.2	2	
9	44294-04K00	CUSHION, TANK COVER UPPER NO.3	4	
10	44542-08J00	CUSHION, FUEL TANK COVER SIDE	2	
11	44271-04K00	COVER, FUEL TANK LOWER	1	
12	44894-24A00	CUSHION	2	

COLOR : AV4=YVB(BLACK),YYG(RED)

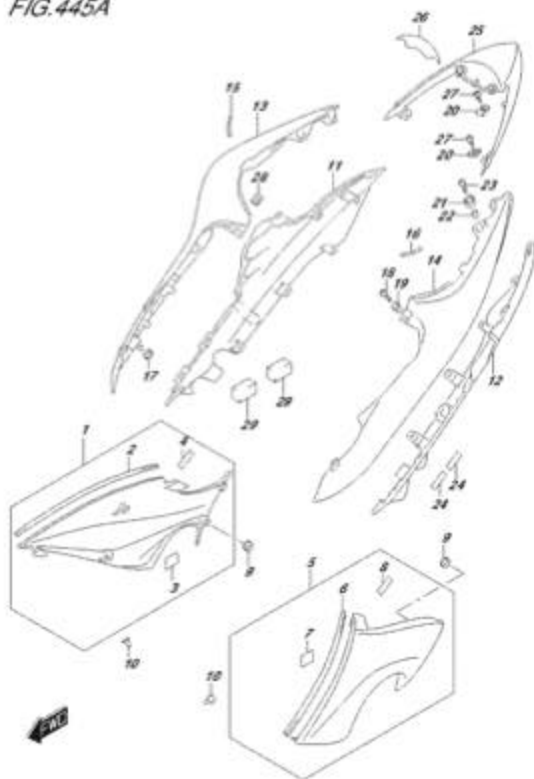FIG.445A




Q3X-31000FAL6_F08
FRAME COVER

FIG.445A (1-E-8) FRAME COVER (PGZ,AV4)

REF NO	PART NO	DESCRIPTION	QTY	REMARKS
1	47110-04K00	COVER, FRAME FRONT RH	1	
2	44277-37H00	CUSHION	1	
3	44572-13G00	FASTENER	2	
4	94476-38C00	CUSHION	1	
5	47210-04K00	COVER, FRAME FRONT LH	1	
6	44277-37H00	CUSHION	1	
7	44572-13G00	FASTENER	2	
8	94476-38C00	CUSHION	1	
9	09320-06504	CUSHION	2	
10	09409-10314	CLIP	2	
11	47131-04K00	COVER, FRAME REAR LOWER RH	1	
12	47231-04K00	COVER, FRAME REAR LOWER LH	1	
13-1	47121-04K00-PGZ	COVER, FRAME REAR UPPER RH (GRAY)	1	FOR PGZ
13-2	47121-04K00-YVB	COVER, FRAME REAR UPPER RH (BLACK)	1	FOR AV4
14-1	47221-04K00-PGZ	COVER, FRAME REAR UPPER LH (GRAY)	1	FOR PGZ
14-2	47221-04K00-YVB	COVER, FRAME REAR UPPER LH (BLACK)	1	FOR AV4
15	47313-04K00	TAPE, FRAME COVER, RH	1	
16	47314-04K00	TAPE, FRAME COVER, LH	1	
17	09320-08028	CUSHION	2	
18	02142-1520A	SCREW	2	
19	09159-05019	NUT	2	
20	09148-05047	NUT	4	
21	47312-37H00	CUSHION, FRAME COVER RR	2	
22	09180-06283	SPACER (8.5X10X7)	2	
23	09136-06105	SCREW (EX20)	2	
24	94443-06C00	TAPE (EX25X0.13)	10	

Q3X-31000FAL6_F08

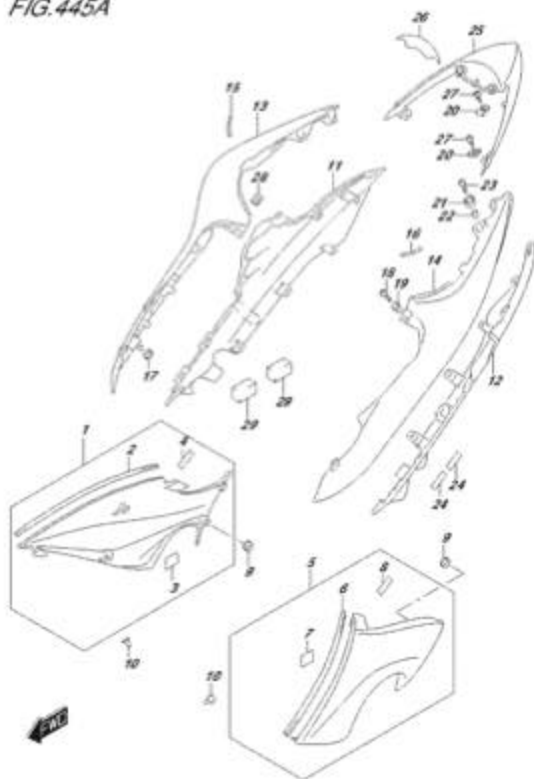FIG.445A



Q3X-31000FAL6_E08
FRAME COVER


FIG.445A (1-E-9) FRAME COVER (PGZ,AV4)

REF NO	PART NO	DESCRIPTION	QTY	REMARKS
25-1	47311-04K00-YKV	COVER, FRAME CENTER (BLACK)	1	FOR PGZ
25-2	47311-04K00-YYG	COVER, FRAME CENTER (RED)	1	FOR AV4
26	47312-04K00	TAPE, FRAME COVER CTR	1	
27	03541-0512B	SCREW	6	
28	09148-05047	NUT	2	
29	17798-39G00	CUSHION	4	CUT AS REQUIRED

COLOR : AV4=YYB(BLACK),YYG(RED)

Q3X-31000FAL6_E08

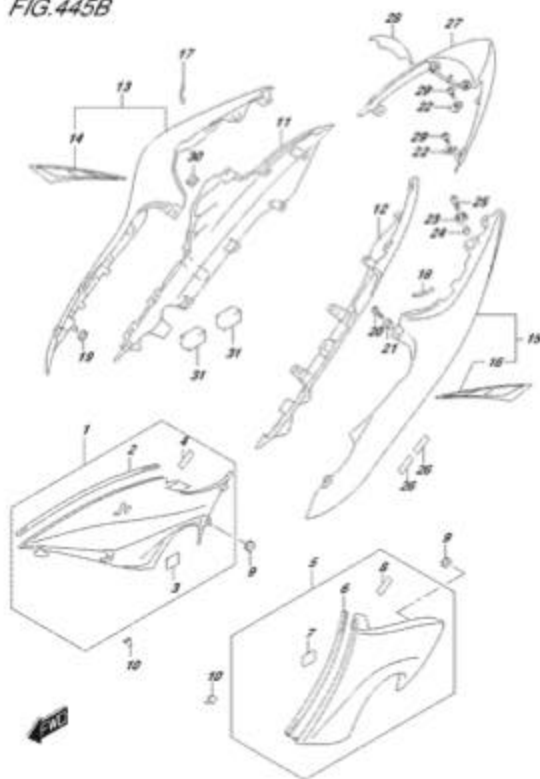FIG.445B



Q3X-31000FAL6_E08
FRAME COVER

FIG.445B (1-E-10) FRAME COVER (YSF)

REF NO	PART NO	DESCRIPTION	QTY	REMARKS
1	47110-04K00	COVER, FRAME FRONT RH	1	
2	44277-37H00	CUSHION	1	
3	44572-13G00	FASTENER	2	
4	94476-38C00	CUSHION	1	
5	47210-04K00	COVER, FRAME FRONT LH	1	
6	44277-37H00	CUSHION	1	
7	44572-13G00	FASTENER	2	
8	94476-38C00	CUSHION	1	
9	09320-06504	CUSHION	2	
10	09409-10314	CLIP	2	
11	47131-04K00	COVER, FRAME REAR LOWER RH	1	
12	47231-04K00	COVER, FRAME REAR LOWER LH	1	
13	47120-04K00-YSF	COVER, FRAME REAR UPPER RH	1	
14	68135-04K10-A3F	TAPE, FRAME COVER RH	1	
15	47220-04K00-YSF	COVER, FRAME REAR UPPER LH	1	
16	68145-04K10-A3F	TAPE, FRAME COVER LH	1	
17	47313-04K00	TAPE, FRAME COVER, RH	1	
18	47314-04K00	TAPE, FRAME COVER, LH	1	
19	09320-08026	CUSHION	2	
20	02142-1520A	SCREW	2	
21	09159-05019	NUT	2	
22	09148-05047	NUT	4	
23	47312-37H00	CUSHION, FRAME COVER RR	2	
24	09180-06283	SPACER (8.5X10X7)	2	
25	09136-06105	SCREW (8X20)	2	
26	94443-09G00	TAPE (8X25X0.13)	8	
27	47311-04K00-YKV	COVER, FRAME CENTER (BLACK)	1	
28	47312-04K00	TAPE, FRAME COVER CTR	1	
29	03541-0512B	SCREW	6	
30	09148-05047	NUT	2	
31	17798-39G00	CUSHION	4	CUT AS REQUIRED

Q3X-31000FAL6_E08

FIG.460A


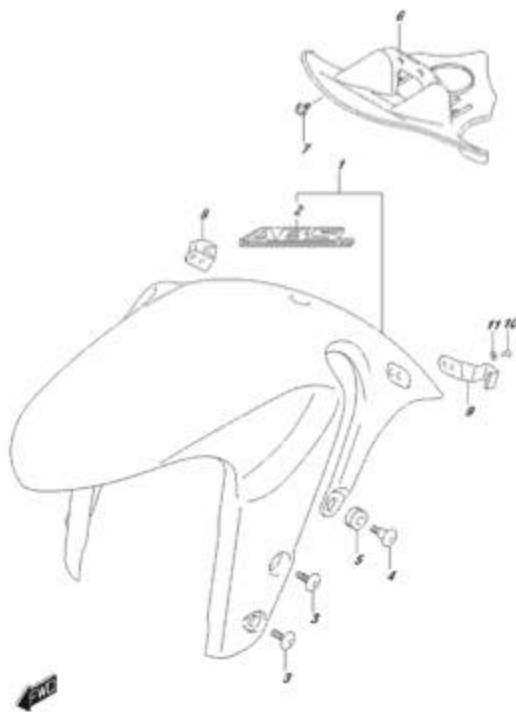


FIG.460A (1-E-11) FRONT FENDER

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1-1	53100-04K00-YSF	FENDER ASSY, FRONT (BLUE)	1	FOR YSF
1-2	53100-04K00-YVB	FENDER ASSY, FRONT (BLACK)	1	FOR AV4
1-3	53100-04K10-PGZ	FENDER ASSY, FRONT (GRAY)	1	FOR PGZ
2-1	68151-38G00-1ZY	EMBLEM, "ABS" (GRAY)	1	FOR YSF, YVB
2-2	68151-38G10-A79	EMBLEM, "ABS" (GRAY)	1	FOR PGZ
3	09139-06169	SCREW (EX16)	2	FRONT
4	09139-06190	BOLT (EX20)	2	REAR
5	09320-09016	CUSHION	2	REAR
6	94458-04K00	COVER, LOWER BRACKET	1	
7	09111-06107	BOLT (EX12)	2	
8	53117-04K00	CLAMP, BRAKE HOSE RH	1	
9	53118-04K00	CLAMP, BRAKE HOSE LH	1	
10	09229-04036	RIVET	4	
11	08322-0104B	WASHER	4	

COLOR : AV4=YVB(BLACK),YYG(RED)

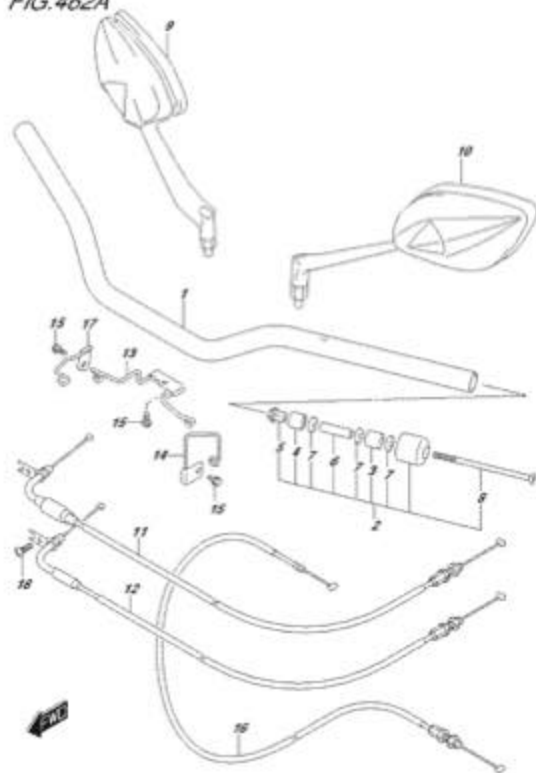FIG.462A




Q3X-31000FAL6_F08
HANDLEBAR

FIG.462A (1-E-12) HANDLEBAR

REF NO	PART NO	DESCRIPTION	QTY	REMARKS
1	56111-04K00	HANDLEBAR	1	
2	56200-03860	BALANCER SET, HANDLEBAR	2	
3	56272-10G00	EXPANDER, HANDLE BALANCER	2	
4	56272-42F00	EXPANDER, HANDLE BALANCER	2	
5	56273-10G10	NUT, HANDLE BALANCER	2	
6	09180-06356	SPACER (6.5X9X34)	2	
7	09160-06131	WASHER (6.5X16X4)	6	
8	09127-06016	SCREW (5X11)	2	
9	56500-04K00	MIRROR ASSY, REAR VIEW RH	1	
10	56500-04K00	MIRROR ASSY, REAR VIEW LH	1	
11	58300-04K00	CABLE ASSY, THROTTLE NO.1	1	
12	58300-04K10	CABLE ASSY, THROTTLE NO.2	1	
13	58620-04K10	GUIDE, CABLE NO.1	1	
14	58630-04K00	GUIDE, CABLE NO.2	1	
15	01547-0612B	BOLT	3	
16	58200-04K00	CABLE ASSY, CLUTCH	1	
17	58640-04K00	GUIDE, CLUTCH CABLE	1	
18	02142-0510B	SCREW	1	

Q3X-31000FAL6_F08

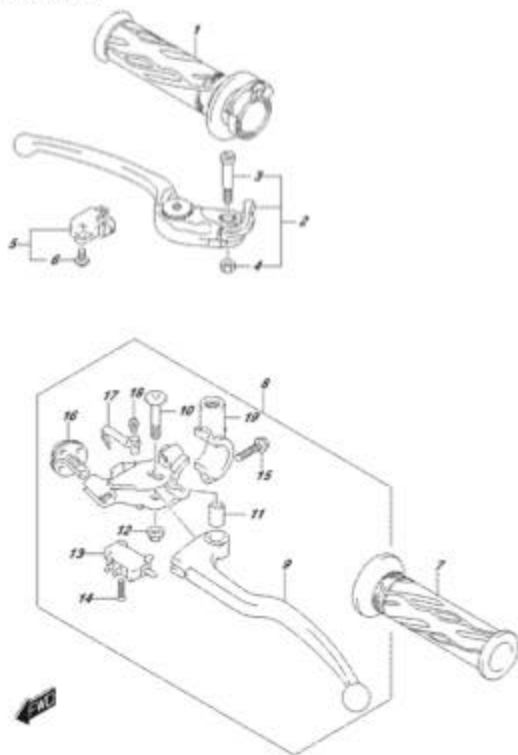FIG.467A




Q3X-31000FAL6_E08
HANDLE LEVER

FIG.467A (1-E-13) HANDLE LEVER

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	57110-21H02	GRIP, THROTTLE	1	
2	57300-29G30	LEVER ASSY, BLAKE	1	
3	57431-29G00	BOLT, PIVOT	1	
4	08319-2106A	NUT	1	
5	57460-14J01	SWITCH ASSY, FRONT BRAKE	1	
6	57465-17C00	SCREW	1	
7	57211-21H01	GRIP, LH	1	
8	57500-41G30	LEVER ASSY, CLUTCH	1	
9	57621-41G00	LEVER, CLUTCH	1	
10	57431-41G00	BOLT	1	
11	57532-41G00	COLLAR	1	
12	08319-3106A	NUT	1	
13	57560-41G20	SWITCH ASSY, CLUTCH	1	
14	57562-41G21	SCREW	1	
15	01547-0625B	BOLT	2	
16	57641-33E21	NUT, CABLE ADJUSTER	1	
17	57644-33E00	SPRING	1	
18	57642-33E00	SCREW, SPRING	1	
19	57512-41G00	HOLDER, CLUTCH LEVER	1	

Q3X-31000FAL6_E08

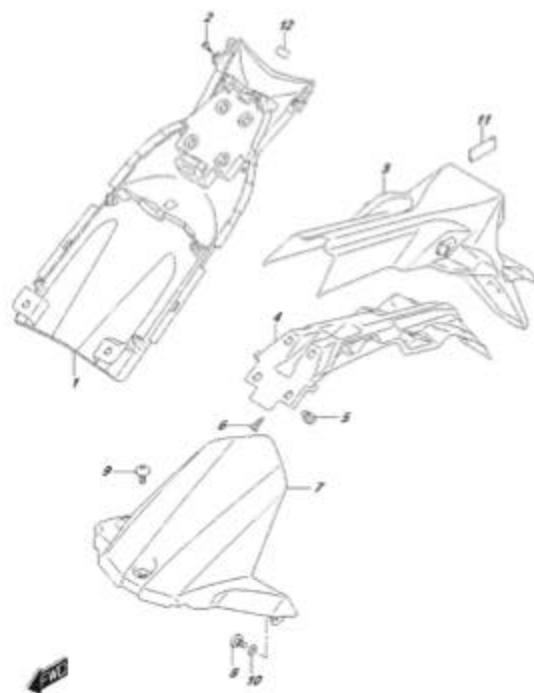FIG.474A




Q3X-31000FAL6_E08_474A
REAR FENDER

FIG.474A (1-E-14) REAR FENDER

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	63111-04K00	FENDER, REAR FRONT	1	
2	03541-0412A	SCREW	6	
3	63113-04K00	FENDER, REAR REAR OUTER	1	
4	63116-04K00	FENDER, REAR REAR INNER	1	
5	01550-0612B	BOLT	4	
6	03541-0516A	SCREW	5	
7	63114-04K00	FENDER, REAR LOWER	1	
8	09139-06156	SCREW (EX16)	2	
9	09139-06137	SCREW (EX16)	1	
10	08322-0106B	WASHER	2	
11	44894-24A00	CUSHION, RR COMBINATION LAMP	2	
12	44543-10G00	CUSHION	1	CUT AS REQUIRED

Q3X-31000FAL6_E08

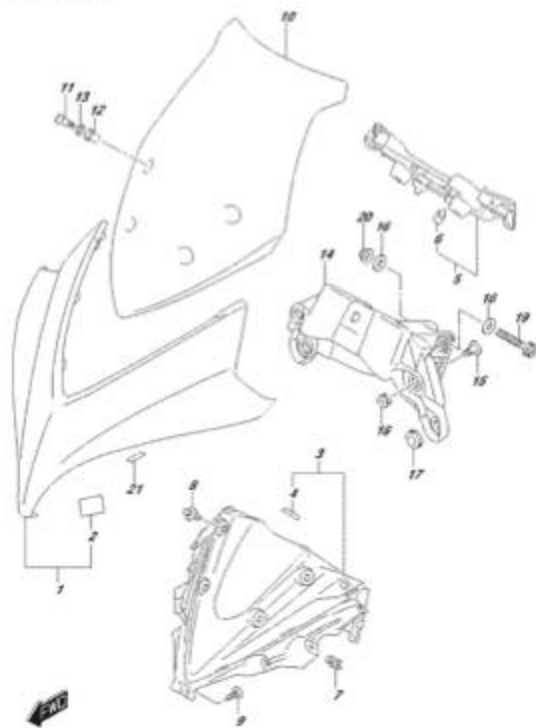FIG.481A



Q3X-31000FAL6_F08_481A
COWLING BODY


FIG.481A (1-E-15) COWLING BODY

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1-1	94410-04K00-PGZ	COWLING, BODY (GRAY)	1	FOR PGZ
1-2	94410-04K00-YBF	COWLING, BODY (BLUE)	1	FOR YBF
1-3	94410-04K00-YYG	COWLING, BODY (RED)	1	FOR AV4
2	44572-02F01	FASTENER	1	
3	94640-04K00	PANEL, METER FRONT	1	
4	94476-38C00	CUSHION, UNDER COWLING NO.1	1	
5	94650-04K00	PANEL, METER REAR	1	
6	09321-06013	CUSHION	1	
7	09148-06020	NUT	2	
8	09409-06314-5PK	CLIP (BLACK)	2	
9	03541-0516A	SCREW	5	
10	94611-04K00	WINDSCREEN	1	
11	09139-05032	SCREW (5X18)	4	
12	09159-05019	NUT	4	
13	09160-05048	WASHER (5.5X14X1.2)	4	
14	94510-04K00	BRACE, COWLING	1	
15	09139-06190	BOLT (EX20)	2	
16	09160-06124	WASHER (8.5X20X1.8)	4	
17	09320-06026	CUSHION	4	
18	09320-09501	CUSHION	2	
19	07120-0855A	BOLT	2	
20	08313-2008A	NUT	2	
21	94443-06G00	TAPE (EX25X0.13)	6	

COLOR : AV4=YYB(BLACK),YYG(RED)

Q3X-31000FAL6_F08

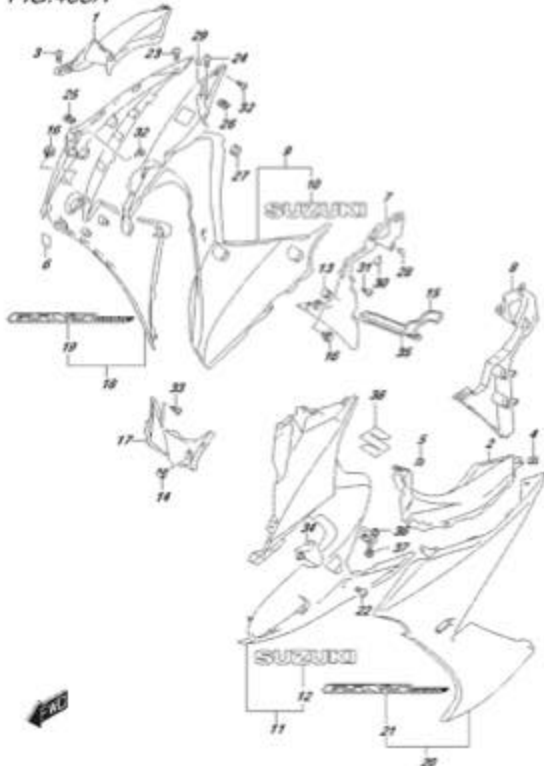FIG.485A




GSX-S1000FAL6_F08_485A
SIDE COWLING

FIG.485A (1-F-2) SIDE COWLING (PGZ,AV4)

REF NO	PART NO	DESCRIPTION	QTY	REMARKS
1	94631-04K00	PANEL, METER RH	1	
2	94632-04K00	PANEL, METER LH	1	
3	09139-05074	BOLT (5X13)	2	
4	09148-05052	NUT	2	
5	09409-06314-5PK	CLIP (BLACK)	2	
6	44572-37H00	FASTENER, COWLING	2	
7	94461-04K00	COWLING, UNDER INNER RH	1	
8	94462-04K00	COWLING, UNDER INNER LH	1	
9-1	94470-04KA0-YKV	COWLING, UNDER RH (BLACK)	1	FOR PGZ
9-2	94470-04KA0-YYG	COWLING, UNDER RH (RED)	1	FOR AV4
10	68181-04KA0-YES	EMBLEM, "SUZUKI" (SILVER)	1	
11-1	94480-04KA0-YKV	COWLING, UNDER LH (BLACK)	1	FOR PGZ
11-2	94480-04KA0-YYG	COWLING, UNDER LH (RED)	1	FOR AV4
12	68181-04KA0-YES	EMBLEM, "SUZUKI" (SILVER)	1	
13	94479-15H00	CUSHION, UNDER LOWER	4	
14	94479-35F00	CLIP, UNDER CENTER	1	
15	94479-35F00	CLIP, UNDER INNER	2	
16	94479-35F00	CLIP, SIDE FRONT	2	
17	94491-04K00	COWLING, UNDER CENTER	1	
18-1	94670-04K00-PGZ	COVER, SIDE RH (GRAY)	1	FOR PGZ
18-2	94670-04K00-YVB	COVER, SIDE RH (BLACK)	1	FOR AV4
19-1	68681-04K00-A76	EMBLEM, SIDE COWLING	1	FOR PGZ
19-2	68681-04K00-A77	EMBLEM, SIDE COWLING	1	FOR YVB
20-1	94680-04K00-PGZ	COVER, SIDE LH (GRAY)	1	FOR PGZ
20-2	94680-04K00-YVB	COVER, SIDE LH (BLACK)	1	FOR AV4
21-1	68681-04K00-A76	EMBLEM, SIDE COWLING	1	FOR PGZ
21-2	68681-04K00-A77	EMBLEM, SIDE COWLING	1	FOR YVB
22	09106-06117	BOLT (5X12)	4	
23	09139-05064	SCREW (5X13)	2	
24	09139-05074	BOLT (5X13)	2	

GSX-S1000FAL6_F08

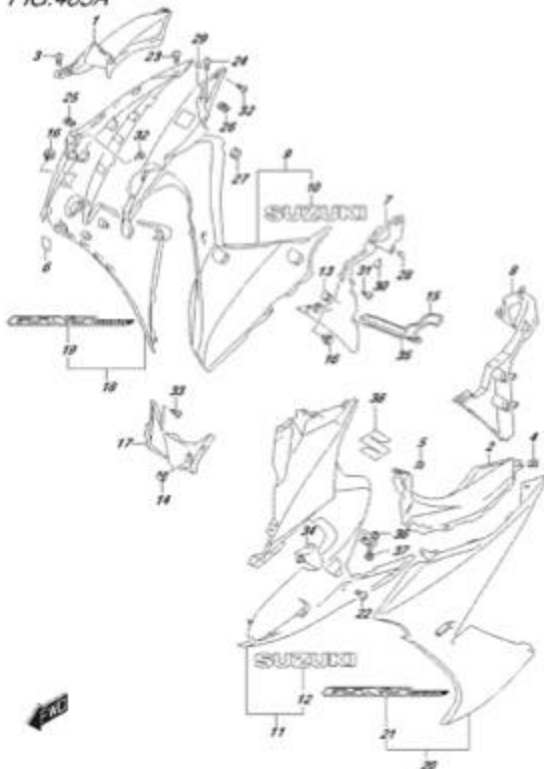FIG.485A



GSX-S1000FAL6_F08_485A
SIDE COWLING


FIG.485A (1-F-3) SIDE COWLING (PGZ,AV4)

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
25	09148-05052	NUT	2	
26	09148-05052	NUT	2	
27	09320-06504	CUSHION	2	
28	09321-06013	CUSHION	2	
29	09321-06013	CUSHION	2	
30	09329-18001	CUSHION	4	
31	03541-0516B	SCREW	8	
32	03541-0516B	SCREW	6	
33	03541-0516B	SCREW	1	
34	94520-04K00	BRACKET, UNDER COWL, FR LH	1	
35	94530-04K00	BRACKET, UNDER COWL, RR RH	1	
36	94540-04K00	BRACKET, UNDER COWL, RR LH	1	
37	01550-0612A	BOLT	2	
38	68111-47HA0	EMBLEM, S	2	

COLOR : AV4=YYB(BLACK),YYG(RED)

GSX-S1000FAL6_F08

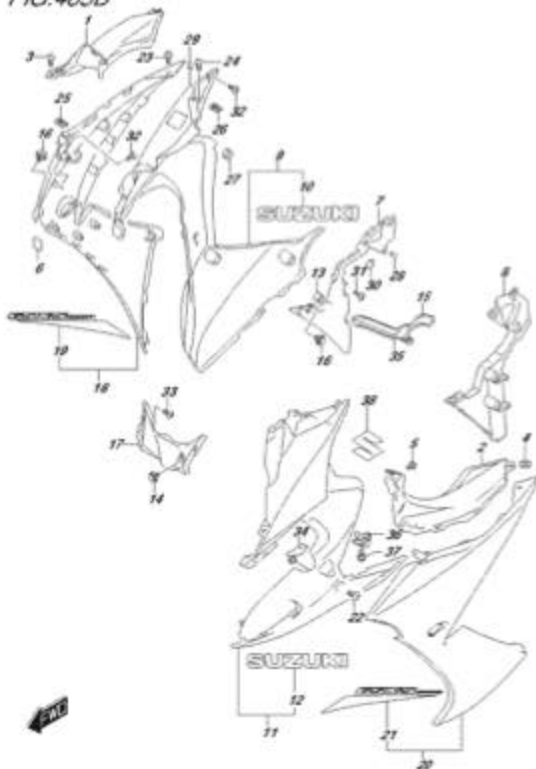FIG.485B




GSX-S1000FAL6_E08
SIDE COWLING

FIG.485B (1-F-4) SIDE COWLING (YSF)

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	94631-04K00	PANEL, METER RH	1	
2	94632-04K00	PANEL, METER LH	1	
3	09139-05074	BOLT (5X13)	2	
4	09148-05052	NUT	2	
5	09409-06314-5PK	CLIP (BLACK)	2	
6	44572-37H00	FASTENER, COWLING	2	
7	94461-04K00	COWLING, UNDER INNER RH	1	
8	94462-04K00	COWLING, UNDER INNER LH	1	
9	94470-04KA0-YKV	COWLING, UNDER RH (BLACK)	1	
10	68181-04KA0-YES	EMBLEM, "SUZUKI" (SILVER)	1	
11	94480-04KA0-YKV	COWLING, UNDER LH (BLACK)	1	
12	68181-04KA0-YES	EMBLEM, "SUZUKI" (SILVER)	1	
13	94479-15H00	CUSHION, UNDER LOWER	4	
14	94479-35F00	CLIP, UNDER CENTER	1	
15	94479-35F00	CLIP, UNDER INNER	2	
16	94479-35F00	CLIP, SIDE FRONT	2	
17	94491-04K00	COWLING, UNDER CENTER	1	
18	94670-04K10-YSF	COVER, SIDE RH (BLUE)	1	
19	68685-04K00-A78	TAPE, SIDE COWLING RH	1	
20	94680-04K10-YSF	COVER, SIDE LH (BLUE)	1	
21	68685-04K00-A78	TAPE, SIDE COWLING LH	1	
22	09106-06117	BOLT (5X12)	4	
23	09139-05064	SCREW (5X13)	2	
24	09139-05074	BOLT (5X13)	2	
25	09148-05052	NUT	2	
26	09148-05052	NUT	2	
27	09320-06504	CUSHION	2	
28	09321-06013	CUSHION	2	
29	09321-06013	CUSHION	2	
30	09329-18001	CUSHION	4	
31	03541-0516B	SCREW	8	
32	03541-0516B	SCREW	6	
33	03541-0516B	SCREW	1	

GSX-S1000FAL6_E08

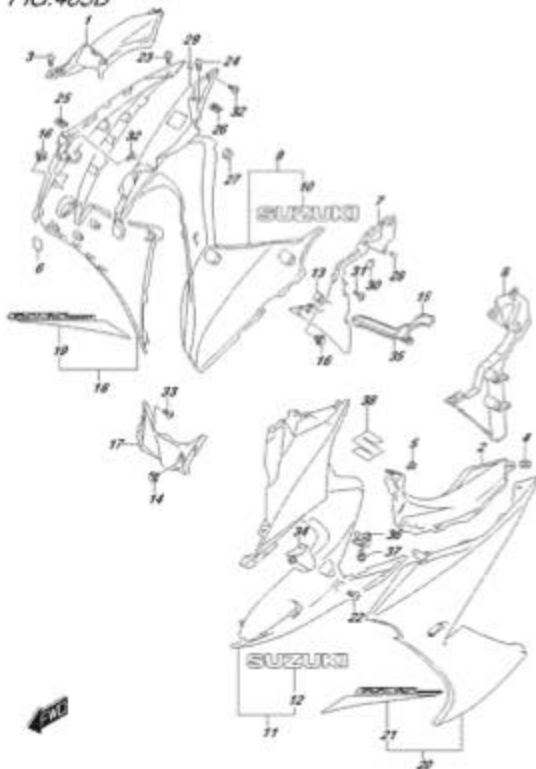FIG.485B




GSX-S1000FAL6_E08
SIDE COWLING

FIG.485B (1-F-5) SIDE COWLING (YSF)

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
34	94520-04K00	BRACKET, UNDER COWL FR LH	1	
35	94530-04K00	BRACKET, UNDER COWL RR RH	1	
36	94540-04K00	BRACKET, UNDER COWL RR LH	1	
37	01550-0612A	BOLT	2	
38	68111-47HA0	EMBLEM, S	2	

GSX-S1000FAL6_E08

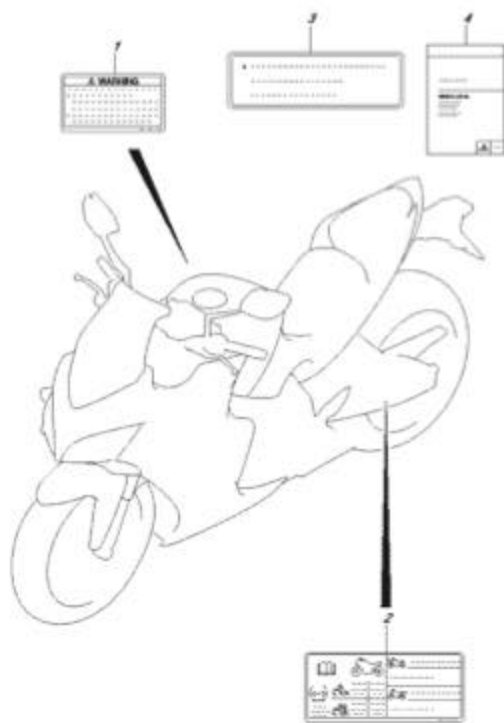FIG.496A



Q0YF01030FAL6_E08_496A
LARS

FIG.496A (1-F-6) LABEL

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	68319-49J00	LABEL, GENERAL WARNING	1	
2	68332-04KP0	LABEL, TIRE INFORMATION	1	
3	18803-40F00	LABEL, FUEL INFORMATION	1	
4	99011-04K50-01A	MANUAL, OWNER'S (ENGLISH)	1	

Q3X-31000FAL6_E08

FIG.505A

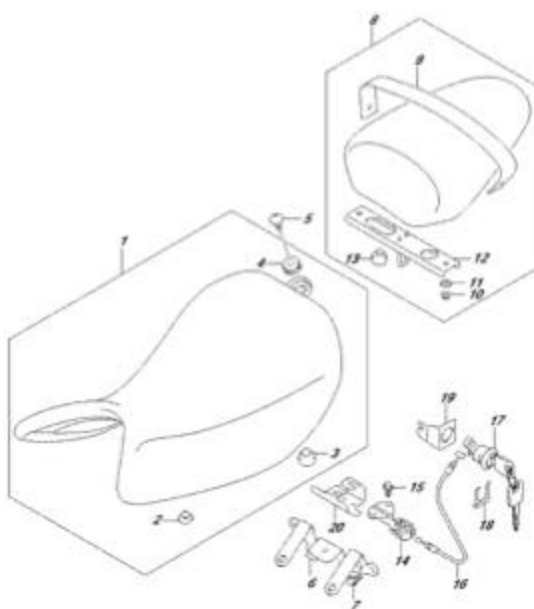


FIG.505A (1-F-7) SEAT


REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	45100-04K00-DW2	SEAT ASSY (BLACK)	1	
2	09329-10001	CUSHION	2	
3	09321-10011	CUSHION	4	
4	45148-04K00	CUSHION	1	
5	09139-06193	SCREW (8X20)	1	
6	45120-04K00	BRACKET, SEAT	1	
7	01550-0612A	BOLT	2	
8	45300-04K00-DW2	SEAT ASSY, PILLOW (BLACK)	1	
9	45380-04K00-P3H	BAND ASSY, SEAT (BLACK)	1	
10	08316-1006A	NUT	2	
11	09160-06129	WASHER (8.5X16X1)	2	
12	45291-04K00	PLATE, SEAT LOCK	1	
13	45148-20G00	CUSHION	2	
14	45220-04K00	BRACKET, SEAT SUPPORT	1	
15	01550-0612A	BOLT	2	
16	45280-04K00	CABLE, SEAT LOCK	1	
17	95700-14F00	LOCK SET, SEAT	1	
18	45289-11F00	PLATE, SEAT LOCK ASSY	1	
19	45288-14F00	GUIDE, SEAT LOCK CABLE	1	
20	45289-04K00	GUARD, SEAT LOCK	1	



Q3X-31000FAL6_E08
SEAT

Q3X-31000FAL6_E08

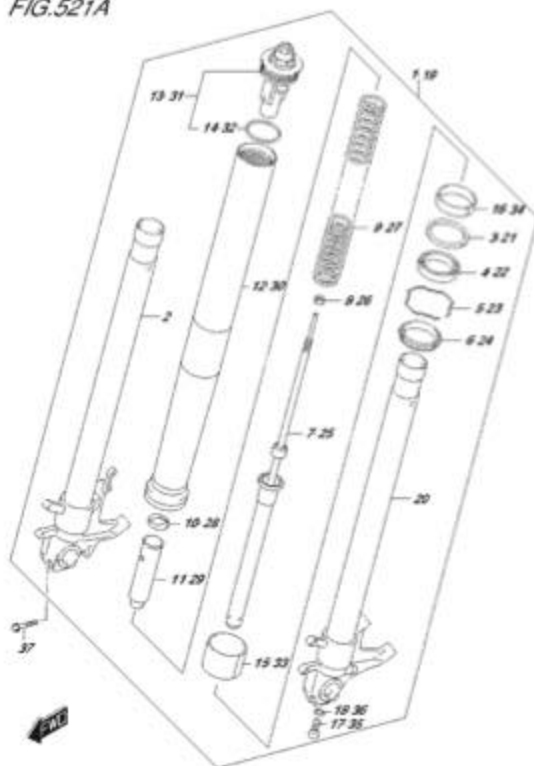FIG.521A




Q3X-31000FAL6_F08
FRONT FORK DAMPER

FIG.521A (1-F-8) FRONT FORK DAMPER

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	51103-04K20	DAMPER ASSY. FRONT FORK RH	1	
2	51110-04K00	TUBE, INNER RH	1	
3	51158-14Z00	WASHER	1	
4	51153-44G00	OIL SEAL	1	
5	51156-14Z00	RING, OIL SEAL STOPPER	1	
6	51173-02FA0	SEAL, DUST	1	
7	51146-04K00	CYLINDER	1	
8	51352-13A60	NUT, ROD	1	
9	51171-04K00	SPRING	1	
10	51158-40F30	GUIDE, SPRING	1	
11	51176-40F30	SPACER, SPRING	1	
12	51131-04K00	TUBE, OUTER	1	
13	51351-04K00	CAP	1	
14	62278-14100	O RING	1	
15	51112-31J00	PISTON	1	
16	51152-31J00	SLIDEMETAL	1	
17	51147-24F50	BOLT	1	
18	51148-41310	GASKET	1	

Q3X-31000FAL6_F08

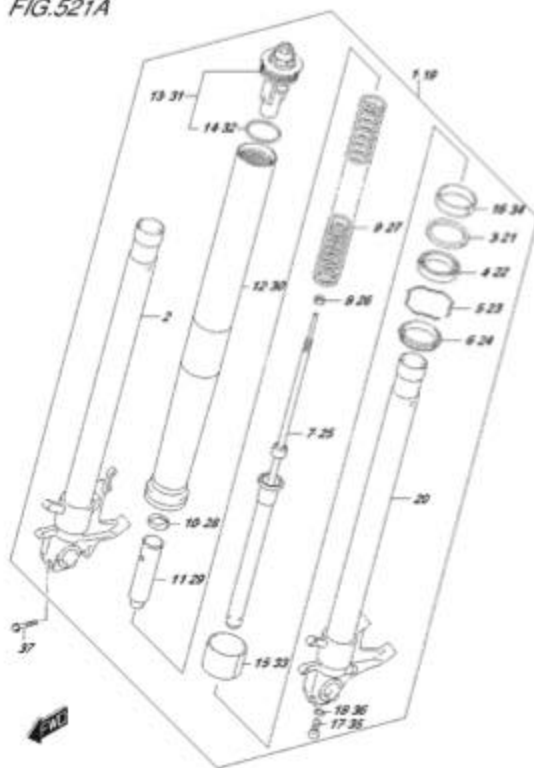FIG.521A




Q3X-31000FAL6_F08_521A
FRONT FORK DAMPER

FIG.521A (1-F-9) FRONT FORK DAMPER

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
19	51104-04K20	DAMPER ASSY. FRONT FORK LH	1	
20	51120-04K00	TUBE, INNER LH	1	
21	51158-14Z00	WASHER	1	
22	51153-44G00	OIL SEAL	1	
23	51156-14Z00	RING, OIL SEAL STOPPER	1	
24	51173-02FA0	SEAL, DUST	1	
25	51146-04K00	CYLINDER	1	
26	51352-13A60	NUT, ROD	1	
27	51171-04K00	SPRING	1	
28	51158-40F30	GUIDE, SPRING	1	
29	51176-40F30	SPACER, SPRING	1	
30	51131-04K00	TUBE, OUTER	1	
31	51351-04K00	CAP	1	
32	62278-14100	O RING	1	
33	51112-31J00	PISTON	1	
34	51152-31J00	SLIDEMETAL	1	
35	51147-24F50	BOLT	1	
36	51148-41310	GASKET	1	
37	51166-24F60	BOLT	4	

Q3X-31000FAL6_F08

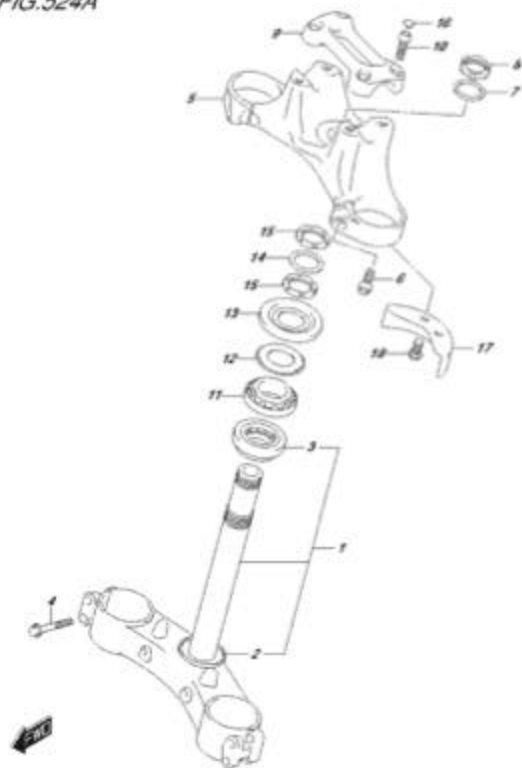FIG.524A




Q3X-31000FAL6_F08_524A
STEERING STEM

FIG.524A (1-F-10) STEERING STEM

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	51410-04K00	BRACKET, UNDER	1	
2	51644-12C00	SEAL, STEERING LWR	1	
3	09267-30010	BEARING (30X55X17)	1	
4	51166-10G10	BOLT, BRACKET UNDER	4	
5	51311-04K00	BRACKET, UPPER	1	
6	51328-46H00	BOLT, BRACKET UPPER	2	
7	51356-40F30	WASHER	1	
8	51353-40F30	NUT	1	
9	56211-04K00	HOLDER, HANDLE	1	
10	51328-46H00	BOLT	4	
11	09267-30010	BEARING (30X55X17)	1	
12	51644-12C00	SEAL, STEERING UPPER	1	
13	51643-41G10	COVER, STEERING UPPER	1	
14	51641-33E00	WASHER, STEERING STEM	1	
15	51631-33E00	NUT, STEERING STEM	2	
16	09250-09006	CAP (C0:10)	4	
17	51911-04K00	PLATE, STEERING LOCK	1	
18	09103-08351	BOLT (8X16)	2	

Q3X-31000FAL6_F08

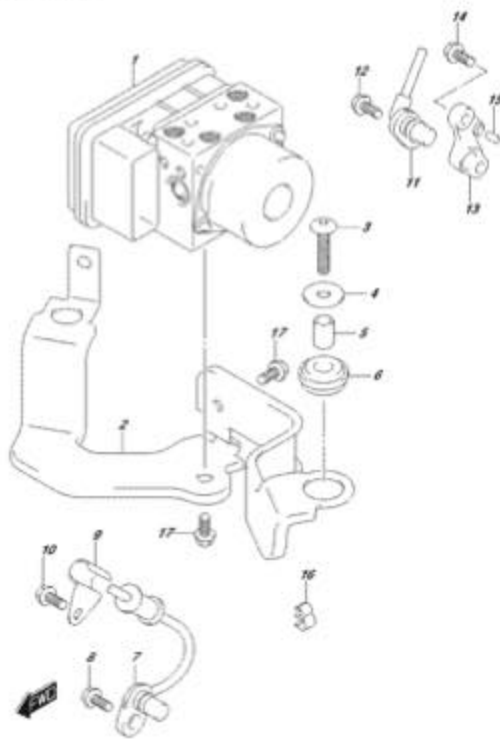FIG.533A




Q3X-31000FAL6_E08
HYDRAULIC UNIT

FIG.533A (1-F-12) HYDRAULIC UNIT

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	55610-04K00	UNIT ASSY, HYDRAULIC ABS	1	
2	55660-04K00	HOLDER, HYDRAULIC UNIT	1	
3	09139-06065-XC0	BOLT (EX10)	2	
4	09160-06088	WASHER (6.5X20X1.5)	2	
5	55662-10G20	SPACER, HYDRAULIC UNIT	2	
6	55663-10G10	RUBBER, HYDRAULIC UNIT	2	
7	55710-04K00	SENSOR, FRONT WHEEL ABS	1	
8	01547-0612A	BOLT	1	
9	55731-23H00	CLAMP, SENSOR LEAD FRONT	1	
10	01547-0612A	BOLT	1	
11	65710-04K00	SENSOR, REAR WHEEL ABS	1	
12	01547-0612A	BOLT	1	
13	65721-04K00	BRACKET, SPEED SENSOR RR	1	
14	09103-06240	BOLT (EX16)	1	
15	04221-04089	PIN	1	
16	09408-00266	CLAMP	7	
17	01547-0610A	BOLT	2	

Q3X-31000FAL6_E08

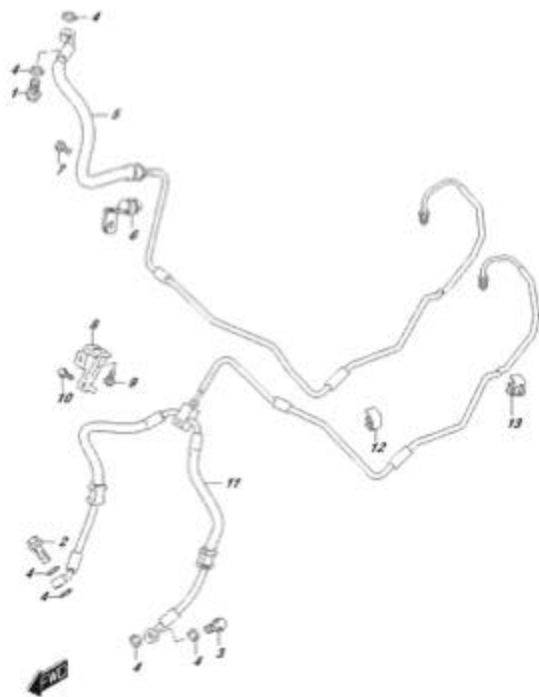FIG.536A




Q3XF01030FAL6_E08
FRONT BRAKE HOSE

FIG.536A (1-F-14) FRONT BRAKE HOSE

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	09360-10062	UNION	1	UPPER
2	09360-10062	UNION	1	LOWER RH
3	09360-10062	UNION	1	LOWER LH
4	09161-10009	WASHER (10X15X1.5)	6	
5	59200-04K00	HOSE ASSY, FRONT MASTER TO UNIT	1	
6	59261-04K00	CLAMP, FRONT BRAKE HOSE UPPER	1	
7	01547-0612B	BOLT	1	
8	59271-04K00	CLAMP, FRONT BRAKE HOSE LOWER	1	
9	01550-0612A	BOLT	1	
10	01547-0616A	BOLT	1	
11	59400-04K00	HOSE ASSY, FR UNIT TO CALIPER	1	
12	09403-06324	CLAMP	1	
13	09403-07334	CLAMP	1	

Q3X-31000FAL6_E08

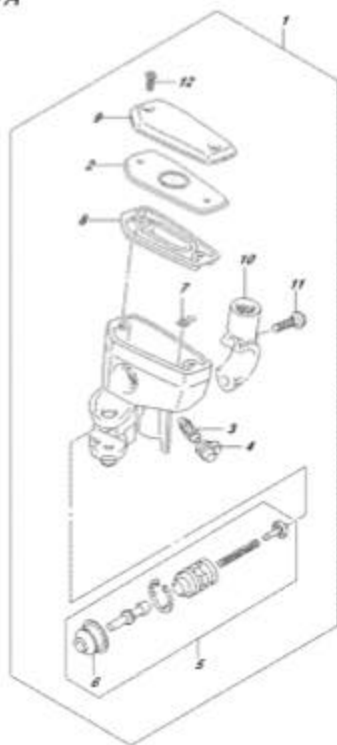FIG.537A



Q3X-31000FAL6_E08
FRONT MASTER CYLINDER

FIG.537A (1-F-15) FRONT MASTER CYLINDER

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	59600-23H00	CYLINDER ASSY, FRONT MASTER	1	
2	57437-23H00	PLATE	1	
3	59121-01A00	BLEEDER	1	
4	59122-01A00	CAP, BLEEDER	1	
5	59600-29G21	PISTON / CUP SET	1	
6	59668-29G00	BOOT	1	
7	59664-32F00	PROTECTOR	1	
8	59667-23H00	DIAPHRAGM, R	1	
9	59669-23H00	CAP, RESERVOIR	1	
10	59671-32F00	HOLDER	1	
11	59675-02FA0	BOLT, 6X22	2	
12	60689-49300	SCREW, RESERVOIR CAP	2	

Q3X-31000FAL6_E08

FIG.541A


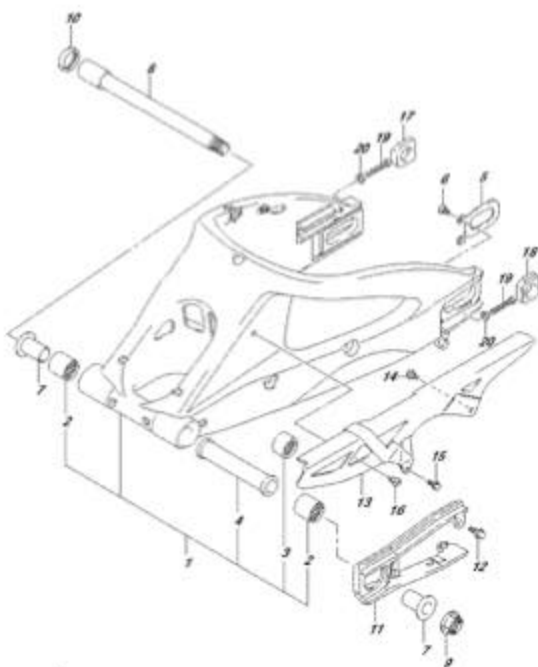


FIG.541A (1-G-2) REAR SWINGARM

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	61000-47H10-YAP	SWINGARM ASSY, REAR (BLACK)	1	
2	09263-27013	BEARING (27X35X35)	2	
3	09263-20070	BEARING (20X27X30)	1	
4	61281-41G20	SPACER, CENTER	1	
5	61124-41G20	PLATE, BRACKET	1	
6	09125-06060	SCREW (6X12)	1	
7	61251-41G20	SPACER, BEARING	2	
8	61211-01H00	SHAFT, PIVOT	1	
9	09159-20006	NUT	1	
10	61214-42E10	NUT, PIVOT	1	
11	61273-47H00	BUFFER, CHAIN TOUCH DEFENSE	1	
12	09111-06072	BOLT (EX17.8)	3	
13	61310-04K00	CASE, CHAIN	1	
14	09111-06107	BOLT (EX12)	1	
15	01550-0610B	BOLT	1	
16	09409-08308-SES	CLIP (BLACK)	1	
17	61445-40F00	ADJUSTER, CHAIN RH	1	
18	61445-40F00	ADJUSTER, CHAIN LH	1	
19	09100-08287	BOLT (EX50)	2	
20	08316-1008A	NUT	2	

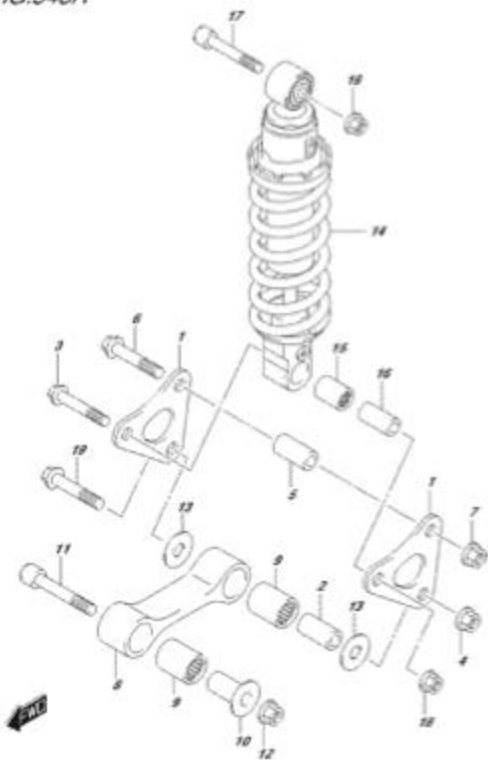FIG.543A




Q3X-31000FAL6_E08
REAR CUSHION LEVER

FIG.543A (1-G-3) REAR CUSHION LEVER

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	62611-04K00	LEVER, REAR CUSHION	2	
2	62317-27C10	SPACER, LOWER	1	
3	62668-42A02	BOLT, LOWER	1	
4	09159-12056	NUT	1	
5	62317-44B00	SPACER, UPPER	1	
6	62668-42A02	BOLT, UPPER	1	
7	09159-12056	NUT	1	
8	62641-31J00	ROD, RR CUSHION	1	
9	09263-20074	BEARING (20X27X32)	2	
10	62647-47H00	SPACER, ROD	1	
11	62658-04K00	BOLT, ROD	1	
12	09159-12056	NUT	1	
13	09160-12037	WASHER (12X34X1)	2	
14	62100-04K20-17U	ABSORBER ASSY, REAR SHOCK (GRAY)	1	
15	09263-17046	BEARING (17X24X32)	1	
16	62317-47H00	SPACER, SHOCK ABS LOWER	1	
17	62658-04K10	BOLT, RR SHOCK ABS UPPER	1	
18	09159-10115	NUT	2	
19	09103-10428	BOLT (10X58)	1	

Q3X-31000FAL6_E08

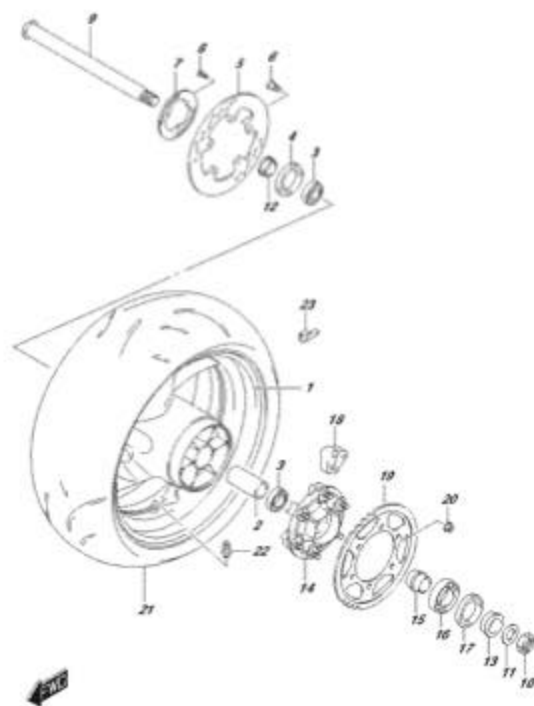FIG.550A




Q3X-31000FAL6_E08
REAR WHEEL

FIG.550A (1-G-4) REAR WHEEL

REF NO	PART NO	DESCRIPTION	QTY	REMARKS
1	64111-04K00-019	WHEEL, REAR (17M/CXMT6.0)	1	
2	64731-35F10	(BLACK)	1	
3	09262-28052	SPACER, HUB BEARING	1	
4	09284-37001	BEARING (28X52X12)	2	
5	09211-04K00	OIL SEAL (37X52X8)	1	
6	09106-08160	DISC, REAR BRAKE	1	
7	09106-08160	BOLT (8X21)	5	
8	64162-04K00	RING, SPEED SENSOR RR (3FT)	1	
9	07130-0512A	BOLT	3	
10	64711-49G30	AXLE, REAR	1	
11	09159-25003	NUT	1	
12	09160-25070	WASHER (25.2X42X3.2)	1	
13	64741-35F00	SPACER, AXLE RH	1	
14	64751-47H00	SPACER, AXLE LH	1	
15	64610-04K00	DRUM, REAR SPROCKET	1	
16	64733-35F00	RETAINER, SPROCKET DRUM	1	
17	09262-32022	BEARING (32X65X17)	1	
18	09285-39001	OIL SEAL (38X65X7)	1	
19	64651-47H10	ABSORBER, HUB SHOCK	6	
20	64511-04K00	SPROCKET, REAR (NT-44)	1	
21	08319-3110A	NUT	6	
22	65110-04K00	TIRE, REAR	1	D214 M
23-1	43130-24A00	(190SIZR17MC (73W))	1	
23-2	55411-22H00	VALVE ASSY, WHEEL RIM (TR412)	1	
23-3	55412-22H00	BALANCER, WHEEL (10G)	AR	
23-4	55413-22H00	BALANCER, WHEEL (25G)	AR	
23-5	55413-22H00	BALANCER, WHEEL (35G)	AR	

Q3X-31000FAL6_E08

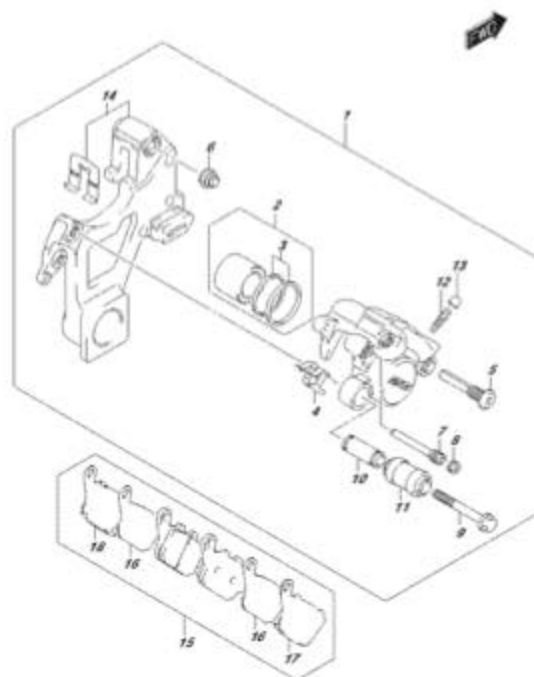FIG.555A




Q3X-31000FAL6_E08
REAR CALIPER

FIG.555A (1-G-5) REAR CALIPER

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	69100-04K00-999	CALIPER ASSY, REAR	1	
2	69100-04810	PISTON SET	1	
3	69100-04820	SEAL SET, PISTON	1	
4	69115-04F00	SPRING, PAD	1	
5	59305-36E00	PIN, BOLT	1	
6	59303-14500	BOOT	1	
7	69141-40F00	PIN, PAD	1	
8	59146-06J00	PIN, PLUG	1	
9	69182-04F00	BOLT	1	
10	69185-04F00	SLEEVE	1	
11	69186-04F00	BOOT, SLEEVE	1	
12	59121-01A00	BLEEDER	1	
13	59122-46H00	CAP, BLEEDER	1	
14	69150-04K00	BRACKET	1	
15	69100-08860	PAD & RETAINER SET	1	
16	69132-08J00	INSULATOR	2	
17	69133-16G00	RETAINER	1	
18	69134-16G00	RETAINER	1	

Q3X-31000FAL6_E08

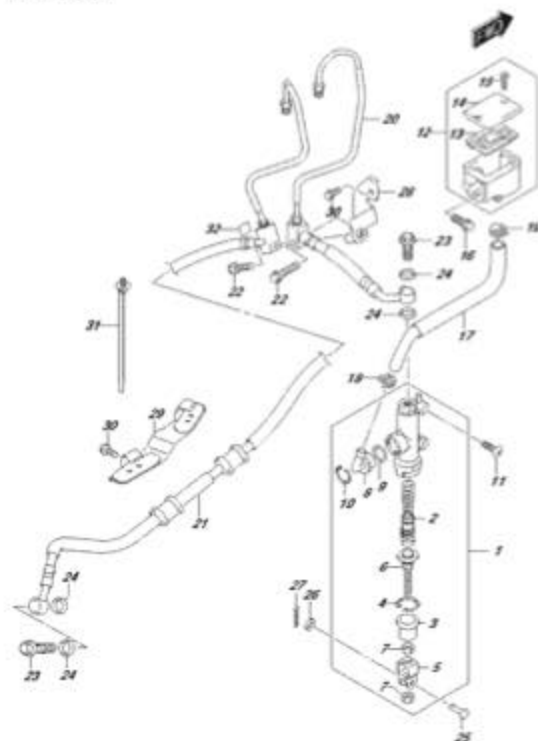FIG.558A




Q3X-31000FAL6_E08
REAR MASTER CYLINDER

FIG.558A (1-G-6) REAR MASTER CYLINDER

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	69600-47H10	CYLINDER ASSY, REAR MASTER	1	
2	69600-34810	PISTON / CAP SET	1	
3	69691-00A00	BOOT	1	
4	69665-47H00	CIRCLIP	1	
5	69692-44H00	YOK	1	
6	69670-40A00	ROD, PUSH	1	
7	69693-05A00	NUT	2	
8	69672-00B20	CONNECTOR	1	
9	69686-34200	O RING	1	
10	69674-00B20	CIRCLIP	1	
11	09139-06026	SCREW (BX2)	2	
12	69740-44C00	TANK ASSY, REAR RESERVOIR	1	
13	59667-04700	DIAPHRAGM	1	
14	59669-05C00	CAP	1	
15	69689-04A00	SCREW	2	
16	01547-0612A	BOLT	1	
17	69730-04K00	HOSE, RR RESERVOIR TANK	1	
18	09401-12404	CLIP	1	
19	09401-15407	CLIP	1	
20	69200-04K00	HOSE ASSY, RR MASTER TO UNIT	1	
21	69400-04K00	HOSE ASSY, RR UNIT TO CLPR	1	
22	01547-0625A	BOLT	2	
23	09360-10062	UNION	2	
24	09161-10009	WASHER (10X15X1.5)	4	
25	09200-06068	PIN (6X18.2)	1	
26	08322-0106A	WASHER	1	
27	04111-2015A	COTTER PIN	1	
28	69260-04K00	CLAMP, RR BRAKE HOSE	1	
29	69270-04K00	GUIDE, RR BRAKE HOSE	1	
30	01547-0612A	BOLT	2	
31	09407-17403	CLAMP (L-154)	1	
32	69411-04K00	PROTECTOR, BRAKE HOSE	1	

Q3X-31000FAL6_E08

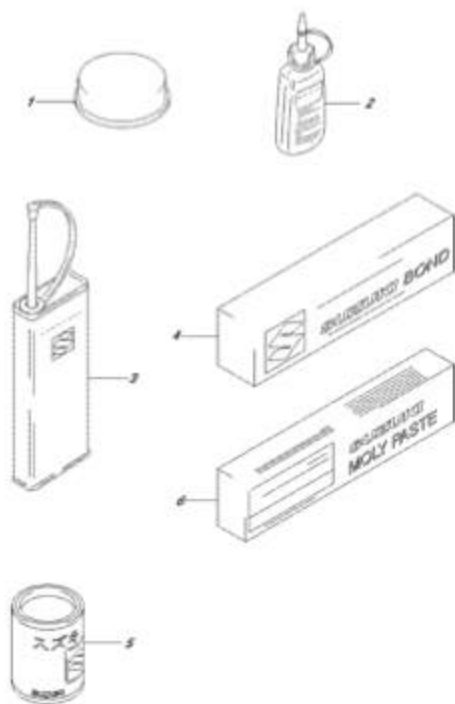FIG.901A



Q3X-31000FAL6_E08
OPTIONAL

FIG.901A (1-G-7) OPTIONAL

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	99000-25110	SUZUKI PBC GREASE	1	20G
2-1	99000-32020	THREAD LOCK SUPER (133B)	1	50G
2-2	99000-32030	THREAD LOCK SUPER (130B)	1	50G
2-3	99000-32050	THREAD LOCK SUPER (1342)	1	50G
2-4	99000-32100	THREAD LOCK SUPER (1305)	1	50G
2-5	99000-32130	THREAD LOCK SUPER (1300)	1	50G
3	99000-32040	THREAD LOCK CEMENT	1	200G
4	99000-31140	SUZUKI BOND (1207B)	1	100G
5	99000-25030	SUZUKI SUPER GREASE	1	150G
6	99000-25140	SUZUKI MOLY PASTE	1	50G

Q3X-31000FAL6_E08

FIG.970A

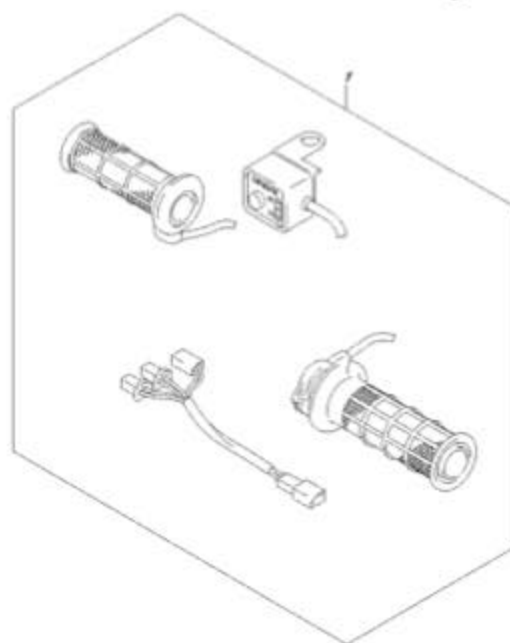



FIG.970A (1-G-8) OPTIONAL (GRIP HEATER SET)

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	57100-04820	HEATER SET, GRIP HANDLE	1	

FIG.970B

FIG.970B (1-G-9) OPTIONAL (SEAT TAIL BOX)

REF NO	PART NO	DESCRIPTION	QTY	REMARKS
1	45500-04810-YKV	BOX, SET SEAT TAIL (BLACK)	1	

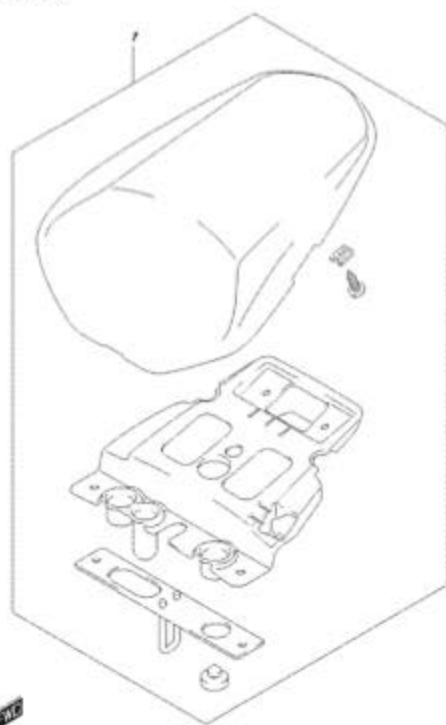

Q30F-01000FAL6_E08
OPTIONAL (SEAT TAIL BOX)

Q3X-31000FAL6_E08

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
10000		11671-33210	112A-2	12830-41011	127A-6
		12000-48950	120A-5	12831-41030	127A-8
		12111-04000-0F0	120A-9	12837-18000	127A-9
		12140-04000	120A-10	12837-24F10	101A-13
		12151-04000	120A-11		127A-7
11100-21H00	103A-1	12160-04000	120A-1	12891-47H00	126A-3
11115-29G70	103A-4	12163-24F10	120A-2	12892-05C00-120	126A-11
11117-30G00	103A-7	12164-47H10-040	120A-4-4	12892-05C00-125	126A-11-1
11141-21H00	101A-2	12164-47H10-080	120A-4-2	12892-05C00-130	126A-11-3
	103A-5	12164-47H10-0C0	120A-4-3	12892-05C00-135	126A-11-4
11171-04000	100A-1	12164-47H10-0D0	120A-4-4	12892-05C00-140	126A-11-5
11173-35F00	101A-3	12228-48800-080	108A-20-1	12892-05C00-145	126A-11-6
	102A-2		120A-7-1	12892-05C00-150	126A-11-7
11178-33E00	101A-4	12228-48800-0C0	108A-20-2	12892-05C00-155	126A-11-8
	102A-3		120A-7-2	12892-05C00-160	126A-11-9
11182-35F10	101A-5	12228-48800-0D0	108A-20-3	12892-05C00-165	126A-11-10
	102A-7		120A-7-3	12892-05C00-170	126A-11-11
11191-27E00	101A-6	12228-48800-0E0	108A-19	12892-05C00-175	126A-11-12
	102A-5		108A-20-4	12892-05C00-180	126A-11-13
11289-18G01	163A-11		120A-9	12892-05C00-185	126A-11-14
11276-04000	163A-12		120A-7-4	12892-05C00-190	126A-11-15
11277-04000	163A-13	12228-48800-0F0	108A-20-5	12892-05C00-195	126A-11-16
11281-44G00	116A-26		120A-7-5	12892-05C00-200	126A-11-17
11301-04000	108A-1	12228-48800-0G0	108A-20-6	12892-05C00-205	126A-11-18
11315-35F00	108A-21		120A-7-6	12892-05C00-210	126A-11-19
11319-33E50	108A-2	12228-48800-0H0	108A-20-7	12892-05C00-215	126A-11-20
11340-04000	112A-1		120A-7-7	12892-05C00-220	126A-11-21
11342-41G10	112A-3	12229-04000-0A0	120A-8-1	12911-04000	126A-4
11351-04000	112A-24	12229-04000-0B0	120A-8-2	12912-04000	126A-5
11351-04000	112A-30	12229-04000-0C0	120A-8-3	12921-04000	126A-6
11370-04000	108A-31	12229-04000-0D0	120A-8-4	12931-04000	126A-7
11381-04000	112A-11	12229-04000-0E0	120A-8-5	12932-02C00	126A-9
11382-04000	112A-19	12229-40F50-0A0	124A-4-1	12933-25G00	126A-8
11390-21H00	108A-23	12229-40F50-0B0	124A-4-2	13101-47H00	103A-14
11401-04000	101A-1	12229-40F50-0C0	124A-4-3	13170-15H10	103A-16
11482-40F10	101A-7	12600-40X31	122A-9	13268-48T00	140A-2
	112A-5	12611-04000	122A-1	13269-33E00	140A-3
11483-18G00	101A-8	12612-04000	122A-6	13295-29G00	140A-4
	112A-25	12654-04000	124A-1	13495-04000	140A-1
11484-35F00	101A-9	12656-40F00	124A-2	13473-04000	140A-5
	108A-32	12686-40F00	124A-3	13473-06J00	140A-4
11489-21H00	101A-10	12710-04000	126A-1	13575-25G00	140A-5
	116A-2	12720-04000	126A-2	13580-14J00	140A-6
11491-33E00	101A-11	12731-29G00	126A-13	13580-29G00	140A-7
	112A-12	12760-04000	127A-1	13601-29G00	140A-6
11492-04000	101A-12	12771-21H00	127A-2	13602-05A40	140A-9
	112A-20	12782-35F10	127A-3	13602-29G00	140A-7
11511-21H01	116A-1	12800-05H00	126A-12	13605-02F00	140A-8
11512-44G00	116A-9	12811-21H00	127A-4	13606-47A00	140A-10
11971-25D00	112A-9	12812-31G00	127A-5	13650-41F10	195A-19

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
13660-40X00	103A-18	15625-25G40	155A-18	17961-04000	187A-21
13665-41F10	155A-20	15630-25G40	155A-17	17962-04000	187A-23
13679-37H00	140A-11	15710-04000	142A-1	18117-14J01	140A-12
13681-38F00-035	142A-9	15717-58B00	142A-2	18213-04000	163A-34
13681-39F00-100	142A-10	15721-06J00	142A-8	18450-35F11	189A-1
13683-04000	142A-13	15722-14J00	142A-3	18461-04000	189A-4
13685-02F40	142A-12	15810-04000	172A-18	18471-04000	189A-5
13687-04000	155A-23	16321-35F01	116A-19	18510-29G70	189A-2
13689-08J00	140A-13	16331-35F00	116A-20	18531-35F30	189A-7
13689-08J10	140A-14	16490-21H00	116A-16	18590-32G00	155A-22
13700-04000	155A-1	16445-24F00	116A-14	18711-04000	189A-3
13723-04000	155A-13	16461-04000	178A-3	18803-40F00	486A-3
13736-04000	155A-6	16471-04000	178A-4		
13740-04000	155A-4	16491-35F00	116A-17		
13744-04000	155A-15	16510-07J00	178A-6		
13746-01H00	155A-5	16520-04000	116A-11		
13756-47H00	155A-3	16591-04000	178A-8		
13780-47H10	155A-2	16990-04000	178A-1		
13788-04000	155A-11	17400-04000	180A-1		
13827-40H01	155A-9	17418-33A00	180A-7		
13853-04000	155A-26	17432-07G00	180A-11	21200-40H00	201A-3
13878-09F00	155A-9	17435-33A00	180A-8	21410-40F01	201A-4
13881-04000	155A-7	17461-48G00	180A-5	21412-04000	201A-12
14100-04000	163A-1	17470-02F10	180A-4	21413-04000	201A-5
14161-04000	101A-14	17491-17E01	180A-2	21441-40F20	201A-6
14250-21H00	163A-2	17548-50F00	187A-11	21451-40F00	201A-7
14252-14J00	163A-15	17670-06G00	187A-6	21451-40F30	201A-8
14310-04000-031	163A-18	17710-04K10	185A-1	21462-40F00	201A-9
14459-21H00	163A-19	17711-14G00	185A-14	21472-40F00	201A-11
14770-04000	163A-3	17735-14G00	185A-16	23110-38G00	201A-17
14771-42F40	163A-20	17780-04000	185A-5	23111-05A01	201A-18
14780-04000	163A-27	17771-04000	185A-7	23121-41G00	201A-19
14791-04000	163A-32	17772-04000	185A-6	23122-41G00	201A-20
14795-10F40	163A-28	17773-04000	185A-9	23123-41G00	201A-21
15100-04000	172A-1	17798-30G00	445A-29	23125-41G00	201A-22
15111-27G00	172A-2	445B-31	23271-41G00	201A-23	
15112-05H00	172A-3	17890-04000	185A-13	24120-40F30	206A-1
15113-05H00	172A-4	17892-14F00	185A-15	24131-40F10	206A-18
15113-35F00	172A-5	17893-04000	187A-1	24221-40F30	206A-2
15114-14J00	172A-6	17892-04000	187A-2	24231-40F40	206A-3
15115-08J00	172A-7	17893-40F10	187A-3	24251-40F40	206A-4
15116-10F00	172A-8	17894-04000	187A-14	24252-35F00	206A-5
15116-31J00	172A-18	17895-04000	187A-25	24261-40F30	206A-6
15119-06J00	172A-9	17897-04000	187A-16	24262-35F10	206A-7
15181-04000	172A-10	17898-33E20	187A-8	24311-40F30	206A-21
15201-35F00	172A-16	17893-33E00	187A-9	24321-40F40	206A-22
15420-31J00	172A-11	17881-04000	187A-26	24322-02F01	206A-23
15663-18H00	172A-12	17910-04000	187A-18	24331-40F30	206A-24
15610-14J00	172A-13	17931-31J00	187A-19	24332-46H00	206A-19

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
24333-02F00	206A-20	31361-03490	301A-18	36620-04K00	350A-9
24341-40F20	206A-25	31401-41G20	304A-2	36622-04K00	304A-21
24351-40F40	206A-26	31402-41G10	304A-1	36654-06J20	350A-23
24351-40F30	206A-27	31800-38G10	312A-1	36851-44G01	350A-24
24751-04K00	206A-28	31861-04K00	310A-9	37190-04K00	352A-2
24751-04K00	206A-47	31861-38G00	312A-3	37191-04B10	352A-1
25211-35F11	212A-1	32371-35G00	304A-3	37146-11J00	352A-7
25231-35F11	212A-2	32800-26J00	312A-5	37180-04K00	352A-4
25310-40F00	212A-6	32820-04K00	312A-13	37200-04K30	355A-1
25312-42F01	212A-8	33110-38F00	325A-1	37490-04K00	355A-4
25350-35F00	212A-13	33115-35G00	356A-2	37730-41G02	212A-36
25355-17G00	212A-14	33410-47F00	312A-12	37740-31D00	350A-14
25381-13E00	212A-9	33610-14G11	310A-1	37820-33D10	116A-24
25411-24F00	212A-3	33624-04K00	350A-8	37822-33D00	116A-25
25411-26D01	212A-4	33652-13G00	406A-2	37940-35F00	350A-16
25451-35F00	212A-5	33652-21G10	420A-7	38590-46G00	350A-18
25510-40F00	212A-17	33652-34G00	312A-15	38590-04K10	350A-19
25512-06G10	212A-16	33652-38A10	310A-2	38610-06F10	304A-20
25520-04K00	212A-27		312A-14	38860-78F01	350A-5
25525-24F00	212A-29	33810-04K00	310A-6		350A-6
25526-47G00	212A-28	33960-06G10	312A-17		350A-7
	212A-31	33970-49G00	312A-18		
25590-04K00	212A-30	34111-04K00	330A-5		
25592-20C00	212A-32	34120-04K00	330A-1		
25671-35F00	212A-19	34124-04K00	330A-3		
27510-20A40	206A-41	34124-04K10	330A-4		
27531-04K00	206A-42	34150-04K00	330A-2		
27600-33E50-116	206A-43	34180-10C00	330A-8		
27620-33E50	206A-44	34180-04K00	330A-4		
		34810-04K00	173A-14		
		35100-04KAD-800	333A-1	41100-04K00-YAP	401A-1
		35601-08JAO	334A-1	41130-21H10	401A-9
		35602-08JAO	334A-5	41200-04K00-YAP	401A-3
		35603-08JAO	334A-11	41911-40F01	401A-5
		35604-08JAO	334A-15	41921-16G00	401A-7
		35612-08JAO	334A-2	41922-33E20	401A-8
		35629-18G00	334A-16	42310-04K00	407A-1
		35632-08JAO	334A-6	42330-04K00	407A-5
		35632-08JAO	334A-12	43110-04K00	407A-8
		35670-04K00	336A-1	43130-24A00	500A-13
		35726-04K00	336A-2		500A-22
		35810-16G20	336A-8	43516-35F10	415A-1
		35812-16G20	336A-10	43521-04K00	415A-2
		35813-16G00	336A-11	43526-35F10	415A-5
		35817-16G00	336A-4	43530-16G00	415A-6
		35850-14A11	336A-9	43576-48B30	415A-12
		35870-07F01	336A-17	43585-01H01	401A-2
		36610-04K00	350A-1	43611-37H00	415A-15
		36618-31J00	350A-25	43621-37H00	415A-16

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
43811-04K00	415A-13	45190-04K00-DW2	505A-1	51103-04K20	521A-1
43816-01H20	415A-20	45120-04K00	505A-6	51104-04K20	521A-18
43821-04K00	415A-14	45148-04K00	505A-4	51110-04K00	521A-2
44100-04K10-PGZ	420A-5-1	45148-20G00	505A-13	51112-31J00	521A-15
44100-04K10-YSF	420A-5-2	45220-04K00	505A-14		521A-33
44100-04K10-YVB	420A-5-3	45280-04K00	505A-16	51120-04K00	521A-20
44200-17F10	420A-2	45288-14F00	505A-19	51131-04K00	521A-12
44244-11J00	420A-3	45288-04K00	505A-20		521A-30
44271-04K00	422A-11	45288-11F00	505A-18	51146-04K00	521A-7
44277-37F02	445A-2	45291-04K00	505A-12		521A-25
	445A-4	45390-04K00-DW2	505A-8	51147-24F50	521A-17
	445B-2	45380-04K00-P3H	505A-9		521A-35
	445B-6	45414-38G00	312A-25	51148-41310	521A-18
44283-06J00	420A-29	45590-04B10-YKV	970S-1		521A-36
44291-04K00-PGZ	422A-3-1	47115-04K00	445A-1	51152-31J00	521A-15
44291-04K00-YSF	422A-3-2		445B-1		521A-34
44291-04K00-YYG	422A-5-3	47120-04K00-YSF	445B-13	51153-44G00	521A-4
44292-04K00	422A-7	47121-04K00-PGZ	445A-13-1		521A-22
44293-04K00	422A-8	47121-04K00-YVB	445A-13-2	51156-14200	521A-5
44294-04K00	422A-9	47131-04K00	445A-11		521A-23
44294-43K02	333A-9		445B-11	51156-14200	521A-3
44423-04K00	420A-21	47210-04K00	445A-6		521A-21
44424-04K00	420A-22		445B-5	51156-40F30	521A-10
44424-15H10	420A-24	47220-04K00-YSF	445B-15		521A-28
44512-04K00	420A-11	47221-04K00-PGZ	445A-14-1	51166-10G10	524A-4
44521-04K00	420A-9	47221-04K00-YVB	445A-14-2	51166-24F50	521A-37
44523-47F02	420A-10	47231-04K00	445A-12	51171-04K00	521A-9
44530-04K00	420A-15		445B-12		521A-27
44541-41G20	420A-5	47311-04K00-YKV	445A-25-1	51173-02F40	521A-6
44542-04K00	420A-6		445B-27		521A-24
44542-08J00	422A-10	47311-04K00-YYG	445A-25-2	51176-40F30	521A-11
44543-04K00	420A-8	47312-04K00	445A-26		521A-29
44543-10G20	474A-12		445B-28	51311-04K00	524A-5
44552-04B00	420A-32	47312-37H00	445A-21	51328-49H00	524A-6
44560-23F02	420A-33		445B-23		524A-10
44561-04K00	420A-30	47313-04K00	445A-15	51351-04K00	521A-13
44561-18G00	420A-19		445B-17		521A-31
44571-04K00	420A-31	47314-04K00	445A-16	51362-13A00	521A-8
44572-02F01	333A-2		445B-18		521A-26
	481A-2	47414-04K00	406A-1	51363-40F30	524A-8
44572-13G00	420A-4	47420-04K00	312A-19	51366-40F30	524A-7
	445A-3	47431-04K00	312A-10	51410-04K00	524A-1
	445B-3			51553-15240	310A-3
	445B-7			51621-33E00	524A-15
44572-37F02	485A-4			51641-35F00	524A-14
	485B-6			51643-41G10	524A-13
44894-24A00	422A-12			51644-12C00	524A-2
	474A-11			51911-04K00	524A-7
				53100-04K00-YSF	480A-1-1

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
53100-04K00-YVB	460A-1-2	58300-04K10	462A-12	61000-47H10 YAP	541A-1
53100-04K10-PGZ	460A-1-3	58620-04K10	462A-13	61124-41G00	541A-5
53117-04K00	460A-6	58630-04K00	462A-14	61211-01H00	541A-8
53118-04K00	460A-9	58640-04K00	462A-17	61214-42E10	541A-10
54111-04K00-018	530A-1	59100-14810	535A-2	61251-41G00	541A-7
54162-44H00	530A-10		535A-7	61273-47H00	541A-11
54711-14J00	530A-5	59100-14820	535A-3	61281-41G00	541A-4
54731-14J00	530A-2		535A-8	61310-54K00	541A-13
54751-14J00	530A-7	59100-14840	535A-5	61445-40F00	541A-17
55110-04K00	530A-12		535A-10	61446-40F00	541A-18
55411-22H00	530A-14-1	59100-14850	535A-11	62100-04K20-17U	543A-14
	530A-25-1	59100-14J40-929	535A-1-1	62276-14100	521A-14
55412-22H00	530A-14-2	59110-14J80	535A-1-2		521A-32
	530A-29-2	59110-14J00	535A-1-3	62317-27C10	543A-2
55413-22H00	530A-14-3	59110-14J00	535A-1-4	62317-44B00	543A-5
	530A-29-3	59121-01A00	537A-3	62317-47H00	543A-16
55610-04K00	533A-1		535A-12	62611-04K00	543A-1
55690-04K00	533A-2	59122-01A00	537A-4	62641-31J00	543A-8
55902-10G00	533A-5	59122-46H00	535A-13	62647-47H00	543A-10
(5595)-10G10	533A-6	59146-08J00	535A-8	62656-04K00	543A-11
55710-04K00	533A-7	59151-14J00	535A-4	62658-04K10	543A-17
55731-23H00	533A-9		535A-9	62668-42A02	543A-3
56111-04K00	462A-1	59200-04K00	536A-5		543A-6
56200-03B60	462A-2	59210-04K00	536A-8	62994-47H00	530A-6
56211-04K00	520A-9	59261-24H00	535A-6	63111-54K00	474A-1
56272-10G00	462A-3	59271-04K00	536A-8	63113-04K00	474A-3
56272-42F00	462A-4	59300-14J40-929	535A-6-1	63114-04K00	474A-7
56273-10G10	462A-5	59300-14J50	535A-8	63116-04K00	474A-4
56300-04K00	462A-9	59305-36E00	535A-5	64111-04K00-019	590A-1
56900-04K00	462A-10	59310-14J80	535A-6-2	64162-04K00	590A-7
57100-04K00	570A-1	59310-14J00	535A-6-3	64511-04K00	590A-19
57110-21H02	467A-1	59310-14J00	535A-6-4	64610-04K00	590A-14
57211-21H01	467A-7	59400-04K00	536A-11	64651-47H10	590A-18
57300-26G00	467A-2	59600-23H00	537A-1	64711-48G00	590A-9
57431-26G00	467A-3	59600-29B21	537A-5	64731-35F10	590A-2
57431-41G00	467A-10	59664-32F00	537A-7	64733-35F00	590A-15
57437-23H00	537A-2	59666-29G00	537A-6	64741-35F00	590A-12
57490-14J01	467A-5	59667-04F00	536A-13	64751-47H00	590A-13
57495-17C00	467A-6	59667-23H00	537A-8	65110-04K00	590A-21
57900-41G00	467A-8	59669-05D00	536A-14	65710-04K00	533A-11
57912-41G00	467A-19	59669-23H00	537A-9	65721-04K00	533A-13
57932-41G00	467A-11	59671-32F00	537A-10	66111-47H00	485A-38
57990-41G00	467A-13	59675-02F00	537A-11		485B-36
57992-41G01	467A-14			68135-04K10-A3F	4400A-2-1
57931-41G00	467A-9			69145-04K10-A3F	4400A-2-2
57941-33E00	467A-16			69151-36G00-12Y	480A-2-1
57944-33E00	467A-17			69151-36G10-A79	480A-2-2
58200-04K00	462A-16			69181-04K00-YES	485A-12
58300-04K00	462A-11				485B-10

60000

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
68201-47H00	485B-12	92215-38H00	400A-3	94670-04K10-YSF	485B-18
68319-48J00	422A-2	94410-04K00-PGZ	481A-1-1	94680-04K00-PGZ	485A-20-1
68332-04K00	496A-1	94410-04K00-YSF	481A-1-2	94680-04K00-YVB	485A-20-2
68661-04K00-A79	496A-2	94410-04K00-YYG	481A-1-3	94680-04K10-YSF	485B-20
	485A-19-1	94443-06G00	445A-24	95700-14F00	595A-17
68661-04K00-A77	485A-21-1		445B-26	96000-29G00	901A-5
	485A-19-2		481A-21	96000-25110	901A-1
68665-04K00-A78	485B-19	94458-04K00	480A-6	96000-25140	901A-4
68665-04K00-A78	485B-21		485B-7	96000-31140	901A-4
69100-04B10	555A-2	94462-04K00	485A-8	96000-32020	901A-2-1
69100-04B20	555A-3		485B-8	96000-32030	901A-2-2
69100-04K00-929	555A-1	94470-04K00-YKV	485A-9-1	96000-32040	901A-3
69100-08980	555A-15		485B-9	96000-32100	901A-2-4
69115-04F00	555A-4	94470-04K00-YYG	485A-9-2	96000-32130	901A-2-5
69132-08J00	555A-16	94476-38C00	445A-4	96000-69491	126A-13
69133-16G00	555A-17		445A-6		486A-4
69134-16G00	555A-18		445B-4		
69141-40F00	555A-7		485B-8		
69150-04K00	555A-14	94479-15H00	485A-13		
69162-04F00	555A-9		485B-13		
69166-04F00	555A-11	94479-35F00	533A-8		
69200-04K00	555A-20		485A-14		
69211-04K00	555A-5		485A-15		
69260-04K00	555A-28		485B-16	01547-0916A	356A-20
69270-04K00	555A-29		485B-14	01547-0912A	352A-8
69400-04K00	555A-21		485B-15	01547-0916A	183A-16
69411-04K00	555A-32		485B-16	01547-0916A	533A-17
69600-34B10	555A-2	94480-04K00-YKV	485A-11-1	01547-0912A	312A-24
69600-47H10	555A-1		485B-11		533A-8
69665-47H00	555A-4	94480-04K00-YYG	485A-11-2		533A-10
69670-40A00	555A-6	94491-04K00	485A-17		533A-12
69672-00B20	555A-8		485B-17		556A-16
69674-00B20	555A-10	94510-04K00	481A-14		556A-30
69666-34Z00	555A-9	94520-04K00	485A-34	01547-0912B	462A-15
69669-04A00	555A-15		485B-34		536A-7
69669-40Z00	537A-12	94530-04K00	485A-35	01547-0916A	536A-10
69691-00A00	555A-3		485B-35	01547-0926A	116A-10
69692-44H00	555A-5	94540-04K00	485A-36		116A-18
69693-05A00	555A-7		485B-36		167A-7
69730-04K00	555A-17	94611-04K00	481A-10		167A-10
69740-44G00	555A-12	94631-04K00	485A-1		212A-33
		94632-04K00	485A-2	01547-0925A	116A-3
			485B-2		301A-19
		94640-04K00	481A-3	01547-0925B	467A-15
		94650-04K00	481A-5	01547-0935A	108A-10
		94670-04K00-PGZ	485A-19-1		108A-33
		94670-04K00-YVB	485A-19-2	01547-0935A	180A-12

90000

00000

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
01547-0640A	108A-5	485A-33	08322-0106B	474A-10	
	108A-9	485B-31	08331-31109	116A-23	
	108A-11	485B-32	08331-3114A	212A-26	
01547-0660A	108A-12	485B-33	08331-3118A	407A-10	
01547-0670A	108A-13	03541-0525A	155A-12	08332-1106A	415A-11
01547-0680A	108A-4	03541-0518B	330A-6	08351-3506A	301A-15
01550-0612A	103A-8	04111-2015A	415A-21		
	185A-6		555A-27	09100-06099	180A-9
	312A-11	04211-09129	112A-31	09100-06287	541A-19
	485A-37	04211-09148	112A-33	09103-06060	420A-18
	485B-37		112A-22	09103-06201	180A-8
	505A-7		112A-25	09103-06212	112A-14
	505A-15	04211-09188	112A-4	09103-06213	112A-8
	530A-9	04211-11169	103A-6		112A-27
01550-0612B	474A-5	04221-0408B	120A-3	09103-06214	112A-15
01550-0616B	541A-15		212A-7		112A-23
01550-0620A	116A-12		533A-15	09103-06215	112A-28
	360A-17	06111-0709A	415A-19	09103-06216	112A-32
01550-0650B	312A-21	07120-0612A	172A-17	09103-06223	201A-24
01550-0655A	312A-22	07120-0659A	103A-15	09103-06227	112A-33
02112-0510A	306A-3	07120-0855A	481A-19	09103-06236	205A-48
	306A-4	07120-0895A	106A-8	09103-06240	533A-14
02112-0525B	355A-5	07120-1030B	401A-4	09103-06261	112A-21
02112-0630A	355A-2	07130-0512A	530A-11	09103-06263	112A-34
02112-0650B	355A-3		555A-8	09103-06266	103A-2
02112-0616A	160A-6	07130-0612A	304A-5	09103-06359	108A-7
02122-0610B	103A-17	07130-0625A	127A-19	09103-06381	524A-18
02142-0510B	462A-18	07130-0912A	350A-22	09103-06464	163A-4
02142-0612A	330A-4	08211-06141	212A-16	09103-06502	108A-6
02142-1520A	445A-18	08211-10285	122A-11	09103-10189	122A-13
	445B-20	08211-20492	122A-12	09103-10205	108A-34
02182-0635A	312A-6	08310-00087	301A-14	09103-10366	407A-7
03211-0414B	334A-3	08310-0008A	201A-34	09103-10428	543A-19
	834A-7		212A-34	09103-10450	535A-12
	334A-13	08313-2008A	481A-25	09103-12005	304A-4
	334A-17	08316-1003A	334A-10	09106-05023	212A-37
03211-04163	339A-13		334A-19	09106-06075	108A-25
03511-0516A	155A-21		330A-18	09106-06078	163A-33
03541-0412A	165A-14	08316-1008A	163A-17	09106-06117	422A-3
	474A-2		312A-9		485A-22
03541-0416A	300A-10		595A-19		485B-22
03541-0512B	445A-27	08316-1008A	183A-19	09106-06122	304A-6
	445B-29		183A-28	09106-06124	530A-9
03541-0516A	330A-7		541A-20	09106-07050	102A-4
	339A-15	08319-2105A	467A-4	09106-06139	108A-3
	406A-6	08319-3105A	467A-12	09106-06160	530A-6
	474A-6	08319-3115A	407A-3	09106-06164	163A-21
	481A-9		530A-29	09106-06178	163A-5
03541-0516B	485A-31	08322-0104B	480A-11	09106-06181	415A-3
	485A-32	08322-0105A	555A-26	09106-06185	401A-6

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09106-08186	415A-22	485A-4		106A-17	
09106-08187	163A-22	485A-25		112A-7	
09106-10084	415A-7	485A-26		112A-16	
09106-10089	108A-36	485B-4		112A-29	
09106-10079	108A-37	485B-25		116A-4	
09111-09341	212A-15	485B-26	09168-09325	180A-3	
09111-09372	485A-5	481A-7	09168-09326	187A-12	
	541A-12	485A-19	09168-09316	106A-15	
09111-09385	187A-28	485B-21		106A-16	
09111-09389	155A-18	481A-12	09168-10022	106A-23	
09111-09397	460A-7	09159-06076	420A-20	116A-8	
	541A-14	09159-10115	108A-35	09168-12017	103A-19
09111-10029	407A-2		543A-18	09168-14052	106A-38
09116-06172	420A-12	09159-12066	543A-4		116A-6
09118-09397	185A-2		543A-7	09168-10032	106A-28
09119-06198	333A-11		543A-12	09169-05024	352A-3
09119-08100	332A-3	09159-20004	206A-46	09169-09371	330A-3
09125-09080	541A-6	09159-20006	541A-9	09169-09283	445A-22
09127-09018	462A-8	09159-24010	201A-13		445B-24
09128-09013	312A-4	09159-25003	560A-10	09180-09280	185A-1
09134-09015	201A-25	09160-04026	330A-9	09180-09331	312A-6
09135-09037	163A-9	09160-05048	481A-13	09180-09345	312A-20
09136-09062	333A-7	09160-05501	330A-14	09180-09356	462A-6
09136-09105	445A-23	09160-06088	533A-4	09180-09152	163A-7
	445B-25	09160-06109	350A-21		163A-24
09136-09147	212A-19	09160-06129	560A-11	09181-10158	116A-21
09139-09032	481A-11	09160-06131	462A-7	09181-12167	122A-4
09139-09094	485A-23	09160-06043	333A-12	09181-14167	212A-21
	485B-23	09160-06124	481A-16	09181-20251	206A-30
09139-09074	485A-3	09160-06603	163A-6	09181-21092	178A-7
	485A-24		163A-23	09181-22223	206A-31
	485B-3	09160-10020	201A-26	09181-23092	124A-5
	485B-24	09160-12037	543A-13	09181-25223	201A-18
09139-09028	556A-11	09160-14016	212A-20	09181-27014	206A-9
09139-09055-XC0	533A-3	09160-15045	201A-27	09200-09058	556A-25
09139-09124	163A-29	09160-18022	407A-9	09200-09052	415A-17
09139-09137	474A-9	09160-25066	201A-14	09206-09037	103A-3
09139-09158	474A-8	09160-25068	206A-46	09206-10016	102A-6
09139-09169	460A-3	09160-25070	560A-11	09206-12036	122A-2
09139-09190	460A-4	09160-25073	201A-1		122A-7
	481A-15	09160-27008	206A-29	09208-09016	415A-9
09139-09193	595A-5	09161-10009	530A-4	09208-09019	415A-8
09139-09239	422A-4		590A-24	09209-04038	460A-19
09139-09253	420A-18	09164-06008	180A-10	09241-29054	124A-6
09140-09025	212A-35	09184-12021	122A-5	09247-14036	116A-5
09140-09047	445A-29		122A-8	09248-10010	106A-28
	445A-28	09164-24008	201A-15		116A-7
	445B-22	09167-27003	206A-8	09248-14025	106A-38
	445B-39	09168-06023	103A-9	09248-16013	106A-27
09148-09052	330A-7		108A-14	09250-09028	524A-18

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09259-34621	112A-17	09265-39091	550A-17	09390-70001	206A-40
09261-04009	116A-22	09269-04032	126A-10	09401-04111	187A-22
09261-06003	206A-10	09320-04059	163A-30	09401-10409	187A-17
	206A-32	09320-09354	420A-14	09401-12404	598A-18
09262-22035	530A-3		445A-9	09401-12414	187A-15
09262-25006	212A-11		445B-9	09401-14101	155A-10
09262-28025	206A-33		485A-27		155A-27
09262-28052	520A-3		485B-27	09401-15101	155A-24
09262-32022	550A-16	09320-09028	333A-4	09401-15407	598A-19
09263-10014	201A-29		445A-17	09401-16407	155A-25
09263-12022	122A-3		445B-19		178A-6
09263-12027	201A-30		481A-17	09401-17201	189A-6
09263-14027	212A-22	09320-09088	163A-31	09402-35201	187A-4
09263-15003	201A-28	09320-09089	420A-17	09403-06324	536A-12
09263-17046	543A-15	09320-09351	312A-7	09403-07334	536A-13
09263-20070	541A-3	09320-09016	460A-5	09403-20307	420A-28
09263-20074	543A-9	09320-09038	333A-5	09404-06429	390A-26
09263-20087	206A-11	09320-09591	481A-18	09404-06433	420A-27
	206A-34	09320-10050	420A-13	09407-10404	334A-23
09263-22088	206A-36	09320-10051	185A-4	09407-11402	390A-27
09263-25018	212A-12	09320-10054	339A-5	09407-14403	390A-13
09263-26035	122A-10	09320-12048	163A-25	09407-14407	390A-10
09263-27013	541A-2	09320-12077	163A-8		390A-6
09263-35017	201A-2	09321-09013	481A-6	09407-14408	334A-22
09267-25013	255A-12		485A-28	09407-14413	312A-23
09267-30010	524A-3		485A-29	09407-17403	598A-31
	524A-11		485B-28	09407-18402	187A-27
09269-04004	103A-12		485B-29		390A-11
	108A-24	09321-09032	339A-18	09407-19401	185A-12
09269-08012	108A-30	09321-10011	535A-3		390A-12
09269-13004	116A-15	09329-10091	535A-2	09408-00286	533A-16
	116A-27	09329-19091	485A-39	09408-00309	142A-14
09269-17003	112A-10		485B-30	09408-00321	187A-24
09269-19008	116A-13	09352-12183-400	420A-26	09409-06314-5PK	185A-10
09269-20002	108A-22	09352-30823-400	420A-23		422A-6
09269-24003	301A-13	09355-30795-400	142A-11		481A-8
09269-26005	212A-38	09360-10082	536A-1		485A-5
09269-33004	112A-18		536A-2		485B-5
09269-48010	103A-15		536A-3	09409-06315	185A-11
09269-57003	406A-4		558A-23	09409-08308-02S	541A-16
09269-60005	178A-2	09362-09011	187A-13	09409-08326	422A-6
09269-85001	312A-16	09367-09027	420A-25	09409-10314	445A-10
09269-10012	201A-31	09360-27094	256A-14		445B-10
09269-26010	201A-32	09380-27096	256A-15	09440-05003	415A-18
09269-14009	212A-23		256A-16	09440-17009	212A-24
09269-28016	530A-4		206A-37	09443-06024	390A-15
09269-36008	206A-35		206A-38	09443-13032	407A-11
09264-37001	520A-4		206A-39	09443-14058	407A-4
09265-10004	201A-33	09381-16091	120A-12	09443-16011	407A-6
09265-20006	206A-13	09390-58091	206A-17	09444-20003	212A-25

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09448-14037	415A-19				
09462-00045	310A-4				
09471-12188	334A-4				
	334A-8				
	334A-14				
	334A-18				
09471-12188	333A-6				
09471-12216	339A-12				
09481-10594	350A-2				
09481-10594	350A-3				
09481-20594	350A-4				
09481-30591	312A-2				
09482-00555	103A-13-3				
09482-00556	103A-13-4				
09482-00557	103A-13-1				
09482-00558	103A-13-2				
09482-00559	103A-13-5				
09482-00560	103A-13-6				
09493-28012	106A-18				
09493-80095	103A-11				
09500-21055	406A-7				
09516-00059	406A-8				
09522-00055	406A-9				

SUZUKI GSX-S1000FAL6 PARTS CATALOGUE

SUZUKI MOTOR CORPORATION All rights reserved

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of Suzuki Motor Corporation.

SUZUKI MOTOR CORPORATION
Technical Readiness Group, Quality Administration Department
300 Takatsuka, Minami, Hamamatsu, Japan

Reprint Prohibited

SUZUKI MOTOR CORPORATION

PRINTED IN JAPAN

9900B-31130-000
